

INSTRUCTION MANUAL

- Please read these instructions carefully before using your Dirt Devil® Hand Vac.
- Let us help you put your cleaner together or answer any questions, call: **1-800-321-1134 (USA & Canada)** • website: **www.dirtdevil.com**

⚠ WARNING:
Cleaner assembly may include small parts. Small parts can present a choking hazard.

For quick reference, please record your vacuum information below.

Model #: _____
Mfg. Code: _____
(Mfg. code located on the lower backside of cleaner)

Part # 1-113561-000 • 11/07

MODE D'EMPLOI

- Veuillez lire attentivement ces instructions avant d'utiliser votre aspirateur à main Dirt Devil®.
- Nous pouvons vous aider à assembler cet appareil et répondre à vos questions, pour cela composez le : **1-800-321-1134 (Canada et États-Unis)** • site Web : **www.dirtdevil.com**

⚠ AVERTISSEMENT :
L'assemblage de l'appareil comprend des petites pièces. Ces dernières présentent un danger d'étouffement.

Consignez les renseignements ci-dessous pour pouvoir les consulter rapidement.
N° de modèle : _____
Code de fabrication : _____
(Le code de fabrication se trouve sur la partie inférieure arrière de l'aspirateur)

N° de référence 1-113561-000 • 11/07

MANUAL DE INSTRUCCIONES

- Por favor lea estas instrucciones con cuidado antes de usar su aspiradora manual Dirt Devil®.
- Permítanos ayudarle a ensamblar su aspiradora o a contestar sus preguntas, llame al: **1-800-321-1134 (EE.UU. y Canadá)** • Sitio Web: **www.dirtdevil.com**

⚠ ADVERTENCIA:
El ensamble de la aspiradora puede incluir partes pequeñas. Las partes pequeñas pueden presentar riesgo de ahogamiento.

Para tener una referencia rápida, anote por favor la información de su aspiradora aquí.
No. de Modelo: _____
Código de Fabricante: _____
(El código del fabricante aparece en la parte posterior e interior de la aspiradora).

No. de Parte 1-113561-000 • 11/07

THIS VACUUM IS INTENDED FOR HOUSEHOLD USE ONLY.

 
IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.
- ALWAYS FOLLOW THESE SAFETY INSTRUCTIONS.
- WARNING: THE CORDS, WIRES AND/OR CABLES SUPPLIED WITH THIS PRODUCT CONTAINS CHEMICALS, INCLUDING LEAD OR LEAD COMPOUNDS, KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USING.

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Warning: Do not use outdoors or on wet surfaces.
- Do not charge the unit outdoors.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center for inspection. Call 1-800-321-1134 for the nearest service center or visit our website at www.dirtdevil.com.
- Do not abuse the cord. Never carry the charger or base by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect. Keep cord away from heated surfaces. Do not pull cord around sharp edges or corners. Do not close door on the charger cord.
- Do not handle plug or appliance with wet hands.
- This product includes rechargeable nickel cadmium batteries. Do not incinerate batteries or expose to high temperatures, as they may explode.
- Unplug the charger from the outlet before any routine cleaning or maintenance.
- Do not put any object into openings.
- Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.
- Use only the charger supplied by the manufacturer to recharge.

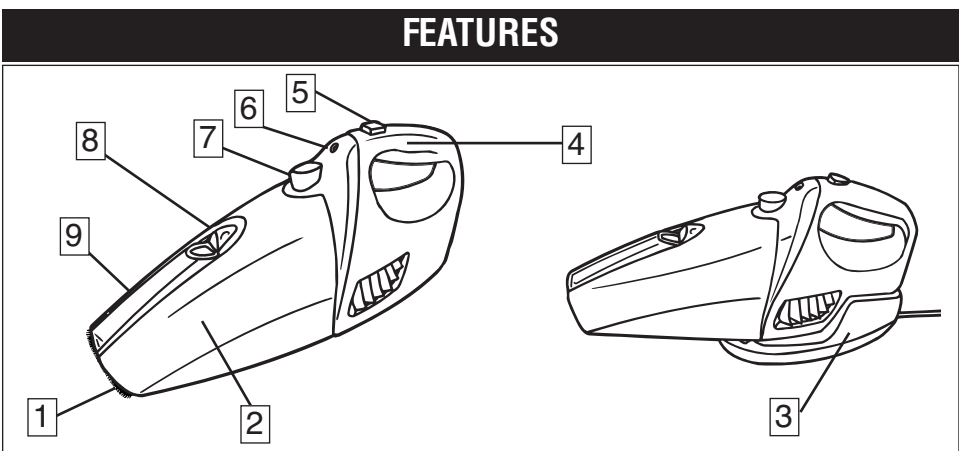

1. Retractable Bristles
 2. Dirt Cup
 3. Charging/Storage Base
 4. Handle
 5. On/Off Switch
 6. Charging Light*
 7. Dirt Cup Release Button
 8. Crevice Tool Release Button
 9. Crevice Tool
- * Charging light turns off when Hand Vac is fully charged.

STORAGE/CHARGING

TOOL REQUIRED: SCREWDRIVER AND DRILL

- A. CHARGING/STORAGE BASE**
- Designed to sit in the charging base on a flat surface (Diagram 1) or mount vertically (Diagram 2).
 - For tidy storage, wrap excess cord on the back of the charging base and exit at either side or out the bottom.

TO WALL MOUNT:

 
1. Place charging base against the mounting surface. Mark the centers of the holes.
2. Move base, then drill a 3/16" hole through the center of the marks.
3. Push plastic wall anchor into the drilled hole.
4. Be sure marked location is correct before drilling the second hole (adjust if necessary). Drill second hole and install other wall anchor.
5. Match up holes in storage base to wall anchors and insert screws. Be sure cord exits from one of the cord slots on the storage base.
6. Tighten the screws to hold the base flush to the mounting surface.

B. UNIT STORAGE


1. Hold the unit by the handle and push down firmly onto the charging base.
2. Be sure the red charging light is on.

C. CHARGING

- NOTE:** Use only the charger supplied by the manufacturer to recharge.
IMPORTANT: BEFORE FIRST USE, CHARGE YOUR UNIT FOR AT LEAST 6 HOURS.
- Power switch must be in the OFF position.
 - Keep the charger plugged into a standard outlet at all times. It is normal for the charger to become warm to the touch when charging.
 - If the operating time gets shorter after repeated use, let the unit run until it stops running. Recharge for 6 hours and repeat monthly for best results.
 - Charging light turns off when Hand Vac is fully charged.

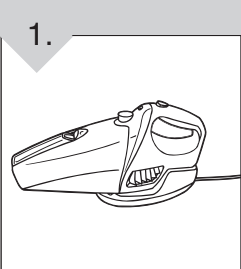

Sits on a flat surface.

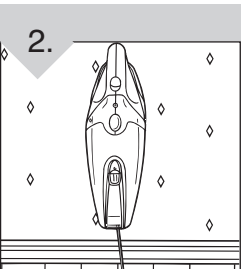 

Can easily be mounted on wall.

HOW TO USE

TO USE: Slide the power switch to the ON position.

 
TO TURN UNIT OFF: Slide the power switch to the OFF position.

- Empty and clean the unit and filter after each use or after large pickups when the unit becomes full.

ATTACHMENTS


The crevice tool is permanently stored on-board. It is located on the top of the dust cup for your convenience.

TO USE

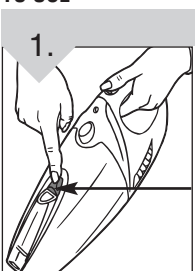


Press the crevice tool release button.

 TO STORE

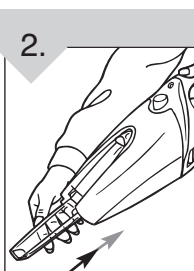


 Flip crevice tool down to line up with nozzle then press up until secure in place.

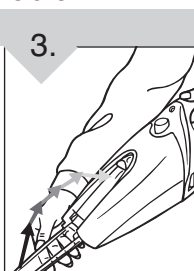

To store crevice tool: Pull down until loose. Flip crevice tool up towards unit and you feel it lock into place.

 RETRACTABLE BRISTLES

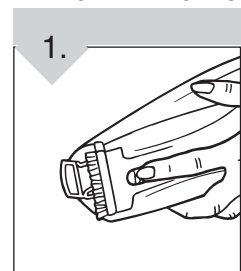


Ideal for cleaning delicate surfaces. **To use:** slide the switch underneath dirt container forward. Slide switch back to retract bristles.


DIRT CUP: REMOVAL & REPLACEMENT

WARNING: TO REDUCE THE RISK OF INJURY FROM MOVING PARTS - UNPLUG VACUUM BEFORE SERVICING OR CHANGING FILTER.

 
REGULAR MAINTENANCE: Each time the dirt cup is emptied, the filter should be cleaned. Tap the filter firmly against the inside of a trash can until the dirt stops falling from the filter. (Filter will be discolored after use. This will not affect the filter's performance.) Do not brush the filter. The cleaning instructions may vary depending on the dirt conditions. In some cases, more or less cleaning or the filter may be required.
IMPORTANT: DO NOT WASH FILTER.

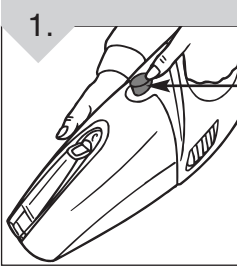

 
Depress the dirt cup release button and pull nozzle away from unit.

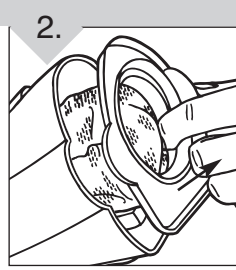

 
Hold nozzle over a wastebasket. Grasp filter and gently pull out.

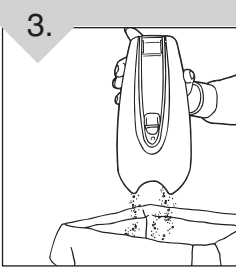

 Shake excess dirt and debris out of dirt cup. For best results, tap filter against wastebasket to remove remaining dirt.

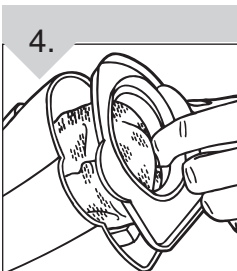

Gently push filter back into dirt cup.

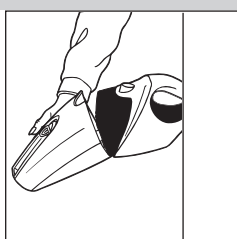 

To reattach dust cup: Align bottom first and rotate nozzle up, until it snaps into place.

BATTERY DISPOSAL

To preserve natural resources, please recycle or dispose of expired battery pack properly.



THIS PRODUCT CONTAINS NICKEL-CADMIUM BATTERY AND MUST BE DISPOSED OF PROPERLY. LOCAL, STATE OR FEDERAL LAWS MAY PROHIBIT DISPOSAL OF NICKEL-CADMIUM BATTERIES IN ORDINARY TRASH. CONSULT YOUR LOCAL WASTE AUTHORITY FOR INFORMATION REGARDING AVAILABLE RECYCLING AND/OR DISPOSAL OPTIONS. FOR DISPOSAL INFORMATION, CALL THE RECHARGEABLE BATTERY RECYCLING CORPORATION AT 1-800-8 BATTERY.

⚠ WARNING:

Upon removal, cover the battery packs terminals with heavy duty adhesive tape. Do not attempt to destroy or disassemble battery pack or remove any of its components. Nickel-cadmium batteries must be recycled or disposed of properly. Also, never touch both terminals with metal objects and/or body parts as short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire and/or serious injury.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE REASONS	POSSIBLE CAUSES
Cleaner won't run	<ol style="list-style-type: none"> 1. Battery not charged. 2. Contacts between battery and charger dirty. 3. Battery dead - won't hold a charge. 4. Needs service. 	<ol style="list-style-type: none"> 1. Charge battery. For first use, charge for at least 6 hours. Power switch must be in the "OFF" position when charging. 2. Wipe dirt from contacts. 3. Take to a Service Center or call 1-800-321-1134. 4. Take to Service Center or call 1-800-321-1134.
Cleaner won't pick up or low suction	<ol style="list-style-type: none"> 1. Battery charge is getting weak. 2. Dirt cup is full. 3. Filter cartridge is dirty. 	<ol style="list-style-type: none"> 1. Charge battery. 2. Empty dirt cup. 3. Clean or replace filter.
Dust escaping from cleaner	<ol style="list-style-type: none"> 1. Dirt cup is full. 2. Filter is dirty. 	<ol style="list-style-type: none"> 1. Empty dirt cup. 2. Clean or replace filter.

ANY OTHER SERVICING SHOULD BE DONE BY AN AUTHORIZED SERVICE REPRESENTATIVE CUSTOMER SERVICE (1-800-321-1134)

In the event that further assistance is required, see your Yellow Pages for an authorized Royal® Dealer. Costs of any transportation to and from any place of repair are to be paid by the owner. The service parts used in this unit are easily replaced and readily available from an authorized Royal® Dealer or retailer. Always identify your cleaner by the model number and manufacturing code when requesting information or ordering replacement parts. (The model number appears on the bottom of the cleaner.)

LIMITED WARRANTY

To the consumer, Royal Appliance Mfg. Co. warrants this vacuum cleaner to be free of defects in material or workmanship commencing upon the date of the original purchase. Refer to your vacuum cleaner carton for the length of warranty and save your original sales receipt to validate start of warranty period.

If the vacuum cleaner should become defective within the warranty period, we will repair or replace any defective parts free of charge. The complete machine must be delivered prepaid to any ROYAL Authorized Sales & Warranty Service Station. Please include complete description of the problem, day of purchase, copy of original sales receipt and your name, address and telephone number. If you are not near a Warranty Station, call the factory for assistance at USA: 1-800-321-1134 / CANADA: 1-800-321-1134. Use only genuine Royal® replacement parts.

The warranty does not include unusual wear, damage resulting from accident or unreasonable use of the vacuum cleaner. This warranty does not cover belts, brushes, bags, filters, bulbs or fan damage. This warranty does not cover unauthorized repairs. This warranty gives you specific legal rights and you may also have other rights. (Other rights may vary from state to state in the USA.)

FRANÇAIS

CET ASPIRATEUR EST CONÇU POUR UN USAGE DOMESTIQUE SEULEMENT.

CONSIGNES DE SÉCURITÉ IMPORTANTES VEUILLEZ CONSERVER CES INSTRUCTIONS

Lorsque vous utilisez un appareil électrique, vous devez toujours respecter certaines consignes de sécurité, dont les suivantes :

- LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER L'APPAREIL.
- RESPECTEZ TOUJOURS À LA LETTRE CES INSTRUCTIONS DE SÉCURITÉ.
- AVERTISSEMENT : LES CORDONS, FILS ÉLECTRIQUES ET/OU CÂBLE FOURNIS AVEC CE PRODUIT CONTIENNENT DES PRODUITS CHIMIQUES Y COMPRIS DU PLOMB OU DES COMPOSÉS DU PLOMB CONNU PAR L'ÉTAT DE CALIFORNIE POUR SON EFFET CANCÉRIGÈNE, POUVANT ENTRAÎNER DES MALFORMATIONS CONGÉNITALES ET ENDOMMAGER LES ORGANES DE REPRODUCTION. LAVEZ-VOUS LES MAINS APRÈS TOUTE UTILISATION.

AVERTISSEMENT : POUR RÉDUIRE LES RISQUES D'INCENDIE, DE DÉCHARGE ÉLECTRIQUE ET DE BLESSURE :

- Avertissement : N'utilisez pas l'appareil à l'extérieur ou sur des surfaces mouillées.
- Ne rechargez pas l'appareil à l'extérieur.
- Ne laissez pas les enfants jouer avec l'appareil. Exercez une surveillance étroite quand l'appareil est utilisé par les enfants ou à proximité de ceux-ci.
- Utilisez l'appareil en respectant à la lettre les consignes de ce manuel. Utilisez seulement les accessoires recommandés par le fabricant.

1. Poils escamotables
 2. Godet à poussière
 3. Base de chargement et de rangement
 4. Poignée
 5. Interrupteur marche/arrêt
 6. Voyant lumineux de chargement
 7. Bouton du godet à poussière
 8. Bouton de déclenchement du suceur plat
 9. Suceur plat
- * Le voyant de charge s'éteint lorsque l'aspirateur à main est complètement chargé.

RANGEMENT/CHARGEMENT

OUTIL NÉCESSAIRE : TOURNEVIS ET PERCEUSE

A. BASE DE CHARGEMENT/RANGEMENT

- Conçu pour être placé dans la base de chargement sur une surface plane (diagramme 1) ou pour une installation verticale (diagramme 2).
- Pour bien ranger l'appareil, enroulez le cordon à l'arrière de la base de chargement et faites-le ressortir d'un côté ou de l'autre ou par le dessous.

MONTAGE MURAL :

1. Placez la base de chargement contre la surface de montage. Marquez le centre des trous.
2. Retirez la base et percez un trou de 3/16 pouce au centre des marques.
3. Insérez des douilles d'ancrage de plastique dans les trous.
4. Assurez-vous que les emplacements marqués soient exacts avant de percer le second trou (procédez à des ajustements si nécessaire). Percez le second trou et installez la deuxième douille d'ancrage.

Il repose sur une surface plane.

5. Faites coïncider les trous de la base de rangement avec les douilles d'ancrage et insérez les vis. Assurez-vous que le cordon sorte par l'une des encoches de la base de rangement.
6. Serrez les vis afin que la base repose bien contre la surface de montage.

B. RANGEMENT DE L'APPAREIL

1. Tenez l'appareil par la poignée et poussez-le fermement vers le bas dans la base de chargement.
2. Veillez à ce que le voyant lumineux rouge soit allumé.

C. CHARGEMENT

REMARQUE : Pour recharger l'appareil, utilisez uniquement les chargeurs fournis par le fabricant.

IMPORTANT : AVANT DE L'UTILISER POUR LA PREMIÈRE FOIS, CHARGEZ VOTRE APPAREIL PENDANT AU MOINS 6 HEURES.

- L'interrupteur doit être en position ARRÊT.
 - Laissez le chargeur branché à une prise standard en permanence. Il est normal que le chargeur chauffe pendant le chargement.
 - Si la durée de fonctionnement raccourcit après un usage répété, laissez l'appareil en marche jusqu'à ce qu'il s'arrête de lui-même. Rechargez-le ensuite pendant 6 heures et répétez la procédure tous les mois pour obtenir de meilleurs résultats.
 - Le voyant de charge s'éteint lorsque l'aspirateur à main est complètement chargé.
- Il peut être posé verticalement ou au mur.

COMMENT UTILISER L'APPAREIL

UTILISATION : Faites glisser l'interrupteur en position MARCHÉ.

POUR ÉTEINDRE L'APPAREIL : Faites glisser l'interrupteur en position ARRÊT.

- Videz et nettoyez l'appareil et le filtre après chaque utilisation ou lorsque l'appareil est plein, après avoir aspiré de grandes quantités de poussière.

