



LiNX™ CORDLESS STICK VAC LiNX™ CORDLESS ASPIRATEUR VERTICAL LiNX™ CORDLESS BARREDORA DE SUCCIÓN



OWNER'S MANUAL

GUIDE D'UTILISATION • MANUAL DEL USUARIO

Operating and Servicing Instructions

Please read these instructions carefully before using your HOOVER® Stick Vac.

Be sure to register your product online at Hoover.com or call 1-800-944-9200 to register by phone.


Instructions d'Utilisation et d'Entretien

Veillez lire attentivement ces instructions avant d'utiliser votre aspirateur vertical HOOVER®. N'oubliez pas d'enregistrer votre produit en ligne, à l'adresse Hoover.com, ou par téléphone, au 1-800-944-9200.

Instrucciones de Funcionamiento y Mantenimiento

Lea atentamente estas instrucciones antes de usar su Barredora de succión HOOVER®. Inscriba su producto en línea en Hoover.com, o llame al 1-800-944-9200 si prefiere hacerlo por teléfono.

©2010 Techtronic Floor Care Technology Limited. All Rights Reserved. Tous droits réservés. Todos los derechos reservados. #960009636 ID100858-R2

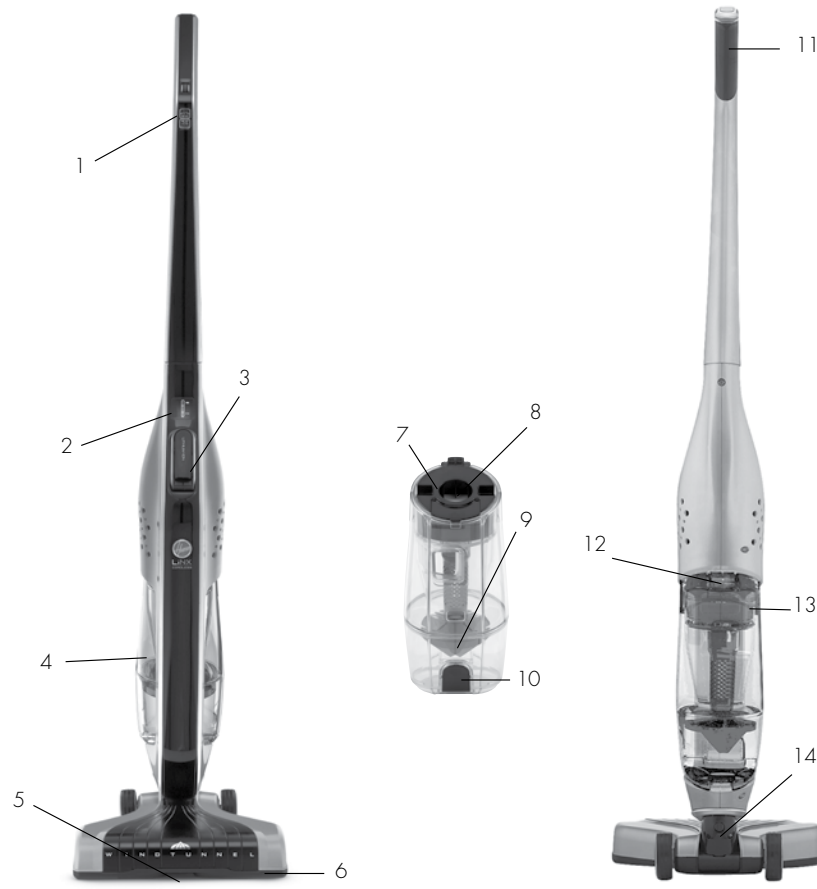

- FRONT: 1. On/Off Switch, 2. Fuel Gauge, 3. Battery Cavity, 4. Dirt Cup, 5. Large Debris Opening, 6. Bottom Nozzle Cover. DIRT CUP AND FILTER: 7. Filter Cap, 8. Filter, 9. Baffle Tube, 10. Bottom Empty Release Button. BACK: 11. Handle, 12. Dirt Cup Release Button, 13. Carry Handle, 14. Nozzle Release Button.

If you need assistance: Visit our website at Hoover.com. Follow the authorized dealer locator link to find the Hoover authorized dealer nearest you or call 1-800-944-9200 for an automated referral of Hoover authorized dealer locations (U.S. only) or to speak with a customer service representative, Mon-Fri 8am-7pm EST.

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

2. HOW TO OPERATE

Assembly

Assembly steps 2.1-2.3: 2.1 Nozzle Release Button, 2.2 Insert handle into body, 2.3 Insert screw and tighten until secure.

Assembly steps 2.4-2.6: 2.4 Charge battery fully before first use, 2.5 Insert charged battery into battery cavity, 2.6 Hold down nozzle with foot and tilt back to reclining position.

Assembly steps 2.7-2.8: 2.7 To turn vacuum on, roll button forward, 2.8 To remove and charge battery, turn switch to off position.

Dirt Cup & Filter Removal & Replacement

IMPORTANT: For best results, clean after each use. REGULAR MAINTENANCE: Each time the dirt cup is emptied, the filter should be cleaned (Filter will be discolored after use. This will not affect the filter's performance.)

Dirt Cup Removal and Cleaning

Steps 3.1-3.3: 3.1 To Remove dirt cup, depress the dirt cup release button, 3.2 Press dirt cup empty button over trash can, 3.3 To clean dirt cup, use a soft brush.

Dirt Cup Debris and Clog Removal

In order to maintain optimum performance of your cleaner, each time the dirt cup is removed for emptying it is recommended to check if there is any debris trapped in the dirt tube (A). If so, remove the debris before re-attaching the dirt cup to the cleaner.

If you still are experiencing reduced suction/performance, detach the nozzle base from the main unit (press button on back of nozzle to release, B) and inspect both openings of the nozzle base (C) for any trapped debris. Remove any debris that may be present before re-attaching the nozzle base to the main body of the cleaner.

Filter Removal and Cleaning

Steps 3.4-3.7: 3.4 To clean dirt cup, use a soft brush, 3.5 To clean dirt cup, use a soft brush, 3.6 Pull out filter cap, 3.7 Pull out filter and brush clean.

WARNING: Always dry filter for 24 hours before replacing. WARNING: Do not use detergent or hot water to clean filter.

For filter replacement, please call 1-800-944-9200 or visit our website at www.hoover.com to locate a dealer nearest you. Filter Service Part # 410044001.

Dirt Cup and Filter Replacement

Steps 3.8-3.10: 3.8 Insert filter cap, 3.9 Insert filter cap into dirt cup, 3.10 Place bottom of dirt cup onto housing.

Baffle Tube Removal and Replacement

Steps 3.11-3.13: 3.11 Turn baffle tube counter clockwise, 3.12 Turn baffle tube clockwise until it stops, 3.13 To replace baffle tube, insert back into dirt cup.

Belt and Brushroll Replacement

Steps 3.14: 3.14 Remove battery before servicing. Turn vacuum nozzle over. Remove screws indicated by arrows on bottom nozzle plate.

For belt replacement, please call 1-800-944-9200 or visit our website at www.hoover.com to locate a dealer nearest you. Belt Service Part # 001942002

Lithium-ion Batteries: The battery must be collected, recycled or disposed of in an environmentally sound manner. The EPA certified RBRC Battery Recycling Seal on the lithium-ion (Li-ion) battery indicates Techtronic Industries, a corporate affiliate of Hoover, Inc., is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life.

Service: ANY SERVICING SHOULD BE DONE BY AN AUTHORIZED SERVICE REPRESENTATIVE. Call 1-800-944-9200 USA & Canada. In the event that further assistance is required, see your Yellow Pages for an authorized HOOVER® Dealer or visit www.hoover.com.

5. TROUBLESHOOTING

If a minor problem develops, it usually can be remedied quite easily when the cause is identified by using the checklist below.

Any other servicing should be done by an authorized service representative. WARNING: To reduce risk of personal injury - unplug vacuum before servicing.

Table with 3 columns: PROBLEM, POSSIBLE REASON, POSSIBLE SOLUTION. Rows include issues like 'Product does not turn on', 'Product turns off while in use', 'Product does not pick up dirt', and 'Brushroll will not turn'.

Limited TWO Year Warranty (Domestic Use). WHAT THIS WARRANTY COVERS: When used and maintained in normal household use and in accordance with the Owner's Manual, your HOOVER® product is warranted against original defects in material and workmanship for a full two years from date of purchase.

HOW TO MAKE A WARRANTY CLAIM: If this product is not as warranted, take or send the product to a Hoover® Authorized Warranty Service Dealer along with proof of purchase. WHAT THIS WARRANTY DOES NOT COVER: This Warranty does not cover use of the product in a commercial operation (such as maid, janitorial and equipment rental services).

FRANÇAIS

CET ASPIRATEUR A ÉTÉ CONÇU POUR USAGE DOMESTIQUE SEULEMENT. CONSIGNES DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT: L'ASSEMBLAGE DE L'APPAREIL COMPREND DES PETITES PIÈCES. CES DERNIÈRES PRÉSENTENT UN DANGER D'ÉTOUFFEMENT. Pendant l'utilisation d'un appareil électrique, toujours prendre des précautions élémentaires, notamment: LIRE TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL. TOUJOURS SUIVRE CES CONSIGNES DE SÉCURITÉ.

AVERTISSEMENT: AFIN DE RÉDUIRE LES RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE OU DE BLESSURES:

- Ne pas utiliser l'appareil, ranger le chargeur ou recharger la pile à l'extérieur ou sur une surface mouillée. Garder au sec. Ne pas permettre que l'appareil soit utilisé comme un jouet. Être particulièrement vigilant lorsque l'appareil est utilisé par des enfants ou à proximité d'enfants.

4. BATTERY FUEL GAUGE, DISPOSAL & SERVICE

Battery Fuel Gauge: Battery Capacity Indicator Information

All three LEDs will momentarily light when the product's power switch is turned on. Then the Battery Fuel Gauge will indicate the pack's remaining capacity as noted below. NOTE: Unit and lights will turn off when battery is fully discharged.

Battery Disposal: WARNING: RISK OF EXPLOSION OR EXPOSURE TO TOXIC MATERIAL. CAUTION: The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above manufacturer's maximum temperature limit (60°C/140°F), or incinerate.

THIS VACUUM IS INTENDED FOR HOUSEHOLD USE ONLY. IMPORTANT SAFETY INSTRUCTIONS

WARNING: CLEANER ASSEMBLY MAY INCLUDE SMALL PARTS. SMALL PARTS CAN PRESENT A CHOKING HAZARD. When using an electrical appliance, basic precautions should always be followed, including the following: READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE. ALWAYS FOLLOW THESE SAFETY INSTRUCTIONS. SEE SEPARATE MANUAL PERTAINING TO BATTERY AND CHARGING OPERATION.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use the unit, store, or charge battery outdoors or on wet surfaces. Do not allow to get wet. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Use only as described in this manual. Use only manufacturer's recommended attachments.

SAVE THESE INSTRUCTIONS



