

LITTLE GREEN PROHEAT<sup>®</sup>  
**USER GUIDE**



50Y6 SERIES

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING YOUR PORTABLE DEEP CLEANER.

When using an electrical appliance, basic precautions should be observed, including the following:

### **⚠️ WARNING**

#### **TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:**

- » Use only BISSELL cleaning products intended for use in this machine to prevent internal component damage. See the Cleaning fluid section of this guide.
  - » Connect to a properly grounded outlet only. See grounding instructions. Do not modify the 3-prong grounded plug.
  - » Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
  - » Do not expose to rain. Store indoors.
  - » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
  - » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
  - » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
  - » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
  - » Do not handle plug or appliance with wet hands.
  - » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
  - » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
  - » Turn off all controls before plugging or unplugging appliance.
  - » Use extra care when cleaning on stairs.
  - » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
  - » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
  - » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
  - » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
  - » Keep appliance on a level surface.
  - » Do not carry the appliance while in use.

## SAVE THESE INSTRUCTIONS FOR FUTURE USE

 
This model is for household use only. Commercial use of this unit voids the manufacturer's warranty.

### **⚠️ WARNING**

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

#### **GROUNDING INSTRUCTIONS**

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

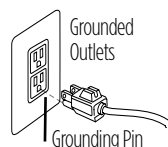


# Thanks for buying a BISSELL portable deep cleaner

We're glad you purchased a BISSELL Little Green PROHeat™ deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL Little Green PROHeat deep cleaner is well made, and we back it with a limited one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL Little Green PROHeat deep cleaner.

 
Thanks again, from all of us at BISSELL.



Mark J. Bissell  
Chairman & CEO

Safety Instructions . . . . .	2
Product View . . . . .	4
Assembly . . . . .	5
Operations . . . . .	6-8
Maintenance & Care . . . . .	8
Troubleshooting . . . . .	9
Accessories . . . . .	10
Warranty . . . . .	11
Consumer Care . . . . .	11
Product Registration . . . . .	12

# Product View

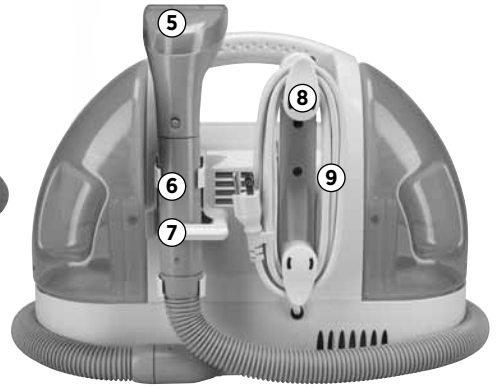 

- 1 Clean Water/Solution Tank
- 2 Power/Heater Switch
- 3 Dirty Water/Collection Tank
- 4 Flex Hose Clip
- 5 Tough Stain Brush Tool

- 6 Flex Hose with Spray Trigger
- 7 Flex Hose Storage Bracket
- 8 Quick Release™ Cord Wrap
- 9 Power Cord

## Cleaning fluid

Keep plenty of genuine BISSELL 2X Cleaning Formula on hand so you can clean whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the warranty.



BISSELL 2X Spot & Stain Portable Machine Formula for Carpet Spot & Stain Cleaning



BISSELL 2X Pet Stain & Odor Portable Machine Formula for Carpet Spot & Stain Cleaning

### **⚠️ WARNING**

Use only BISSELL 2X compact formulas in your cleaner. Use of cleaning formulas which contain lemon or pine oil may damage this appliance and void the warranty. Chemical spot cleaners or solvent-based soil removers also should not be used. These products may react with the plastic materials used in your cleaner, causing cracking or pitting.

### **⚠️ WARNING**

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

# Assembly

Assembling your Little Green PROheat is a simple process. The only thing you will need to assemble your cleaner is a Phillips-head screwdriver.

1. Slide the back plate of the flex hose clip into the opening on the front of the unit. You will hear a “snap” when it is locked in place.
2. Take the flex hose storage bracket and slide the lower plate into the opening on the back of unit. Make sure the screw holes line up.
3. Insert screw and tighten with a screwdriver.
4. Wrap the flex hose around unit and place hose grip into bracket. Turn bracket latch clockwise to lock in place.

1.



2.



3.



4.



## **WARNING**

Do not plug in your portable deep cleaner until you are familiar with all instructions and operating procedures.

# Operations

## Getting ready

1. To fill the clean water/solution tank.

a. Remove the tank by lifting it straight up and then away from the unit.

b. Unscrew the black cap at the bottom of the clean/solution tank.

c. Using a standard liquid measuring cup (or cap on BISSELL 2X Portable cleaning formula), measure 4oz. of formula (2 caps full) and pour into tank. Then fill with hot tap water to the WATER fill line. Replace and tighten the black cap. **DO NOT BOIL OR MICROWAVE WATER.**


d. Replace the clean/solution tank by lining up the vertical guides on the left side of the unit with the indentations on the clean/solution tank and gently sliding it down into position.

2. Unwrap vacuum flex hose completely from onboard hose storage.

3. Attach your selected cleaning tool to the spray trigger unit by pressing tool onto spray trigger firmly until the button lock snaps into hole. Make certain the tool is securely attached.

4. Twist the quick release cord wrap clockwise to unwrap the power cord.

 5. Plug into proper outlet.

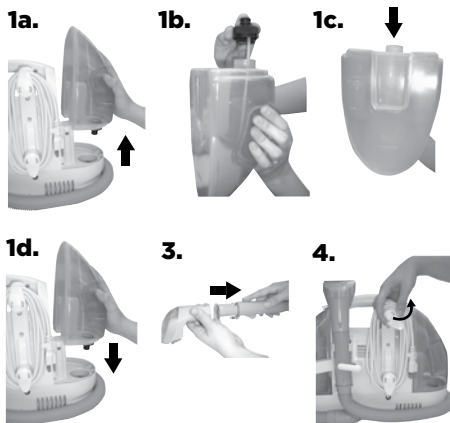

## Pre-treating

Cleaning effectiveness will be enhanced if you pre-treat heavily stained or highly-soiled areas. Here's how to do it:

1. Hold the cleaning tool just above the surface of the carpet or upholstery to be cleaned. Press the trigger to release a spray of cleaning solution directly onto the soiled area.

2. Wait 3-5 minutes before cleaning.

# Operations

## Cleaning with your Little Green PROheat

1. Turn the power/heater to the ON position. Wait 30 seconds before use to allow the heater to reach the proper temperature.
2. Hold the tool approximately 1" above the soiled surface. Press the spray trigger to apply the cleaning solution to the soiled area. Raise the tool slightly to check for spray. When using the Deep Reach Tool (select models), keep the tool in contact with the carpet while spraying.
3. Using the brush on the tool, gently scrub the area to be cleaned.
4. For thorough cleaning, spray additional solution while the brush and suction are in contact with the surface.
5. Apply downward pressure on the tool and pull it toward you. The suction will remove the dirt and cleaning solution. Continue until no more dirt can be removed.
6. As a final step, use "drying strokes" (by not pressing the spray trigger) to remove as much liquid/moisture as possible. Repeat this step as often as necessary.

## **WARNING**

Keep spray away from face. Failure to do so may result in personal injury.

Power/Heater Switch



 
## **IMPORTANT**

Check the manufacturer's tag before cleaning upholstery. "W" or "WS" on the tag means you can use your Little Green ProHeat. If tag is coded with an "S" (with diagonal strike-through), or says "Dry Clean Only," do not proceed. If manufacturer's tag is missing or not coded, check with your furniture dealer.

## Deep Reach tool attachment

### select models only

1. Follow instructions 1-5 on page 6 "Getting ready".
2. Set tool on stain and press the trigger to spray solution onto the area to be cleaned.
3. Slowly move the tool back and forth over the soiled surface, keeping the tool in contact with the carpet.
4. Release trigger and move tool slowly over the soiled area to suction up water and dirt.
5. Continue to clean the area, working in small sections, until no more dirt can be removed.
6. Remove tool from hose when finished. Clean under warm water before storing.

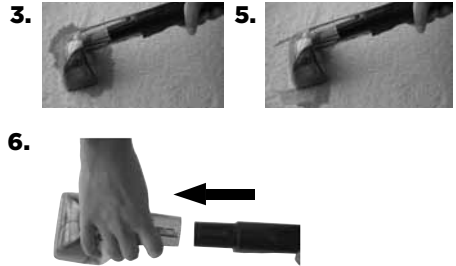

## TIPS

- » Deep cleaning stairs and high-traffic areas on a regular basis helps prolong carpet life.
- » Check upholstery stuffing before cleaning. Colored stuffing may bleed through the fabric when it becomes wet.

- » If a significant amount of water and solution remains in the clean tank, your unit can be stored with liquid in the clean tank.

# Maintenance & Care

## After Cleaning

1. Turn power switch to OFF position.
2. Unplug power cord from outlet.
3. Empty and rinse the dirty/collection tank after each use, OR when dirty water reaches the indicated maximum fill line. To remove the tank, lift up the dirty/collection Tank retainer lever and remove the tank from the unit.
4. Carry the dirty/collection tank to a toilet or sink to empty.
5. Rinse tank thoroughly.
6. Disconnect the cleaning tool from the spray trigger by pushing down on button lock and pulling straight off (DO NOT twist tools to remove them).
7. Once removed from the spray trigger, all tools can be cleaned by rinsing under clean running water.
8. Check spray nozzle for accumulated dirt or debris. If necessary, clean with soft bristle brush.

## WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.



## Machine storage

1. Wipe all surfaces with a soft cloth.
2. Wrap power cord around the cord wrap on the back of the Little Green PROheat.
3. Wrap flex hose around the base of the unit and secure the spray trigger.
4. Store unit in protected, dry area, at room temperature (40° to 110°F).



# Troubleshooting

## **WARNING**

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

<b>Problem</b>	<b>Possible causes</b>	<b>Remedies</b>
<b>Reduced spray or no spray</b>	Spray nozzle clogged	Clean spray nozzle
	Clean water/solution tank empty	Check/refill tank
	Clean water/solution tank insert clogged	Clean insert at bottom of clean water/solution tank
	Pump needs priming	Gently lift clean water/solution tank while depressing the spray trigger OR gently squeeze clean tank while depressing spray trigger
<b>Deep cleaner won't pick up cleaning solution</b>	Tank release latch is not closed properly	Lift up the tank release latch and press down firmly to make sure it is in place
	Poor tool position	Reposition tool on surface, follow recommended cleaning procedures
	Dirty water/collection tank is full	Empty dirty water/collection tank
	Tool brush worn	Replace with new brush
	Excess solution in vacuum flex hose	Lift tool and point upwards to allow water in hose to flow into the dirty water/collection tank
	Incorrect Cleaning Formula	Use BISSELL 2X compact formulas only

**Please do not return this product to the store.**





Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

**For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.**








# Replacement Parts

These items are available for your BISELL Little Green PROheat portable deep cleaner. Call 1-800-237-7691 or visit [www.BISELL.com](http://www.BISELL.com)

PART #	PART NAME		PART #	PART NAME	
203-5008	Clean Water/Solution Tank (includes cap & insert assembly)		203-5009	Collection/Dirty Water Tank (includes the airstack & float assembly)	
203-5014	Cap & Insert Assembly		203-5013	Flex Hose Clip	

# Accessories

These items are available for your BISELL Little Green PROheat portable deep cleaner. Call 1-800-237-7691 or visit [www.BISELL.com](http://www.BISELL.com)

PART #	PART NAME		PART #	PART NAME	
203-6868	4" Upholstery/Carpet Tool		203-6654	6" Upholstery/Carpet Tool	
203-6872	Spraying Crevice Tool - Dusk		314-9162	3" Tough Stain Tool- Dusk	
203-6652	TurboBrush® Tool - Dusk		203-7569	Deep Reach® Tool	
203-5012	Tool Clip				

## CLEANING FORMULAS

79B9	BISELL 2X Spot & Stain Formula 32 oz.		79B9-1	BISELL 2X Spot & Stain Formula 16 oz.	
74R7	BISELL 2X Pet Stain & Odor Formula 32 oz.		74R7-1	BISELL 2X Pet Stain & Odor Formula 16 oz.	

# Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

## Limited One-Year Warranty

Subject to the \*EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

**Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.**

## \*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

**NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.**

# Service

## If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

## Website or E-mail:

[www.BISSELL.com](http://www.BISSELL.com)

## Or Call:

BISSELL Consumer Care  
1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

## Or Write:

BISSELL Homecare, Inc.  
PO Box 3606  
Grand Rapids, MI 49501  
ATTN: Consumer Care

# Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

## You'll receive:

### **BISSELL Rewards Points**

Automatically earn points for discounts and free shipping on future purchases.

### **Faster Service**

Supplying your information now saves you time should you need to contact us with questions regarding your product.

### **Product Support Reminders and Alerts**

We'll contact you with any important product maintenance reminders and alerts.

### **Special Promotions**

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

**Visit [www.BISSELL.com/registration](http://www.BISSELL.com/registration) now!**

## BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

### **Call:**

**BISSELL Consumer Care**  
1-800-237-7691

Monday - Friday      8 am - 10 pm ET  
Saturday                9 am - 8 pm ET  
Sunday                    10am - 7pm ET

### **Write:**

**BISSELL Homecare, Inc.**  
PO Box 3606  
Grand Rapids MI 49501  
ATTN: Consumer Care

**Visit the BISSELL website: [www.BISSELL.com](http://www.BISSELL.com)**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: \_\_\_\_\_

Please record your Purchase Date: \_\_\_\_\_

**NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.**

*We can't wait to hear from you!*

Rate this product and let us (and millions of your closest friends) know what you think!

**[www.BISSELL.com](http://www.BISSELL.com)**



©2013 BISSELL Homecare, Inc.  
Grand Rapids, Michigan  
All rights reserved. Printed in China  
Part Number 160-1754 Rev 06/13  
Visit our website at: [www.BISSELL.com](http://www.BISSELL.com)