

Hoover SteamVac™ cleans carpet fibers by applying, scrubbing and removing hot tap water and cleaning solution.

Le SteamVac^{MC} de Hoover^{MD} nettoie en profondeur les fibres de tapis en appliquant et en aspirant de l'eau chaude du robinet et une solution nettoyante et grâce à son action de frottage.

HOOVER SALES & SERVICE CENTERS CENTRES DE VENTE ET DE SERVICE HOOVER

ALABAMA

Pinebrook Shpg. Ctr. 3980B Airport Blvd. Mobile, AL 36608 (251) 341-0304 (251) 341-0395 fax

ARIZONA

3434 West Bell Rd. Phoeniz, AZ 85053 (602) 439-2751 (602) 564-0938 fax

4881 E. Speedway Blvd. Tucson, AZ 85712 (520) 795-5612 (520) 322-6016 fax

Mesa Shores Shpg Ctr. 2136 East Baseline Rd. Suite B-1 Mesa, AZ 85204 (480) 633-0622 (480) 633-0626 fax

CALIFORNIA

Sycamore Plaza 1047 N. State College Blvd. Anaheim, CA 92806 (714) 635-5710 (714) 635-8432 fax

Burlingame Plaza Shpg.Ctr. 1803A El Camino Real Burlingame, CA 94010 (650) 652-7810 (650) 652-7811 fax

1660 Contra Costa Blvd. Suite C Pleasant Hill, CA 94523 (925) 674-1206 (925) 674-1304 fax

West Gate Shpg. Ctr. 17498 Hawthorne Blvd. Torrance, CA 90504 (310) 921-6523 (310) 921-6533 fax

1834 Fulton Ave. Sacramento, CA 95825 (916) 481-4860 (916) 481-1528 fax

3628 Geary Blvd. San Franciso, CA 94118 (415) 668-5101 (415) 668-5976 fax

Greenhouse Market Place 699 Lewelling Blvd, Ste182 San Leandro, CA 94579 (510) 346-2400 (510) 346-2402 fax

6487 N. Blackstone Ave. Fresno, CA 93710 (559) 449-8258 (559) 449-0302 fax

230 S. Lake Ave., #2 Pasadena, CA 91101 (626) 229-0636 (626) 229-0638 fax

19030 Ventura Blvd. Tarzana, CA 91356 (818) 345-7637/7827 (818) 609-1246 fax

1287 Morena Blvd San Diego, CA 92110 (619) 276-9560 (619) 276-4359 fax

COLORADO

Academy Pl. Shpg. Ctr. 5142 N. Academy Blvd. Colorado Springs, CO 80918 (719) 260-9988 (719) 260-8353 fax

Monaco Village Shpg. Ctr. 2200 S. Monaco Pkwy. Denver. CO 80222 (303) 757-4904 (303) 757-2723 fax

303 E. Altamonte Dr, Ste 1100 Altamonte Springs, FL 32701 (407) 831-1444 (407) 831-5444 fax

102 S. Flamingo Rd. Pembroke Pines, FL 33027 (954) 432-0031 (954) 432-6350 fax

GEORGIA

3655 Roswell Rd. NE, Ste 126 Buckhead, GA 30342 (404) 814-1574 (404) 814-1035 fax

1064 Old Peachtree Rd. Ste 102 Lawrenceville, GA 30043 (678) 442-9907 (678) 442-9947 fax

2960 Shallowford Rd. #200 Marietta, GA 30066 (678) 560-0066 (678) 560-0068 fax

10779 Alpharetta Hwy. Suite 170 Roswell, GA 30076 (770) 649-0425 (770) 649-0704 fax

IDAHO

520 S. Meridan Rd, Ste. 150 Meridian, ID 83642 (208) 855-4775 (208) 855-4776 fax

ILLINOIS

Winston Plaza Shpg. Ctr. 1372 Winston Plaza Melrose Park, IL 60160 (708) 344-3800 (708) 344-3853 fax

Yorkshire Plaza 4328 East New York Street Aurora, IL 60504 (630) 499-5728 (630) 499-5816 fax

IOWA

3001-100th St. Urbandale, IA 50322 (515) 331-0550 (515) 331-0545 fax

KENTUCKY

4131 Shelbyville Rd. Louisville, KY 40207 (502) 895-4775 (502) 895-9874 fax

MARYLAND Belair Beltway Plaza 7632 Belair Rd. Baltimore, MD 21236 (410) 668-8100 (410) 668-9228 fax

The Festival at Muddy Branch 305 Muddy Branch Rd. Gaithersburg, MD 20878 (301) 948-0864 (301) 948-0866 fax

MICHIGAN

Evergreen Plaza Shpg. Ctr. 19799 West 12 Mile Rd. Southfield, MI 48076 (248) 552-6253 (248) 552-6256 fax

St. Louis Park, MN 55426 (952) 935-0091 (952) 935-0462 fax

Falcon Crossing Shpg. Ctr. 1539 W. Larpenteur Ave. St. Paul, MN 55113 (651) 644-8684 (651) 644-6621 fax

MISSOURI

201 East Gregory Kansas City, MO 64114 (816) 333-7440 (816) 333-3184 fax

18931 Valley View Pkwy. Independence, MO 64055 (816) 795-5303 (816) 795-5759 fax

NEBRASKA

Plaza II Shpg. Ctr. 2449 S. 120th Street Omaha, NE 68144 (402) 330-2290 (402) 330-7675 fax

NEVADA

Eastern Beltway Shpg. Ctr. 2050 East Serence Ave. Suite 620-3 Las Vegas, NV 89123 (702) 614-0777 (702) 614-0787 fax

7920 W. Tropical Parkway Suite 110 Las Vegas, NV 89149 (702) 645-4320 (702) 645-7518 fax

NEW MEXICO

Fiesta Crossings 4770 Montgomery VC NE Suite A-103 Albuquerque, NM 87109 (505) 883-0800 (505) 883-4970 fax

NEW YORK

Sheridan Centre 3312 Sheridan Drive Amherst, NY 14226 (716) 831-0153 (716) 833-2423 fax

Kohl's Shopping Plaza 3523A Hempstead Turnpike Levittown, NY 11756 (516) 520-1233 (516) 520-1293 fax

1577 Ridge Rd. West Rochester, NY 14615 (585) 865-7190 (585) 865-7214 fax

Northern Lights Shpg. Ctr. 320 Northern Lights Plaza No. Syracuse, NY 13212 (315) 454-4682 (315) 454-4782 fax

NORTH CAROLINA

Four Seasons Plaza 6449 Albemarle Rd. Charlotte, NC 28212 (704) 568-0371 (704) 568-4283 fax

OHIO

MINNESOTA

Knollwood Village Shpg. Ctr. Canton, OH 44718
8922 Highway 7

(330) 491-0086 (330) 491-0140 fax

> Cross Pointe Shpg. Ctr. 109 101 E. Alex-Bell Rd Centerville, OH 45459 (937) 291-3560 (937) 291-0076 fax

Civic Center Plaza 2256 Waycross Rd Forest Park, OH 45240 (513) 522-7575 (513) 522-7580 fax

Shoppes of Kenwood II 7714 B Montgomery Rd. Cincinnati, OH 45236 (513) 791-7930 (513) 791-7934 fax

5160 Great Northern Plaza North Olmsted, OH 44070 (440) 734-2755 (440) 734-2799 fax

Cranston Center 5831 Sawmill Rd. Columbus, OH 43017 (614) 760-9399 (614) 760-9331 fax

104 Boardman-Poland Rd. Youngstown, OH 44512 (330) 758-1828 (330) 758-1332 fax

3109 West Market Street Fairlawn, OH 44333 (330) 864-6700 (330) 864-6702 fax

OKLAHOMA

3710 NW 50th St Oklahoma City, OK 73112 (405) 947-4436 (405) 947-0886 fax

OREGON

4130 SW Lombard Ave. Ste 110 Beaverton, OR 97005 (503) 574-2696 (503) 574-2762 fax

PENNSYLVANIA

Great Southern Shpg. Ctr. 1155 Washington Pike Bridgeville, PA 15017 (412) 221-4568 (412) 221-0145 fax

Lincoln Court Shpg. Ctr. 245 Lancaster Pike Frazer, PA 19355 (610) 651-0570 (610) 651-0572 fax

TENNESSEE

2200 N. Germantown Pky. Ste. 7 Cordova, TN 38016 (901) 266-0333 (901) 266-0811 fax

Market Place Shpg. Ctr. 9309A Kingston Pike Knoxville, TN 37922 (865) 690-0785 (865) 694-9985 fax

The Maples Shpg. Ctr. 1010 Murfreesboro Rd. Suite 126 Franklin, TN 37064 (615) 599-2949

(615) 599-9663 fax

13536 Preston Rd, Ste 100 Dallas, TX 75240 (972) 503-9494 (972) 503-9496 fax

S. Frisco Village Shpg Ctr 2930 Preston Rd. Frisco, TX 75034 (469) 633-0555 (469) 633-0745 fax

Westhill Village Shpg. Ctr. 7613 Westheimer Houston, TX 77063 (713) 334-0199 (713) 334-1341 fax

N. Towne Plaza Shpg. Ctr. 6900 San Pedro, Suite 137 San Antonio, TX 78216 (210) 829-1906 (210) 805-0612 fax

19507 I-45. Suite #900 Cypresswood Ct Spring, TX 77388 (281) 288-5803 (281) 288-5876 fax

1823 West Bay Area Blvd. Webster, TX 77598 (281) 338-2830 (281) 338-2835 fax

1491 Lee Trevino, Ste D El Paso, TX 79936 (915) 598-8633 (915) 598-8610

UTAH

6935 Park Centre Drive Salt Lake City, UT 84121 (801) 304-0516 (801) 304-0546 fax

VIRGINIA

Tuckernuck Sq. Shpg. Ctr. 9018 W. Broad Street Richmond, VA 23294 (804) 747-8249 (804) 747-3395 fax

WASHINGTON

837 NE Northgate Way Seattle, WA 98125 (206) 367-4425 (206) 367-0632 fax

North 2911 Monroe Spokane, WA 99205 (509) 328-9514 (509) 328-9562 fax

WEST VIRGINIA

35 Riverwalk Plaza S. Charleston, WV 25303 (304) 744-4748 (304) 744-4779 fax

WISCONSIN

Stein Mart Plaza 2791 South Oneida St. Ashwaubenon, WI 54304 (920) 494-9441 (920) 494-5059 fax

Midvale Plaza 505 S. Midvale Blvd. Madison, WI 53711 (608) 238-3470 (608) 238-0120 fax

10244 W. National Ave. West Allis, WI 53227 (414) 327-7430 (414) 327-9875 fax

Lakeside Marketplace 11211 120th Ave. Suite D-067 Pleasant Prairie, WI 53142 (262) 857-3176 (262) 857-6815 fax

CANADA

Hoover Canada 9012 L'Acadie Blvd. Montreal, Quebec H4N 2Y8 (514) 384-8030 (514) 384-5940 fax

Hoover Canada 4151 North Service Rd. Burlington, Ontario L7R 4A8 (905) 335-3311 (905) 335-3320 fax

Important Safeguards!

When using an electrical appliance, always follow basic precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING APPLIANCE.

WARNING:

To reduce the risk of fire, electric shock, or injury:

- Use only on surfaces moistened by the cleaning process. Do not immerse product.
- Connect to a properly grounded outlet only. See "Grounding Instructions".
- Do not clean over floor electrical outlets.
- Do not use without tanks in place.
- Use extra care when cleaning on stairs.
- Use carpet cleaner only for its intended use as described in the instructions.
- Use only attachments recommended by Hoover; others may cause hazards.
- The use of an extension cord is not recommended. If an extension cord is absolutely necessary, use at least a 16 gauge 3-wire cord which has a 3-prong grounding type plug and a 3-pole receptacle that accepts the machine plug.
- Disconnect from electrical outlet when not in use. Turn off all controls before unplugging.
- Do not leave appliance when plugged in.
- Always disconnect cord from electrical outlet before servicing the carpet cleaner.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Never handle plug or appliance with wet hands.
- Do not pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a Hoover Sales and Service Center or Authorized

Hoover Warranty Service Dealer.


- Close supervision is necessary when any appliance is used by or near children. Do not allow carpet cleaner to be used as a toy or to run unattended at any time.
- Do not point tools toward people or pets.
- Use only commercially available Hoover SteamVac $^{\text{TM}}$ cleaners intended for machine application. Do not use any type of wax with carpet cleaner.
- Keep detergents and other cleaners out of children's reach.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not pick up chlorine bleach, drain cleaner, gasoline or any other toxic material with this appliance.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Avoid picking up hard, sharp objects with the carpet cleaner. They may damage the machine.
- Keep hair, loose clothing, fingers, feet and all parts of body away from openings and moving parts.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- To help prevent matting and resoiling, avoid contact with carpets until they are dry. Keep children and pets away from carpets until they are completely dry.
- Store in a dry place indoors. Do not expose machine to rain or to freezing temperatures.

WARNING:

This product contains chemicals known to the State of California to cause cancer. WASH HANDS AFTER HANDLING.

Save these instructions!


Grounding Instructions

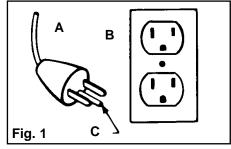

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor (C) and grounding plug (A). The plug must be plugged into an appropriate outlet (B) that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER-

Improper connection of the equipment-grounding conductor can result in the risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug (A) illustrated in sketch (Fig. 1).

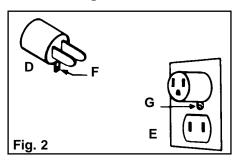

A temporary adapter (D) may be used to connect this plug to a 2-pole receptacle (E) if a properly grounded outlet is not available (Fig. 2). The temporary adapter should be used only until a properly grounded outlet (B) can be installed by a qualified electrician (Fig. 1). The green colored rigid ear, lug, or the like (F) extending from the adapter must be connected to a permanent ground (G) such as a properly grounded outlet box cover (Fig. 2). Whenever the adapter is used, it must be held in place by a metal screw. NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

To contact us:

- www.hoover.com
 In Canada www.hoover.ca
- 1-800-944-9200 automated service dealer locator
- 1-330-499-9499 our Consumer Response Center (8 AM to 5 PM Monday - Friday)

Fill in and Save

For your records, enter the model number in the space provided. This number is located on the data label on the back of the carpet cleaner.

Model No.

Save your sales receipt and attach it to this manual. Proof of date of purchase may be required for warranty service of your cleaner.


Contents

Important safeguards3
Carton contents 4
Cleaner description 5
Carpet cleaner basics 6
Filling the tank 6
Emptying the recovery tank . 7
Using the tool8
Using the hose
Attaching & removing tool 8
Storing hose & tool 8
Cleaning carpet 9
Cleaning upholstery 10
Routine care11
Lubrication
Service
Troubleshooting13
Warranty




Carton Contents

- A. Carpet cleaner
- B. Stair/upholstery nozzle
- C. Hoover Detergent
- D. Spot and Stain Spray
 Cleaner (available at
 additional cost if not
 included with your model)

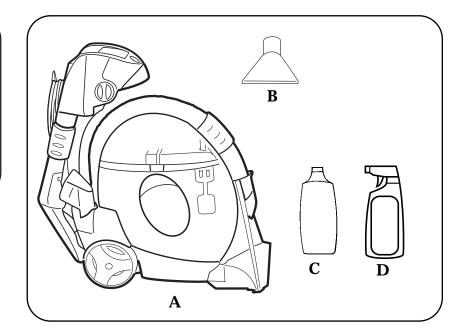



© 2006 The Hoover Company www.hoover.com www.hoover.ca

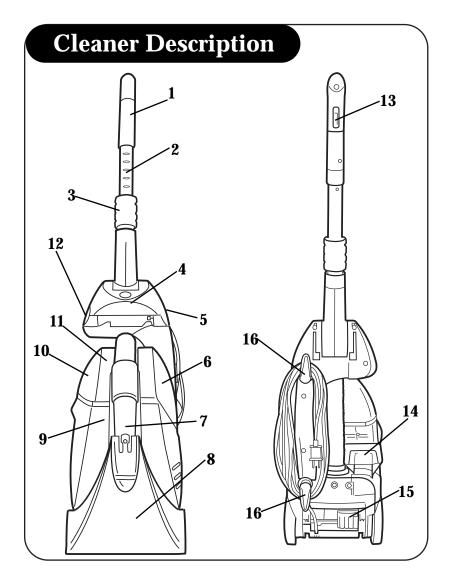

Features


- Hand grip
- Telescoping handle
- 3. Telescoping handle collar
- Carry handle
- ON/OFF switch 5.
- **Solution tank**
- **Tool connector/Hose**
- Nozzle
- 9. Recovery tank
- 10. Recovery tank lid
- 11. Float indicator window
- 12. Upper handle release button
- **13. Solution trigger:** press to release cleaning solution
- 14. Stair/upholstery nozzle15. Handle release pedal
- 16. Cord hooks

This carpet cleaner is intended for household use.


Operate carpet cleaner only at voltage specified on data plate on back of cleaner. Plug carpet cleaner into a properly grounded outlet.

Your HOOVER SteamVacTM SpotTM carpet cleaner is <u>fully assembled</u> and ready to begin cleaning!

Unfold handle

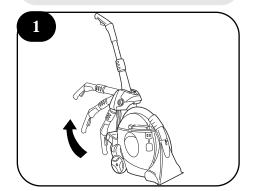


Raise handle from storage position until it locks in place.

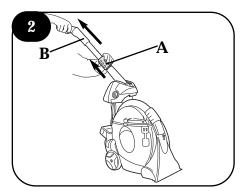



Slide collar (A) up on telescoping handle (B) to adjust handle to desired height.


How to fold handle

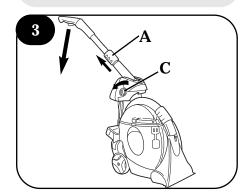


Push up on the collar (A) to lower the telescoping handle. Rotate knob (C) backwards to drop the handle into storage position. Continued →

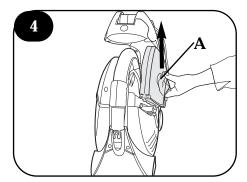

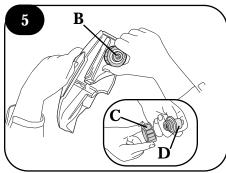


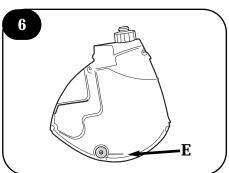

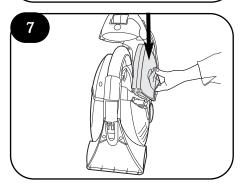

Carpet Cleaner Basics

Fill the solution tank

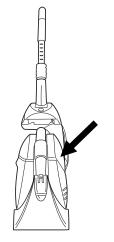

Unplug carpet cleaner from electrical outlet.

- ✓ Pull up on solution tank handle (A) and remove solution tank (Fig. 4)
- ✓ Turn tank upside down and unscrew cap (B) (Fig. 5). The cap consists of 2 pieces -the cap ring (C) and the solution tank valve (D).
- ✓ Pour detergent into tank to detergent fill line (E) (Fig. 6).
- ✓ Fill tank completely with hot tap water.

NOTE: For best results, use only Hoover detergents. They are specifically formulated for use with your SteamVacTM SpotTM carpet cleaner.

- ✓ Replace cap. Be sure the valve (D) is in the cap ring (C) before screwing the cap back on the tank (Fig. 5).
- ✓ Place tank back onto cleaner (Fig. 7), pressing firmly to be sure tank is fully positioned.

Caution: Detergents contain Anionic and Nonionic Surfactants. Avoid contact with the eyes and skin. In case of contact with eyes, flush with cold water for 15 minutes. In case of contact with skin, wash with water. If irritation persists, call a physician.

Empty the recovery tank

Unplug carpet cleaner from electrical outlet.


✓ An automatic shut-off device prevents the carpet cleaner from picking up more dirty water than it can hold in the recovery tank.


You will know the tank needs to be emptied --


- When the motor sound rises in pitch.
- You do not see dirty solution coming up through the recovery tank lid.
- The float (A) inside the recovery tank has risen to the top of the tank (Fig. 8), and is visible through the lid window (B).
- ✓ Step on handle release pedal (C) to lower handle and unlock the recovery tank (Fig. 9).
- ✓ Lift up on tank (D) and pull off (Fig. 10).
- ✓ Lift up on tank lid latches (E) and remove the tank lid (F), including the float (G) (Fig. 11). Empty tank.
- ✓ Replace lid. Secure both latches (E) (Fig. 11).


For full suction, it is important that the recovery tank lid is properly secured before replacing or operating.


- ✓ Remove any debris that has collected on lint filter (H) on cleaner body (Fig. 12 and inset).
- ✓ Place tank onto cleaner. Return handle to upright position.

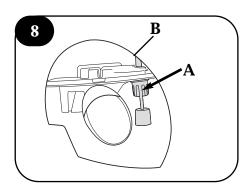


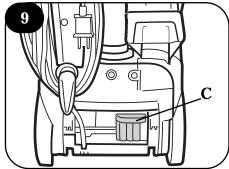


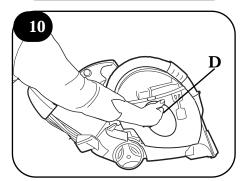


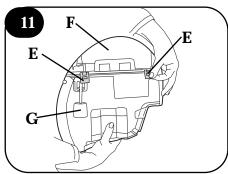


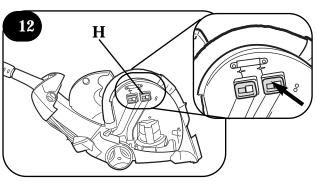


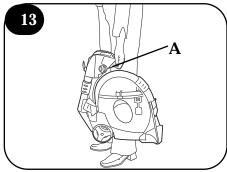


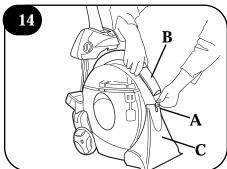

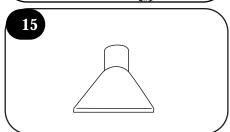

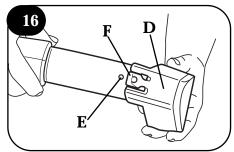

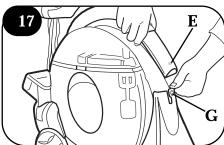

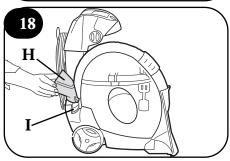

Transporting

✓ Your carpet cleaner may be transported easily by the convenient carrying handle (A) (Fig. 13).

Using the hose and tool

Using the hose

- ✓ Place handle in upright, storage position.
- ✓ Press on the tab (A) to remove the hose wand (B) from the floor nozzle (C) (Fig. 14).

Attach tool

Stair/upholstery nozzle has a built-in brush to help provide the scrubbing action some spots may need for removal (Fig. 15).

✓ Slide tool (D) onto end of hose wand. Snap tool over bump (E) on wand (Fig 16).

Remove tool

✓ To remove tool: Push forward and up on tab (F) (Fig. 16). Slide tool off hose wand.

Store hose and tool

✓ To return hose wand to storage position, align bump (E) on wand with hole (G) in nozzle and push in firmly until you hear a snap (Fig. 17).

Note: Hose wand must be returned to floor nozzle storage position in order for cleaner to be used in the upright position for floor cleaning.

✓ Store upholstery nozzle (H) over projection (I) on back of cleaner for storage (Fig. 18).

Cleaning carpet


- Remove lightweight furniture (tables, lamps, etc.) from area to be cleaned. Protect any remaining furniture by pinning up furniture skirts and placing aluminum foil or plastic under legs.
- **2 Vacuum carpet thoroughly** to remove loose dirt, hair, lint and other debris (Fig. 19).
- Test detergent for colorfastness on a hidden area of carpet.
 Wet a white cloth or paper towel with some detergent. Gently rub onto a hidden area of carpet. Wait ten minutes. Blot with white cloth or paper towel and check for color transfer.
- **Pretreat spots, stains and high traffic areas** with HOOVER Spot and Stain Spray (Fig. 20). Spray spot or area with Spot and Stain Spray. Then proceed with the next cleaning steps.
- Fill solution tank with hot tap water and proper amount of HOOVER detergent (see page 5) (Fig. 21).
 Use only HOOVER brand detergents in your carpet cleaner. Other brands may damage the carpet cleaner.
- **6** Plan your cleaning to avoid walking on wet carpet. Start at the end of the room farthest from the exit and work in small sections (Fig. 22).
- Raise handle from storage position until it locks in place. Slide collar (A) on telescoping handle (B) to adjust handle to desired height. (Fig. 23). Step on handle release pedal and lower handle. Turn cleaner ON.
- 8 Squeeze and hold trigger (A) to release cleaning solution (Fig. 24). Push cleaner forward SLOWLY then pull it back SLOWLY.
- **9** Let go of trigger and push carpet cleaner over same area to pick up dirty solution without putting down more solution. Continue using dry strokes until you see only a little solution coming up through the nozzle (front of extractor) or recovery tank lid.
- **10 Do not make the carpet too wet!** Use no more than two sets of forward and backward strokes while releasing solution. Always follow with dry strokes the more the better.
- Listen carefully! When the motor sound changes (rises in pitch), the recovery tank needs to be emptied. When water has reached the maximum capacity in the recovery tank, the float will rise to the top of the tank and the cleaner will NOT pick up dirty solution.
- Allow carpet to dry. Avoid walking on the carpet until it is dry.
 Increased air circulation (open doors, turn on fans, etc.) will help carpet dry thoroughly to prevent the growth of mold or mildew.
- Vacuum thoroughly after carpet has dried. This will reduce any shading left by the carpet cleaner's brushes.


No cleaning solution removes all stains from all carpets. Stain removal varies with the type of spill, time passed before removal, carpet material, and carpet type.








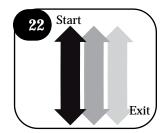

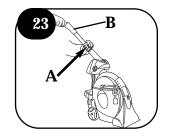

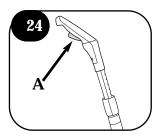



Cleaning upholstery

Check fabric cleaning code (Fig. 25). Look on the furniture manufacturer's tag for a 'W' or 'WS' code. These codes indicate that it is alright to use your carpet cleaner to clean the upholstery.


Do not use the carpet cleaner on upholstery marked 'S', 'X' or 'Dry Clean Only'.



Vacuum upholstery thoroughly with your vacuum cleaner's attachments.

Test detergent for colorfastness on a hidden area of upholstery.


Wet a white cloth or paper towel with some detergent. Gently rub onto a hidden area of upholstery. Wait ten minutes. Blot with white cloth or paper towel and check for color transfer.

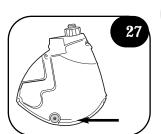

Pretreat spots and stains with HOOVER Spot and Stain Spray (Fig. 26). Spray spot or area with Spot and Stain Spray. Then proceed with the next cleaning steps.

Fill solution tank with hot tap water and proper amount of HOOVER detergent (see page 5) (Fig. 27).


Use only HOOVER brand detergents in your carpet cleaner. Other brands may damage the carpet cleaner.

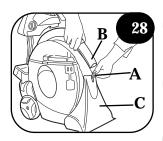

Place handle in upright, storage position. Press on the tab (A) to remove the hose wand (B) from the floor nozzle (C) (Fig. 28).


Slide tool (D) onto end of hose wand. Snap tool over bump (E) on wand (Fig 29).

8 Plug extractor into a properly grounded and turn extractor ON.

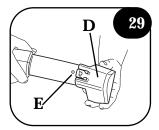

9 Squeeze and hold trigger (A) to release cleaning solution. Gently press tool into fabric and slowly pull the tool over the fabric (Fig. 30).

Let go of trigger and pull tool over same area to pick up dirty solution without putting down more solution. Continue using dry strokes until you see only a little solution coming up through the tool.

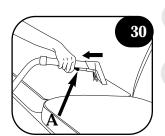

11 Do not make the upholstery too wet! Use no more than two strokes while releasing solution. Always follow with dry strokes - the more the better.

12 Listen carefully! When the motor sound changes (rises in pitch), the recovery tank need to be emptied.

When water has reached the full line in the recovery tank, the cleaner will NOT pick up dirty solution.

Allow upholstery to dry. Avoid using upholstery until it is dry.

Increased air circulation (open doors, turn on fans, etc.) will help upholstery dry thoroughly to prevent the growth of mold or mildew.

Routine care for your carpet cleaner

Clean the nozzle

Unplug carpet cleaner from electrical outlet.


➤ Wipe debris off nozzle and front of cleaner with a damp cloth (Fig. 31).

31 A

Clean the brushes


Unplug carpet cleaner from electrical outlet.


- ➤ Remove solution and recovery tanks to prevent possible leaks.
- ➤ Tilt cleaner back so handle rests on the floor (Fig. 32).
- ➤ Remove any carpet fibers or strings that may be attached to the brushes (Fig. 33).

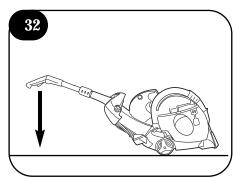

Storing your carpet cleaner

- ✓ Empty solution tank and rinse thoroughly.
- ✓ Place empty solution tank on carpet cleaner. Turn carpet cleaner ON. Squeeze trigger and push carpet cleaner forward and back several times, using the cleaner to pick up the remaining liquid. This will clear any solution remaining inside the cleaner.
- ✓ Empty recovery tank, rinse thoroughly and let air dry.
- ✓ Allow brushes and underside of carpet cleaner to air dry thoroughly before storing carpet cleaner on a carpeted or wood surface.
- ✓ Push up on the collar (A) and lower the telescoping handle. Rotate knob (B) backwards to drop the upper handle into storage position (Fig. 34).

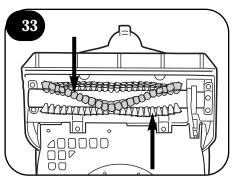

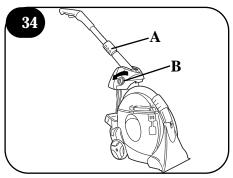

Lubrication

The motor is equipped with bearings which contain sufficient lubrication for the life of the motor. The addition of lubricant could cause damage. **Do not add lubricant to motor bearings.**

Service

To obtain approved HOOVER service and genuine HOOVER parts, locate the nearest Hoover Sales and Service Center or Authorized Hoover Warranty Service Dealer (Depot) by:

- ✓ Checking the Service Section of Hoover on-line at <u>www.hoover.com</u> OR
- ✓ Checking the list of Sales and Service Centers provided with this cleaner OR
- ✓ Checking the Yellow Pages under "Vacuum Cleaners Household" OR
- ✓ Calling 1-800-944-9200 for an automated referral of authorized service outlet locations (U.S. only)

Do not send your cleaner to Hoover in North Canton, Ohio for service; this will only result in delay.

If further assistance is needed, contact the Hoover Consumer Response Center, Phone: 330-499-9499.

In Canada, contact Hoover Canada, Burlington, Ontario L7R 4A8, Phone: 1-800-263-6376.

Always identify your cleaner by the complete model number when requesting information or ordering parts. (The model number appears on the back of the cleaner.)

Troubleshooting

Use the list below to help solve minor problems.

What's the problem?	What to do
Carpet cleaner won't run	✓ Make sure the carpet cleaner is plugged in firmly.✓ Check the fuse or breaker.
Low suction during floor cleaning	 ✓ Empty the recovery tank; it may be full and the automatic shut-off engaged. ✓ Make sure recovery tank and lid are properly installed and securely latched. ✓ Hose/tool wand is securely in position in the floor nozzle. ✓ Check lint filter (Fig. 12) and remove any debris.
Cleaning solution won't dispense	✓ Make sure solution tank is fully inserted and securely in place.✓ Refill the solution tank if it is empty.
Brushes won't rotate	 ✓ Handle is not fully in the operating position. (Brushes operate only with the handle in upright, floor cleaning position.) ✓ Circuit breaker tripped. Turn unit off and unplug. Check for obstructions in the agitator brush roll (Fig. 33). Wait for one minute; turn the carpet cleaner on and continue cleaning.
Low suction in hose during tool use	 ✓ Make sure tool is securely attached to tool connector. ✓ Make sure handle is in upright, storage position. ✓ Empty the recovery tank; it may be full and the automatic shut-off engaged. ✓ Make sure recovery tank and lid are properly installed and securely latched. ✓ Check lint filter (Fig. 12) and

Full One Year Warranty

(Domestic Use)
Your HOOVER® appliance is warranted in normal household use, in accordance with the Owner's Manual against original defects in material and workmanship for a period of one full year from date of purchase. This warranty provides, at no cost to you, all labor and parts to place this appliance in correct operating condition during the warranted period. This warranty applies when the appliance is purchased in the United States including its territories and possessions, or in Canada or from a U. S. Military Exchange. Appliances purchased elsewhere are covered by a limited one year warranty which covers the cost of parts only. This warranty does not apply if the appliance is used in a commercial or rental application.

This warranty only applies when the product is in use in the country or territory in which it is purchased.

Warranty service can only be obtained by presenting the appliance to one of the following authorized warranty service outlets. Proof of purchase will be required before service is rendered.

- 1. Hoover Sales and Service Centers.
- 2. Hoover Authorized Warranty Service Dealers (Depots).

For an automated referral of authorized service outlets in the U.S.A., phone 1-800-944-9200 OR visit Hoover on-line at www.hoover.com

This warranty does not cover pick up delivery, or house calls; however, if you mail your appliance to a Hoover Sales and Service Center for warranty service, transportation will be paid one way.

While this warranty gives you specific legal rights, you may also have other rights which vary from state to

If further assistance is needed, or if there are questions concerning this warranty or the availability of warranty service outlets, phone the Consumer Response Center, Phone 1-330-499-9499.

In Canada, contact Hoover Canada, Burlington, Ontario L7R 4A8, 1-800-263-6376.