


HOOVER®

ENGLISH → pp. 1-17
ESPAÑOL → pág. 18-28
FRANÇAIS → p. 29-39

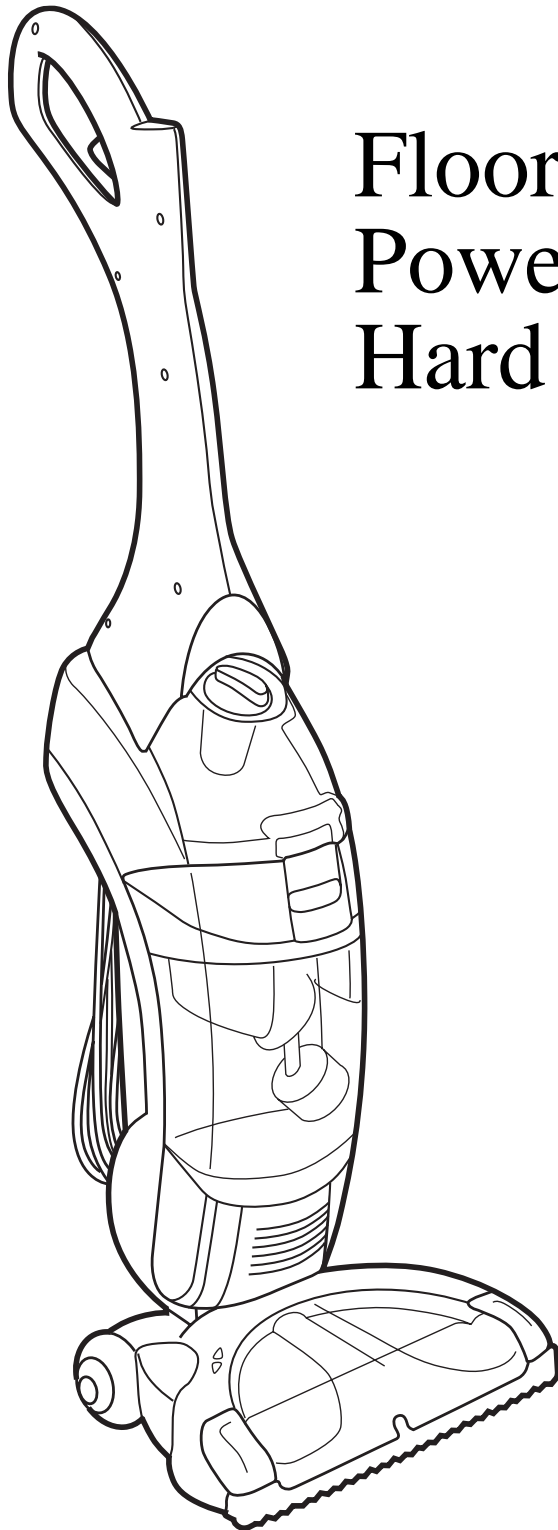

FloorMate™ PowerBrush 300 Hard Floor Cleaner



Important Safeguards!

When using an electrical appliance, always follow basic precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING APPLIANCE.

WARNING:

To reduce the risk of fire, electric shock, or injury:


- Use indoors only.
- Use only on surfaces moistened by the cleaning process or small spills. Do not immerse product.
- For use on bare floors or sealed wood floors. NOT for use on carpets.
- Always install float before any wet pick up operation.
- Close supervision is necessary when any appliance is used by or near children. Do not allow cleaner to be used as a toy or to run unattended at any time.
- Keep hair, loose clothing, fingers, feet and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up or use flammable or combustible materials such as gasoline or fine wood sandings or use in areas where they may be present.
- Avoid picking up hard, sharp objects with the cleaner. They may damage the machine.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Always disconnect cord from electrical outlet before servicing the cleaner.
- Unplug cleaner when not in use. Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Never handle plug or appliance with wet hands.

- Connect to a properly grounded outlet only. See "Grounding Instructions".
- Do not clean over floor electrical outlets.
- Do not use without tanks in place.
- Use extra care when cleaning on stairs. Do not place cleaner on stairs.
- The use of an extension cord is not recommended. If an extension cord is absolutely necessary, use at least a 16 gauge 3-wire cord which has a 3-prong grounding type plug and a 3-pole receptacle that accepts the machine plug.
- Keep detergents and other cleaners out of children's reach.
- Do not pick up chlorine bleach, drain cleaner, gasoline or any other toxic material with this appliance.
- When using recommended chemicals with this machine, be certain area is well ventilated.
- Follow manufacturer's instructions for all chemicals used with this machine. Do not exceed recommended mixing ratios.
- Store in a dry place. Do not expose machine to freezing temperatures.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a Hoover Factory Service Center or Authorized Hoover Warranty Service Dealer.
- Use cleaner only for its intended use as described in the instructions.

WARNING:

This product contains chemicals known to the State of California to cause cancer. **WASH HANDS AFTER HANDLING.**


Grounding Instructions

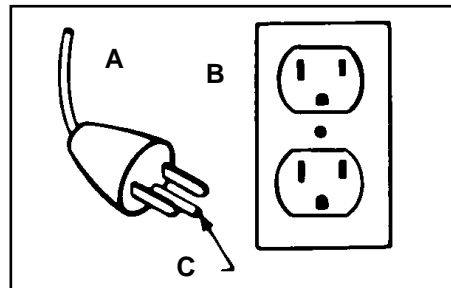

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electrical current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor (C) and grounding plug (A). The plug must be plugged into an appropriate outlet (B) that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER-

Improper connection of the equipment-grounding conductor can result in the risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120 volt circuit and has a grounding plug that looks like the plug illustrated in sketch (A).

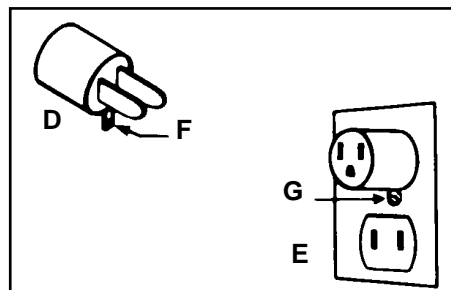

A temporary adapter (D) may be used to connect this plug to a 2-pole receptacle (E) if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (B) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like (F) extending from the adapter must be connected to a permanent ground (G) such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw. **NOTE:** In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

Save these instructions!

To contact us:

- www.hoover.com
- 1-800-944-9200 - automated service dealer locator
- 1-330-499-9499 - our Consumer Response Center (8 AM to 5 PM Monday - Friday)

Fill in and Save

For your records, enter the model number and serial numbers in the spaces provided. These numbers are located on the data label on the back of the cleaner body.

Model No. _____

Serial No. _____


Save your sales receipt and attach it to this manual. Proof of date of purchase may be required for warranty service of your cleaner.

Contents


Important safeguards	2
Carton contents	3
Cleaner description	4
Assembly	
Handle assembly.....	5
Install nozzle	5
General operation	
Mode selector.....	7
Solution tank	8-9
Recovery tank	10
Automatic shut-off	10
To clean filters	10-11
How to clean	
Recommended cleaning sequence.....	11
Cleaning floors	12
Picking up spills	12
Storage.....	13
Maintenance	
Cleaning the nozzle	13
Replacing agitator brushes .	14
Troubleshooting.....	15
Service.....	16
Warranty	17
Parts & accessories mail order form.....	41

Carton Contents

- A. Hard floor cleaner
- B. Upper handle
- C. Nozzle
- D. Floor cleaning concentrate

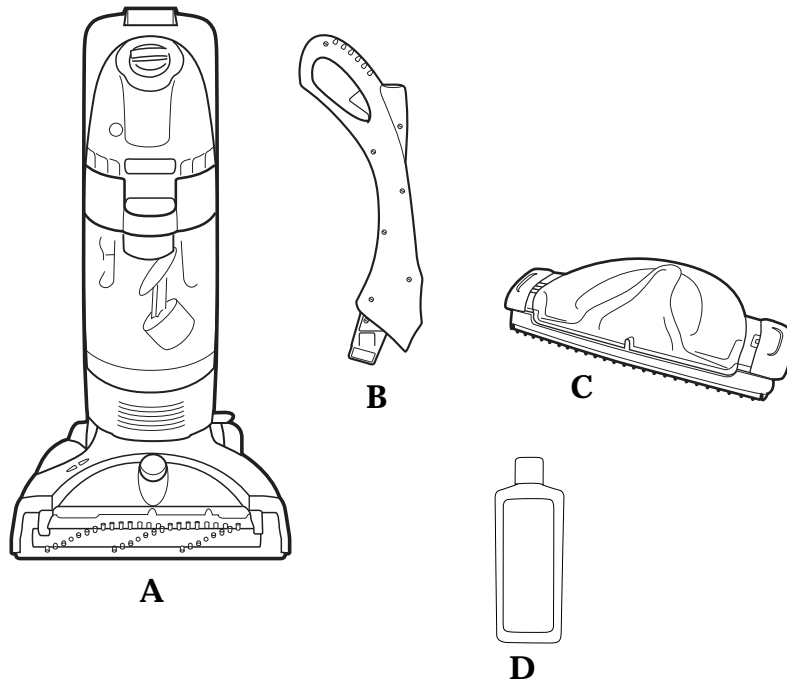

Cleaner Description

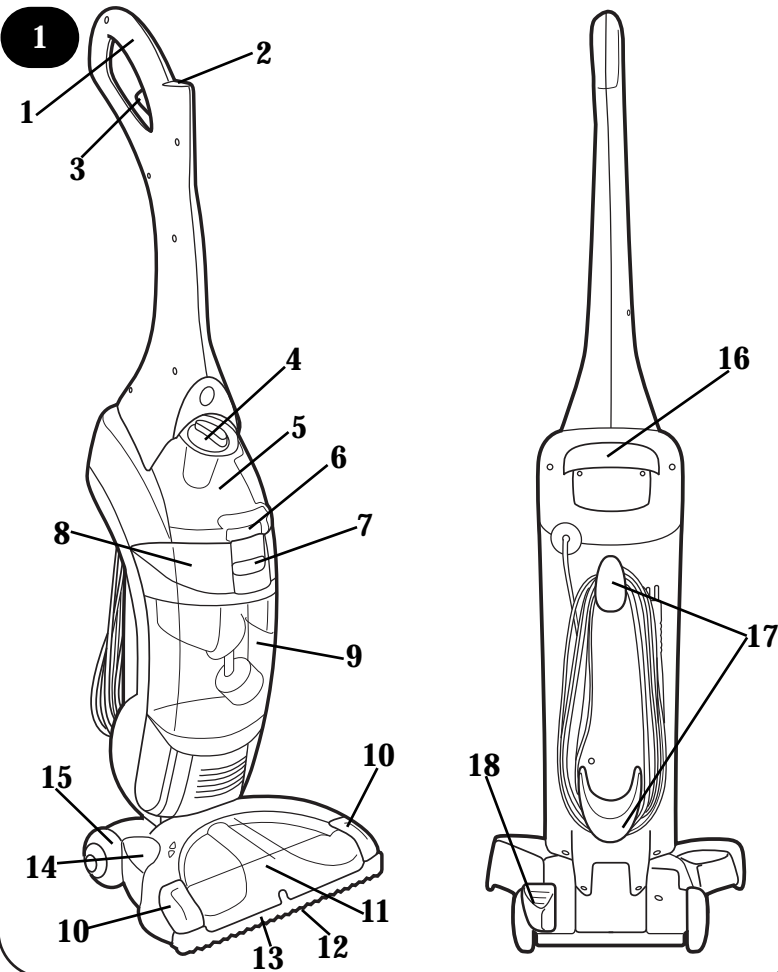

Features


1. **Hand grip**
2. **ON/OFF switch**
3. **Solution trigger:** squeeze to release cleaning solution
4. **Clean solution tank cap/measuring cup**
5. **Clean solution tank**
6. **Clean solution tank release**
7. **Recovery tank release**
8. **Recovery tank lid and filter**
9. **Recovery tank:** collects dry debris as well as dirty cleaning solution
10. **Nozzle release buttons:** release nozzle for easy clean-up
11. **Nozzle**
12. **Squeegee**
13. **Bumper**
14. **Mode selector:** turns agitator ON for wet scrub and OFF for dry vacuuming
15. **Soft-tread wheels**
16. **Carrying handle**
17. **Cord hooks:** top hook rotates for quick cord release
18. **Handle release pedal**

This cleaner is intended for household use.

Operate cleaner only at voltage specified on data plate on back of cleaner. Plug cleaner into a properly grounded outlet.

Assemble handle

- 2 Push upper handle (A) all the way down until you hear it snap in place.

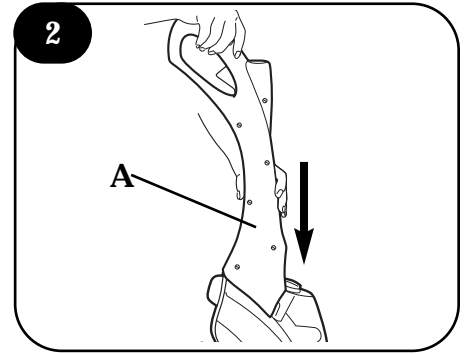

Install nozzle



- 3 For easier installation, place cleaner in upright position.


To install nozzle, make sure latches (A) are out.

Align middle section (B) of nozzle with opening (C) on cleaner.

Remove cardboard packing insert from squeegee area on underside of nozzle.


- 4 While holding nozzle in place, slide latches inward to lock in place.

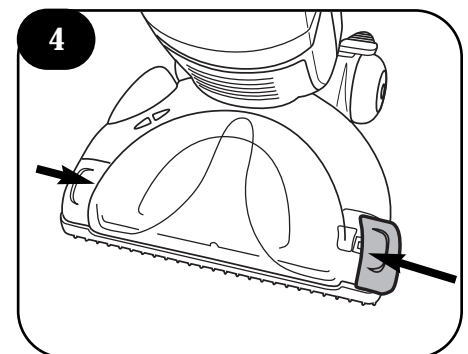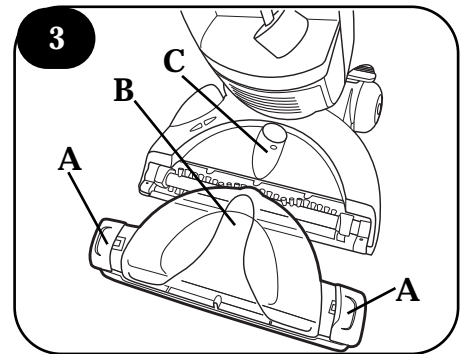

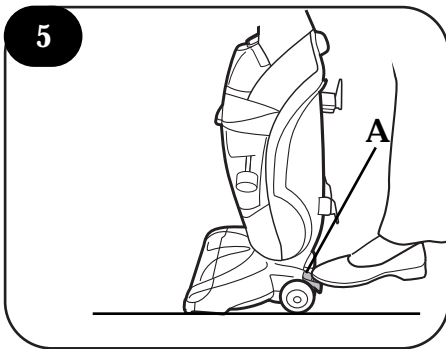


Handle release pedal

5 Step on pedal (A) to lower handle to operating position. Handle does not lock into a single position, but “floats” to allow convenient operation.

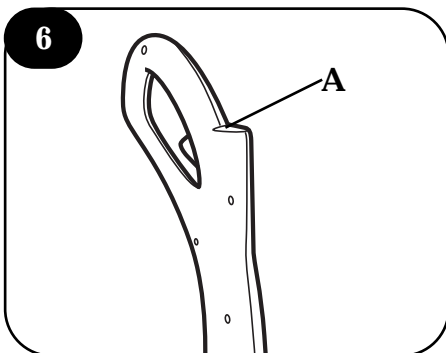


ON/OFF switch

6 Push switch (A) once to turn cleaner ON. Push switch again to turn cleaner OFF.

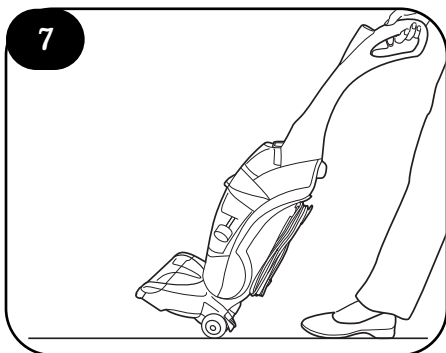

Transporting

7 To move your cleaner from room to room, put handle in upright position, tilt cleaner back on rear wheels and push forward.

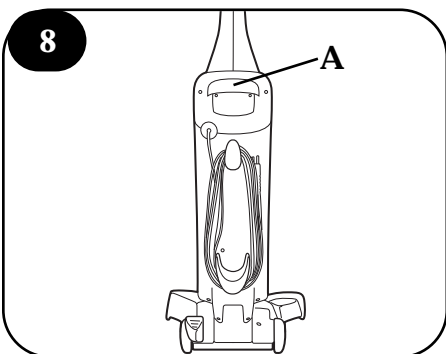

8 The cleaner may also be lifted using the carrying handle (A) on the back of the cleaner.

General operation

Your HOOVER FloorMate™ PowerBrush 300 Cleaner can be used to both vacuum dry debris and wet clean non-carpeted floor surfaces such as vinyl, tile and sealed wood. **It is not intended for use on carpet or rugs.**


CAUTION: To prevent damage to wood floors, follow the flooring manufacturer's cleaning recommendations.

If using cleaner on sealed wood floors, inspect floor surface for worn finish, bare wood or separated joints. Do not use FloorMate™ PowerBrush 300 Cleaner to wet clean sealed wood floors if any of these conditions exist.

Mode selector

- 9** The Mode selector pedal (A) turns the agitator on and off and raises or lowers the nozzle height.


The red indicator will point to the selected operation mode.

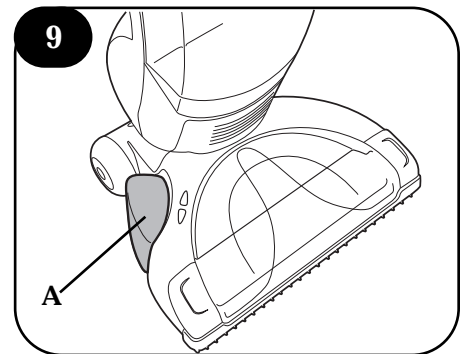

- 10** For dry debris pickup, step on Mode selector pedal once to put the Mode indicator (B) into the DRY VAC position. In this position, the agitator will not rotate and is raised off the floor surface.

To wet clean with agitator turned ON, step on the Mode selector pedal again to put the Mode indicator into the WET SCRUB position.

Refer to “How to clean” section for complete cleaning instructions.

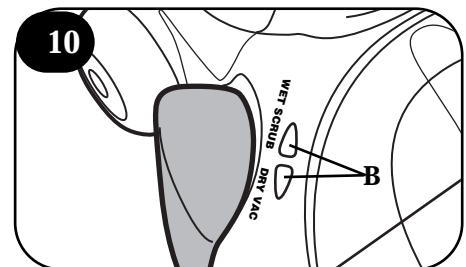

The tanks

Solution (upper) tank


The solution tank holds detergent and water that is to be dispersed onto the surface being cleaned.

How to fill

Disconnect cleaner from electrical outlet.


Place cleaner handle in upright, locked position.

- 11** To remove tank, squeeze release button and pull tank straight out.

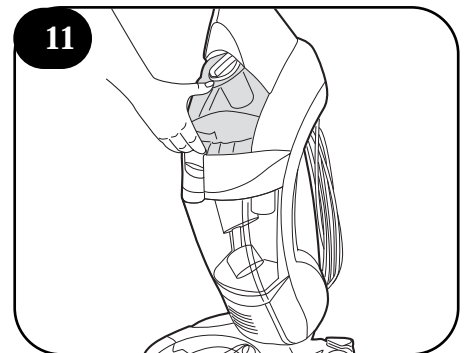

Carry tank to a sink.


- 12** Rotate tank cap counter-clockwise and lift up to remove cap (A).

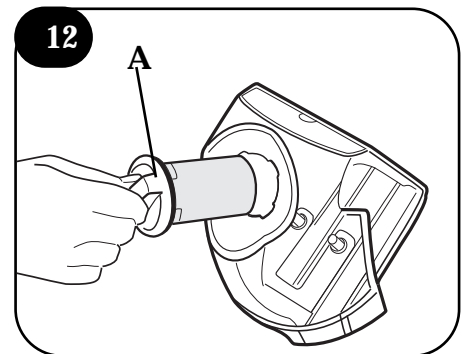

- 13** Turn cap (A) upside down to serve as a measuring cup.


For hard surface floors such as **vinyl, linoleum, marble, laminate wood, polyurethane sealed wood or other wood floors that can normally be cleaned using water**, use one cup (2 oz.) HOOVER® Floor to Floor™ Cleaner.

Check for worn spots or joint separations before using, as these conditions could lead to damaged flooring when using water to clean floor.

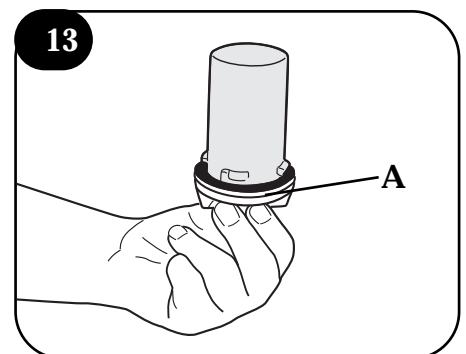


DO NOT use cleaning concentrates that contain solvent based ingredients.


14 Pour cleaning concentrate into tank (B). Fill tank to fill line (C) (1 quart) with warm water.

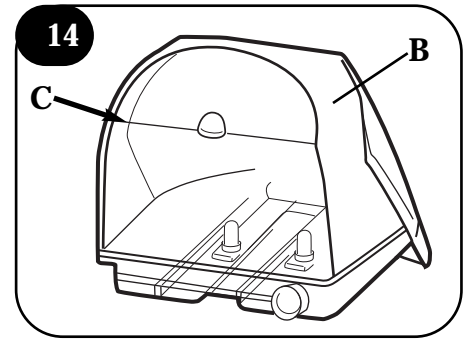


15 If rubber ring (D) on cap has become dislodged, reposition it with uneven side against ledge (E) as shown.

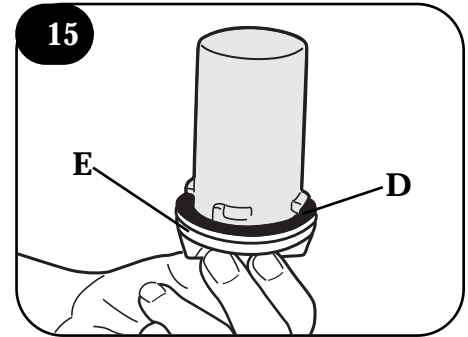

16 Replace cap. Rotate cap clockwise until it locks in place. Cap must be locked in place for proper performance and to prevent leaking.

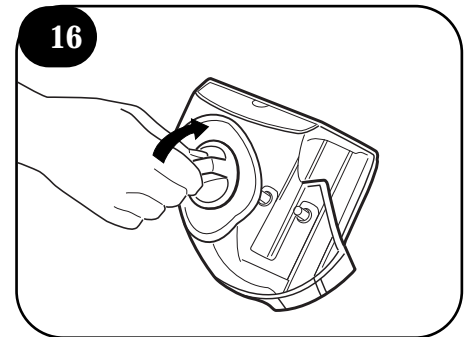

17 Slide tank straight into position until latch snaps in place.

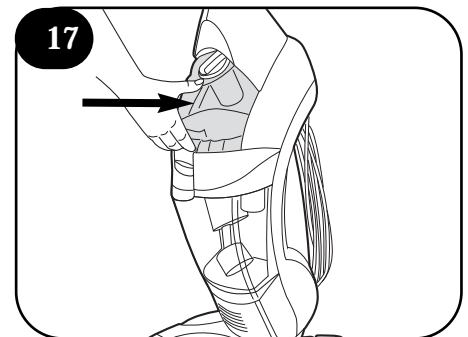

Recovery (lower) tank

Automatic shut-off

An automatic suction shut-off is built into the recovery tank to prevent the tank from overflowing.


When the shut-off activates, the cleaner will not pick up water or debris and the sound of the motor will change. The recovery tank is full and must be emptied.

How to empty


Turn cleaner off and disconnect from electrical outlet.

Although not necessary for satisfactory performance, it is recommended that the recovery tank be emptied after dry vacuuming and before wet operation.

Check the solution tank also. It may need to be refilled at this time.

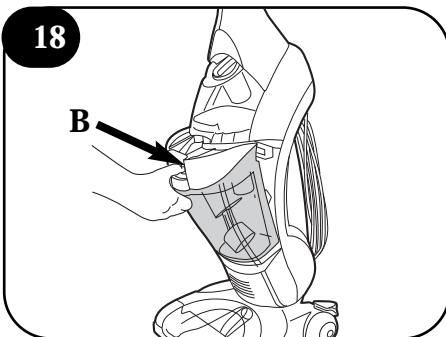

- 18** To remove tank, press down on release button (B) and pull tank straight out.

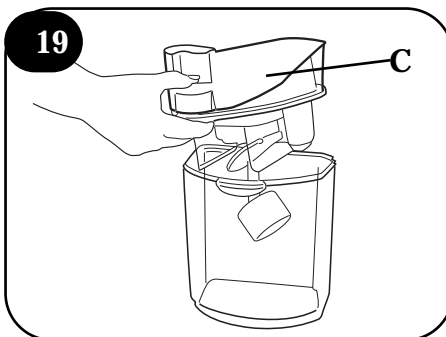


- 19** Remove tank lid (C). Empty tank.

To clean filters

The tank lid contains a washable, reusable filter. Clean this filter when suction is low or reduced.


Turn cleaner off and disconnect from electrical outlet.

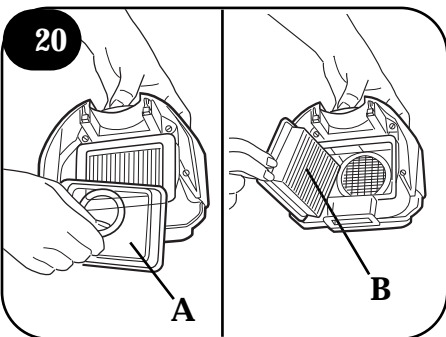

- 20** Remove recovery tank and lid (Figs. 18 & 19). Remove filter lid (A), then remove filter (B). Remove loose debris from filter by tapping the filter or gently brushing using your hand. The filter may also be rinsed for additional cleaning. Allow filter to air dry between uses.


Reposition filter.

- 21** Replace filter lid. Press down firmly until snapped in place.

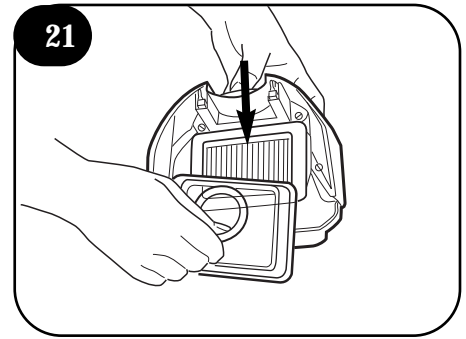

Dry or loose debris will also collect on the filter screen located in the tank lid.


- 22** To remove debris from screen, remove the pleated filter from the lid. Remove debris from screen (D).

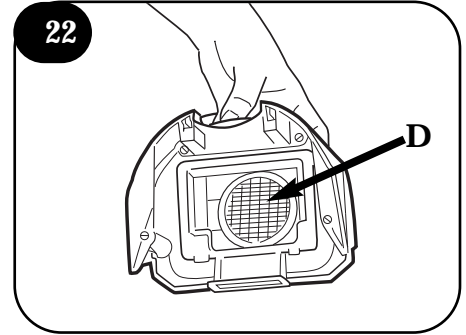

The filter screen may also be cleaned by rinsing it under running water.

Reposition pleated filter in lid. Replace lid onto recovery tank, pressing down firmly until snapped in place.

- 23** To replace recovery tank, place bottom of tank behind ledge (E) and push tank straight into cleaner body until it is locked in place.

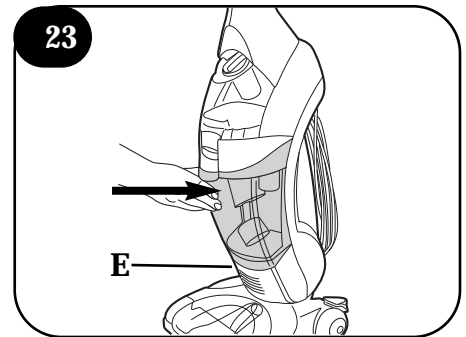

NOTE: The filter, filter cover and tanks must be replaced, or the unit will not work properly.

How to clean


Recommended cleaning sequence

Use your HOOVER® FloorMate™ PowerBrush 300 Cleaner to:

- **Dry Vacuum** to remove loose dirt, hair and debris.
- **Wet Scrub** the floor surface. The agitator will provide agitation to help loosen dirt.

The **Mode selector pedal** (A) turns the agitator on and off and raises or lowers the nozzle height. The red indicator will point to the selected operation mode.

- 24** For **dry debris pickup**, step on Mode selector pedal once to put the Mode indicator (B) into the DRY VAC position. In this position, the agitator will not rotate and is raised off the floor surface.

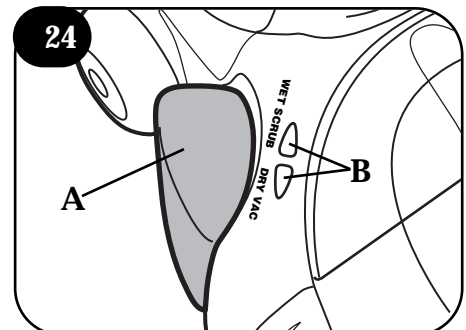

To wet clean with agitator turned ON, step on the Mode selector pedal again to put the Mode indicator into the WET SCRUB position.

Continued →

Cleaning floors

NOTE: Your HOOVER® FloorMate™ PowerBrush 300 cleaner may be used to clean wood floors that have been sealed with a polyurethane coating and can be cleaned with water.

CAUTION: To prevent damage to wood floors, follow the flooring manufacturer's cleaning recommendations.


If using cleaner on sealed wood floors, inspect floor surface for worn finish, bare wood or separated joints. Do not use FloorMate™ PowerBrush 300 cleaner to wet clean sealed wood floors if any of these conditions exist.

- 1 Step on Mode selector pedal to place Mode indicator to DRY VAC position and vacuum floor.
- 2 Turn cleaner off and disconnect from electrical outlet. Empty recovery tank (see Figs. 18 & 19).
- 3 Fill solution tank with Floor to Floor Cleaning Concentrate and water (see Figs. 11 through 18).

Do not use solvent based cleaning concentrates in your cleaner. Do not use any type of wax in your cleaner.

- 4 Step on Mode selector pedal to place Mode indicator to WET SCRUB position.
- 5 Dry hands and **plug cleaner into a properly grounded outlet.**
- 6 Step on handle release pedal and lower handle to operating position. Turn cleaner ON.
- 7 To release solution, squeeze trigger (A) (Fig. 25). **Slowly** move cleaner forward and backward over area to be cleaned. Squeeze trigger to release solution as needed.

Overlap strokes by one inch to help prevent streaking. The cleaner's suction will pick up the dirty solution throughout cleaning. **To optimize floor drying time**, continue to move cleaner over area without squeezing trigger to release additional solution.

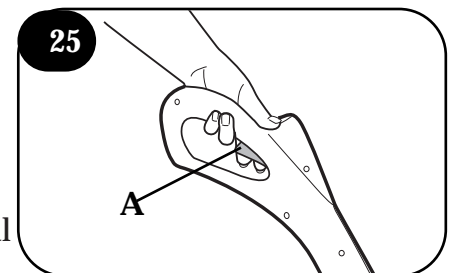

Note: When cleaning sealed wood floors, make sure all areas are completely dry. Ensure that no water remains on the floor.

Note: When switching between dry vacuuming and wet wash, it is not necessary to turn the cleaner off. Simply step on the Mode selector pedal to change the Mode indicator between the two settings.

- 8 Empty recovery tank or clean the filter when the motor sound becomes higher in pitch and there is a loss of suction (see "Automatic shut-off" section).

Picking up spills

Your cleaner may also be used to pick up **small liquid spills (1 quart or less, never to exceed 1/4 inch in depth)** on non-carpeted floors. Step on the Mode selector pedal to place the Mode indicator to WET SCRUB position and release the trigger. Continue to move cleaner over the area to pick up the spill.

Do not use the cleaner to pick up flammable or combustible liquids or chemicals. do not use the cleaner to pick up detergents that contain solvent based ingredients.

Storing the cleaner

Before storing cleaner:

Turn cleaner OFF and disconnect from electrical outlet.

- Empty and rinse solution and recovery tanks. Allow to air dry.
- Make sure that nothing is pressing on the nozzle squeegee.
- Do not store cleaner on a wood surface unless cleaner is **completely dry**.


Maintenance

Cleaning the nozzle


Turn cleaner OFF and disconnect from electrical outlet.

The cleaner's nozzle can be removed for easy cleaning.


26 Slide the two nozzle release latches (A) outward.

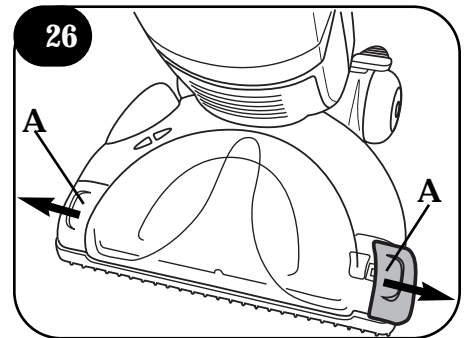


27 Remove nozzle (B) by pulling straight out.

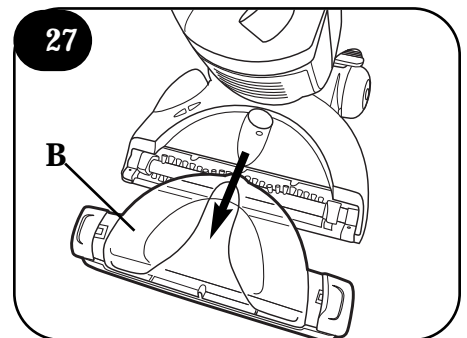


28 Rinse nozzle under running water. Remove debris from squeegee (C) and wipe with a damp cloth.

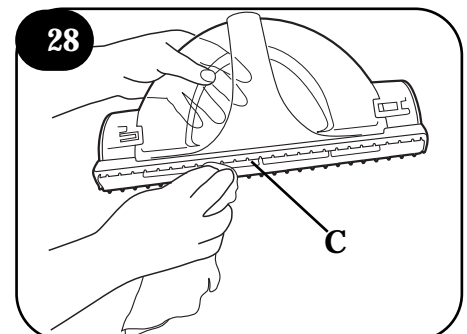

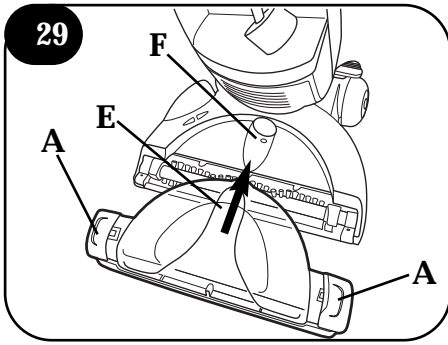

29 To replace nozzle, make sure latches (A) are out.
Cleaner should be in the upright position for easier assembly of the nozzle.

Align middle section (E) of nozzle with opening (F) on cleaner.

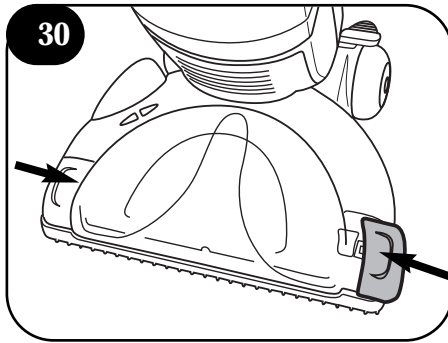

30 While holding nozzle in place, slide latches inward to lock in place.

Replacing the agitator brushes

Should the agitator brushes on your FloorMate™ PowerBrush 300 cleaner become worn and need to be replaced, they can be replaced at your nearest HOOVER Sales and Service Center.

Troubleshooting

Use the list below to help solve minor problems.

What's the problem?	What to do
Cleaner won't run	<ul style="list-style-type: none"> ✓ Make sure the cleaner is plugged in firmly. ✓ Check the fuse or breaker.
Low suction	<ul style="list-style-type: none"> ✓ Empty the recovery tank; it may be full and the automatic shut-off engaged. ✓ Make sure filter and filter lid are properly positioned. ✓ Make sure tanks are locked in place. ✓ Check the filter and clean if dirty. ✓ Make sure nozzle is replaced properly and locked.
Water puddling behind cleaner	<ul style="list-style-type: none"> ✓ Use recommended detergents to reduce excess foaming. ✓ Make sure solution tank is installed properly. ✓ Empty recovery tank.
Won't pick up dirty solution	<ul style="list-style-type: none"> ✓ Check Mode selector indicator to ensure it is set for WET SCRUB. ✓ Make sure recovery tank is installed properly. ✓ Empty recovery tank. ✓ Make sure filter and filter lid are properly positioned.
Cleaner pushes a line of dry debris in front of it	<ul style="list-style-type: none"> ✓ Check Mode selector indicator to ensure it is set for DRY VAC. ✓ Tip nozzle off floor by pushing down on handle to pick up debris that is too large to clear the squeegee.
Cleaning solution won't dispense	<ul style="list-style-type: none"> ✓ Make sure solution tank is locked in position. ✓ Refill the solution tank if it is empty.
Agitator won't rotate	<ul style="list-style-type: none"> ✓ Check Mode selector indicator to ensure it is set for WET SCRUB. ✓ Reset circuit breaker. <ol style="list-style-type: none"> (1) Push ON/OFF switch to turn cleaner OFF. (2) Unplug the cleaner. (3) Wait one minute. (4) Plug the cleaner into electrical outlet. (5) Push the ON/OFF switch again to turn cleaner ON. <p>If the agitator continues to stall and the breaker trips again, clean the agitator to remove debris (threads, strings, etc).</p>

Lubrication

The motor is equipped with bearings which contain sufficient lubrication for the life of the motor. The addition of lubricant could cause damage. **Do not add lubricant to motor bearings.**

Service

To obtain approved HOOVER service and genuine HOOVER parts, locate the nearest Hoover Sales and Service Center or Authorized Hoover Warranty Service Dealer (Depot) by:

- ✓ Checking the Service Section for Hoover on-line at www.hoover.com OR
- ✓ Checking the list of Sales and Service Centers provided with this cleaner OR
- ✓ Checking the Yellow Pages under “Vacuum Cleaners - Household” OR
- ✓ Calling 1-800-944-9200 for an automated referral of authorized service outlet locations (U.S. only)

Do not send your cleaner to Hoover in Newton, Iowa for service; this will only result in delay.

If further assistance is needed, contact the Hoover Consumer Response Center,
Phone: 330-499-9499.

In Canada, contact Hoover Canada, Burlington, Ontario L7R 4A8; Phone: 1-800-263-6376.

Always identify your cleaner by the complete model number when requesting information or ordering parts. (The model number appears on the back of the cleaner.)

Full One Year Warranty

(Domestic Use)

Your HOOVER® appliance is warranted in normal household use, in accordance with the Owner's Manual against original defects in material and workmanship for a period of one full year from date of purchase. This warranty provides, at no cost to you, all labor and parts to place this appliance in correct operating condition during the warranted period. This warranty applies when the appliance is purchased in the United States including its territories and possessions, or in Canada or from a U. S. Military Exchange. Appliances purchased elsewhere are covered by a limited one year warranty which covers the cost of parts only. This warranty does not apply if the appliance is used in a commercial or rental application.

This warranty only applies when the product is in use in the country or territory in which it is purchased.

Warranty service can only be obtained by presenting the appliance to one of the following authorized warranty service outlets. Proof of purchase will be required before service is rendered.

1. Hoover Sales and Service Centers
2. Hoover Authorized Warranty Service Dealers (Depots)

For an automated referral of authorized service outlets in the U.S.A., phone 1-800-944-9200 OR visit Hoover on-line at www.hoover.com

This warranty does not cover pick up delivery, or house calls; however, if you mail your appliance to a Hoover Sales and Service Center for warranty service, transportation will be paid one way.

While this warranty gives you specific legal rights, you may also have other rights which vary from state to state.

If further assistance is needed, or if there are questions concerning this warranty or the availability of warranty service outlets, phone the Hoover Consumer Response Center, Phone 1-330-499-9499.

In Canada, contact Hoover Canada, Burlington, Ontario L7R 4A8,
1-800-263-6376.