




OWNER'S MANUAL
Operating and Servicing
Instructions

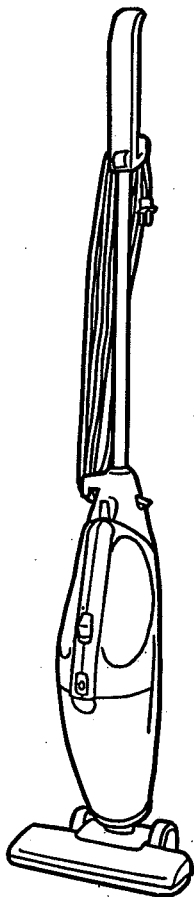

STICK VAC

- Please read these instructions carefully before using your Stick Vac.
- Let us help you put your vacuum together or answer any questions, call **1-800-321-1134 (USA & Canada)** www.dirtdevil.com

WARNING:

Cleaner assembly may include small parts. Small parts can present a choking hazard.

For quick reference, please record your vacuum information below.

Model #: _____

Mfg. Code: _____

(Mfg. code located on the lower backside of cleaner)

THIS VACUUM IS INTENDED FOR HOUSEHOLD USE ONLY.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.
- ALWAYS FOLLOW THESE SAFETY INSTRUCTIONS.
- DO NOT LEAVE CLEANER UNATTENDED.
- WARNING - FULLY ASSEMBLE CLEANER BEFORE OPERATING.
- WARNING - THE CORDS, WIRES AND/OR CABLES SUPPLIED WITH THIS PRODUCT CONTAINS CHEMICALS, INCLUDING LEAD OR LEAD COMPOUNDS, KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. WASH HANDS AFTER USING.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- Do not leave vacuum cleaner when it is plugged in.
- Do not perform maintenance when vacuum cleaner is plugged in.
- Do not use with damaged cord or plug.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not pull or carry by cord, use cord as handle, close door on cord, pull cord around sharp corners, run vacuum cleaner over cord, or expose cord to heated surfaces.
- If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, return it to a Service Center.
- Do not allow children to operate vacuum cleaner as a toy.
- Do not handle vacuum cleaner or plug with wet hands.
- Do not carry the vacuum cleaner while it is running.
- Do not put any object into ventilation openings, use with blocked opening, or restrict air flow.

- Do not put any object into ventilation openings, use with blocked opening, or restrict air flow.
- Do not use without Vacuum Bag and / or filters in place.
- Do not expose hair, loose clothing, fingers or body parts to openings or rotating floor brush.
- Do not pick up hot coals, cigarette butts, matches or any hot or burning objects.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.

SAVE THESE INSTRUCTIONS

WARNING: To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

NOTE: RETURN WARRANTY CARD TO REGISTER YOUR CLEANER.

CONGRATULATIONS

You are now the proud owner of the Dirt Devil® Stick Vac. The unique bagless design provides hassle-free emptying, yet delivers superior cleaning power. We trust your new purchase will bring you many years of satisfaction.

We are very proud of our products and hope that you are equally satisfied with their quality and performance.

**Thank you for your support of Dirt Devil® products.
Visit our website at www.dirtdevil.com**

TABLE OF CONTENTS

Safety Instructions.....	Page 2-3
Feature Descriptions.....	Page 4
Cord Wrap.....	Page 5
How to Operate.....	Page 6
To use as a stick vac.....	Page 6
To use as a hand vac.....	Page 6
Tool usage.....	Page 7
Returning Hand Vac.....	Page 7
Dirt Removal and Cleaning the Filter.....	Page 8
Troubleshooting Guide.....	Page 8

LIMITED WARRANTY

To the consumer, Royal Appliance Mfg. Co. warrants this vacuum cleaner to be free of defects in material or workmanship commencing upon the date of the original purchase. Refer to your vacuum cleaner carton for the length of warranty and save your original sales receipt to validate start of warranty period.

If the vacuum cleaner should become defective within the warranty period, we will repair or replace any defective parts free of charge. The complete machine must be delivered prepaid to any ROYAL® Authorized Sales & Warranty Service Station. Please include complete description of the problem, day of purchase, copy of original sales receipt and your name, address and telephone number. If you are not near a Warranty Station, call the factory for assistance at USA & Canada: 1-800-321-1134. Use only genuine Royal® replacement parts.

The warranty does not include unusual wear, damage resulting from accident or unreasonable use of the vacuum cleaner. This warranty does not cover brushes, flat belts, filters and bulbs. This warranty does not cover unauthorized repairs. This warranty gives you specific legal rights and you may also have other rights (Other rights may vary from state to state in the USA):

PRODUCT FEATURES

Fig. 1

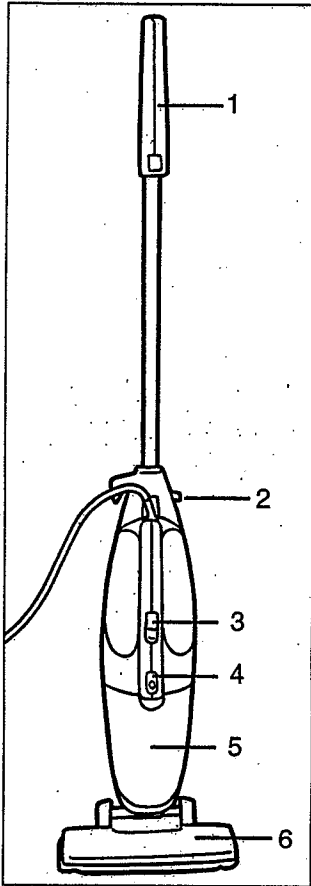


Fig. 1

- 1. Upper Handle Grip
- 2. Hand Vac Release Lever
- 3. On/Off Switch
- 4. Dirt Cup Release Latch
- 5. Dirt Cup
- 6. Floor Nozzle

Fig. 2

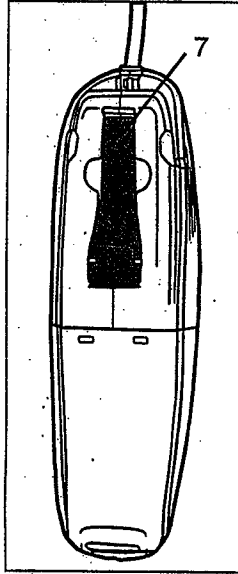


Fig. 2

- 7. Crevice Tool

Fig. 3


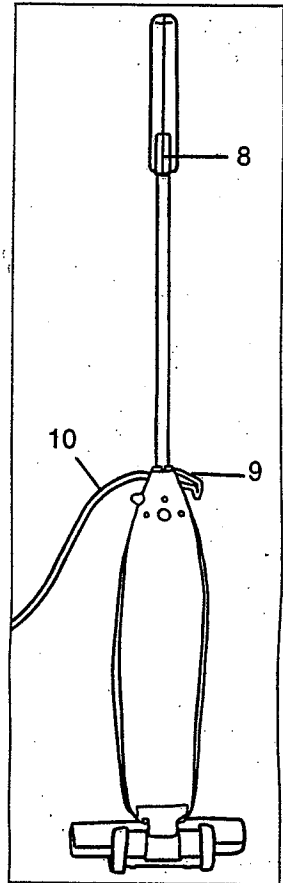


Fig. 3

- 8. Upper Cord Wrap
- 9. Lower Cord Wrap
- 10. Cord


HOW TO ASSEMBLE & STORE

ASSEMBLE HANDLE

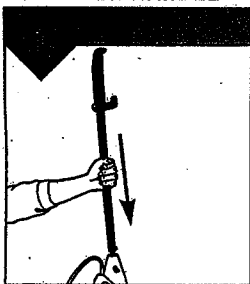

Place upper handle into body of cleaner and press down firmly. Handle will snap into place.


STORAGE/CORD WRAP

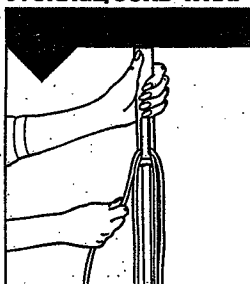

To Store: hold unit in an upright position. Wrap/unwrap cord around hooks.


HOW TO OPERATE

TO USE AS A STICK VAC

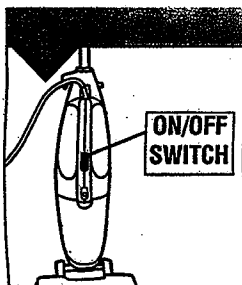


Turn unit on by using the on/off switch located on the body of the unit.


TO USE AS A HAND VAC

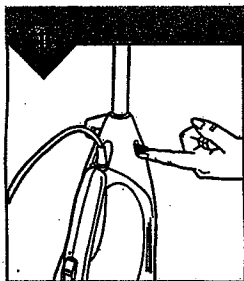

Push up on hand vac release lever.

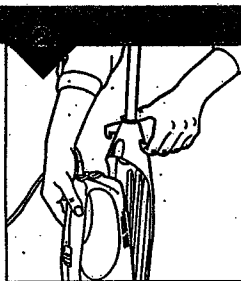


Rock upper portion of the hand vac away from the unit. Lift the hand vac up and off of the base.

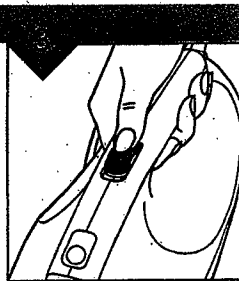


Turn unit on by using the on/off switch located on the body of the unit.

HOW TO OPERATE CONTINUED


TOOL USAGE

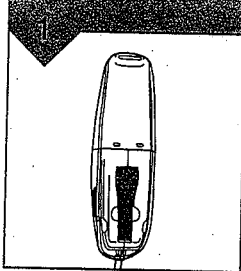

There is a nested crevice tool located on the back of the hand vac.

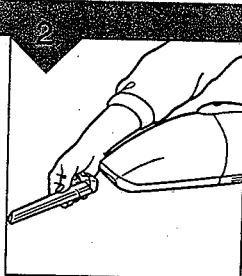


To use, remove the crevice tool and firmly push the widest end of the tool into the nozzle of the hand vac.

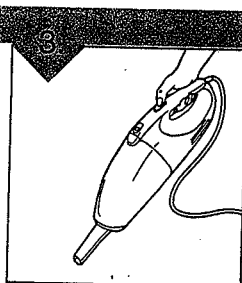


The crevice tool can be used in tight places and corners.

RETURN THE HAND VAC

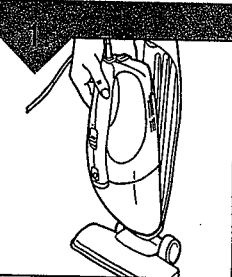


Return the hand vac to the body of the stick vac by placing the nozzle on the base.

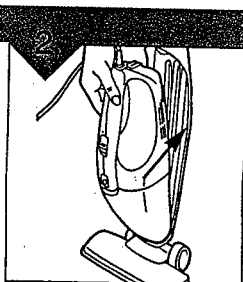


Rock the hand vac back until it locks into place.

DIRT REMOVAL AND CLEANING THE FILTER


WARNING: TO REDUCE THE RISK OF INJURY FROM MOVING PARTS - UNPLUG BEFORE SERVICING.

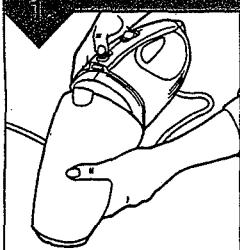


While depressing the dirt cup latch, pull the dirt cup away from the upper body of the hand vac.

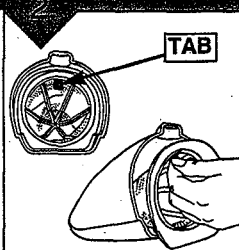


Remove the filter by pulling on the tab located on the outer rim of the filter. Pull the filter out of the dirt cup.

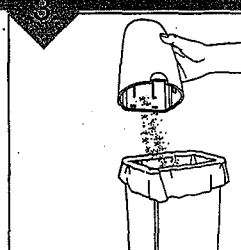

Shake the dirt cup and filter over a trash can. Do NOT wash filter with water.

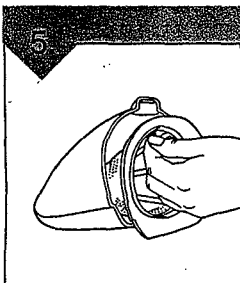

Return filter to dirt cup.

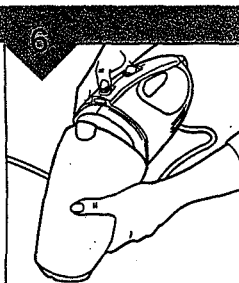

When returning the dirt cup, line up the bottom of the dirt cup with the hand vac and rock the dirt cup up until the entire cup latches onto the hand vac.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
Cleaner won't run	<ol style="list-style-type: none"> 1. Unplugged at wall outlet. 2. Tripped circuit breaker in home/Blown fuse. 3. Improper household current. 	<ol style="list-style-type: none"> 1. Plug in firmly; turn power switch "ON". 2. Reset circuit breaker or replace fuse. 3. Have qualified electrician verify household current.
Cleaner won't pick up or low suction	<ol style="list-style-type: none"> 1. Filter clogged, wet and/or dirty. 2. Dirt cup clogged. 3. Tools clogged. 	<ol style="list-style-type: none"> 1. See filter removal above. 2. See dirt cup removal above. 3. Remove obstructions.
Dust escaping from cleaner	<ol style="list-style-type: none"> 1. Filter is dislodged. 	<ol style="list-style-type: none"> 1. See filter removal above.