


Simplicity[®]

*(The chances are you're
never going to read me)*

Owner's Manual

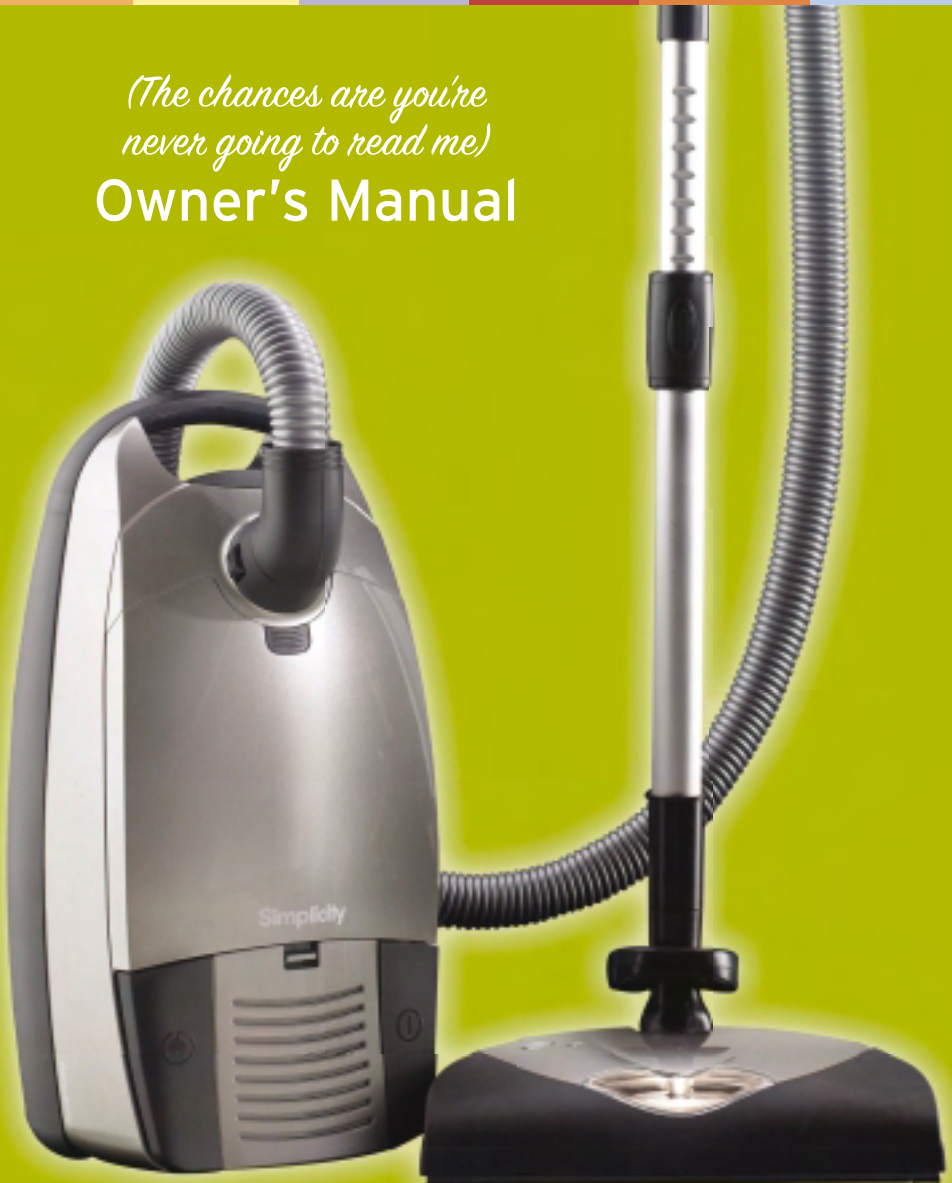

Model S38

IMPORTANT SAFETY INSTRUCTIONS

Read All Instructions Carefully Before Using This Appliance

When using an electrical appliance, basic precautions should always be followed, including the following :

WARNING - To reduce the risk of fire, electric shock, or injury :

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used near children.
4. Use only as described in this manual.
Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked:
keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging.
12. Use extra care when cleaning on stairs.
13. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
14. This appliance is intended for household use only and not for commercial or industrial use.
15. Do not operate the cleaner if :
 - the power cord is damaged.
 - the hose shows visible signs of damage.
16. Do not use without dust bag and/or filters in place.
17. Hold plug when rewinding into cord reel. Do not allow plug to whip when rewinding.
18. The hose contains electrical wires. Do not use if damaged, cut or punctured.
Avoid picking up sharp objects.
19. To reduce the risk of electric shock, this appliance has a polarized plug.
20. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
21. Always turn off this appliance before connecting or disconnecting motorized nozzle.
22. Use only with motorized nozzle model SPB-250.

SAVE THESE INSTRUCTIONS

CONTENTS

CANISTER FEATURES	4 ~ 5
HOW TO USE POWER NOZZLE	6 ~ 9
HOW TO USE CLEANING TOOLS	10
HOW TO REPLACE VACUUM BAG	10
HOW TO REPLACE FILTERS	11
SAFETY PRECAUTIONS	12
TROUBLESHOOTING GUIDE	13

CANISTER FEATURES

POWER CONTROL HANDLE

When lit, change vacuum bag or check for clog in hose

When lit, change HEPA filter (page 11)

Light indicates when power nozzle is in use.

Power nozzle On / Off

CHECK BAG

SERVICE FILTER

POWER BRUSH

MAX

HIGH

MED

LOW

OFF

SUCTION

+

-

POWER BRUSH

ON / OFF

Power Levels:

MAX	100%
HIGH	75%
MED	50%
LOW	25%
OFF	0%

Increase power

Decrease power

On / Off Button

One touch integrated wand

Power nozzle
⇨ Please, refer to page 6-9.
<How to Use Power Nozzle>

DIRT SENSOR

CLEANING CODES

- = Clean!
- = Dirt Found
- = Brushroll Jam
Reset Vacuum Breaker


When light is green your carpet is clean.

When light is orange keep vacuuming-dirt is found.

When light is red, reset the circuit breaker switch (page 7).


FLOOR

- Insert the wand holder into the

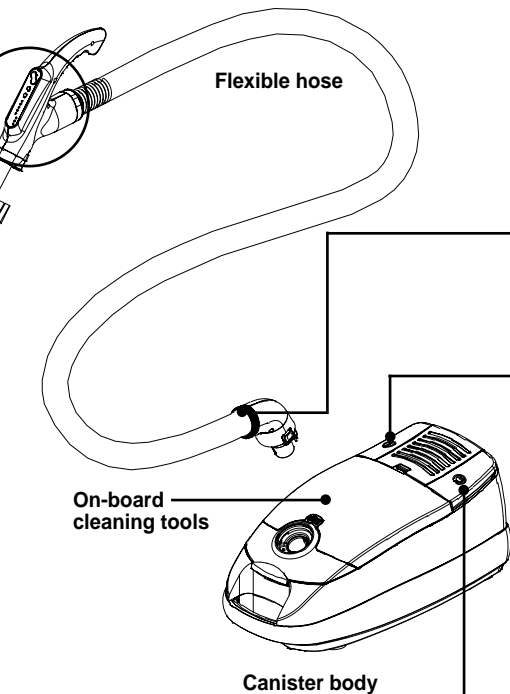


Door brush

HOSE ADAPTER

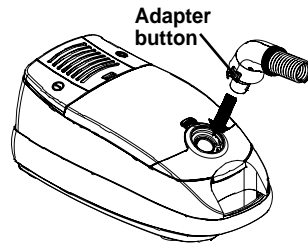


- When separating the hose from the body, press the adapter buttons to release the hose.

MAIN ON / OFF BUTTON

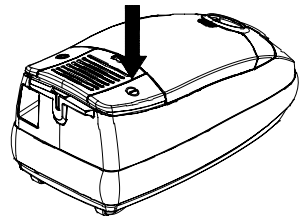


- **ON** - Canister power is on and Power nozzle is off.
- **OFF** - All power is off.

BRUSH STORAGE

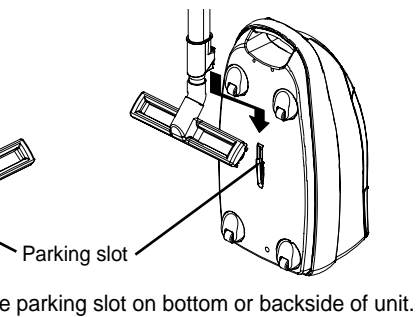

CORD REWIND

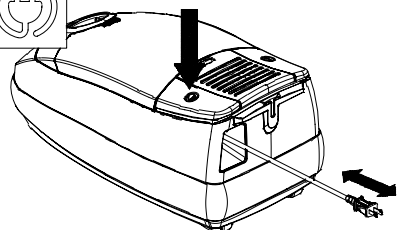

HOW TO USE POWER NOZZLE

OPERATION

1. Turning on the Power Nozzle

The power nozzle can only be turned on if the canister is also turned on (canister on / off switch is located on the main body). The power nozzle on / off switch is located on the handle. Simply press the power nozzle button to engage the power nozzle.

To achieve best cleaning results, slowly pass the power nozzle back and forth over the carpet or floor.

2. Using the Power Nozzle

After turning on the canister and power nozzle, release the wand by pressing the left pedal on the back side of the power nozzle (see diagram 3)

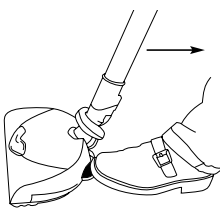


Diagram 3

 


Diagram 4

3. Remove / Insert the Wand From The Power Nozzle

Removing the wand from the power nozzle allows you, for example, to use cleaning tools for baseboard or ceiling cleaning. To do this, first turn the power nozzle and canister off. Then, press the wand release collar (see diagram 5) and pull the wand out. To reinsert the wand into the power nozzle, simply press the wand back into the neck of the power nozzle. The wand will then "click" back into place.

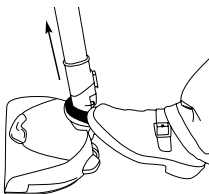


Diagram 5

4. Carpet Height Adjustment

Your power nozzle has six different settings to clean a variety of carpet types and floor surfaces. To adjust the carpet height setting of the power nozzle, press the right pedal located on the back of the power nozzle (see diagram 6). Each press of this pedal will adjust the height to the next carpet height position.

To determine which setting you are currently on, locate and look through the height indicator window on the top of the unit (see diagram 7). You will see one of the six settings as mentioned earlier and detailed below:

Setting: Intended Use:

1. XHI Very thick or plush carpet
2. HI Thick or plush carpet
3. Auto General carpet thickness and bare floors
4. MED Average plush carpet
5. LO Thin plush carpet
6. XLO Low pile carpet (indoor/outdoor type carpet)

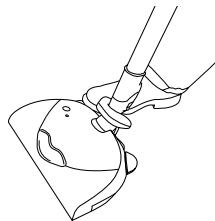


Diagram 6

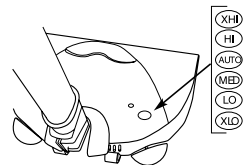


Diagram 7

Carpet Height Notes: When using the power nozzle, start on the "auto" setting. If pushing the power nozzle forward feels sluggish or hard to push, then adjust to a higher setting (i.e. HI or XHI). If the power nozzle feels very easy to push, you may want to lower the power nozzle for more effective cleaning. The "Auto" setting is the recommended setting for hard floor surfaces (i.e. tile, vinyl, wood).

OPERATION

5. Warning Light / Dirt Sensor

Your power nozzle comes equipped with a circuit breaker safety system that protects it due to a jammed power nozzle situation. Common items that cause jammed brushrolls include socks, excessive threads, corners of area rugs, etc. The warning indicator light on top of the unit (see diagram 8) will change from green to red should this condition occur.

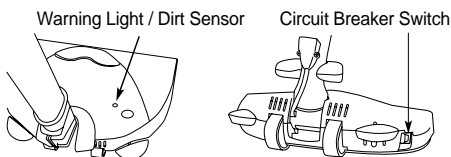


Diagram 8

Diagram 9

If the circuit breaker trips:

- Turn off the vacuum cleaner and power nozzle then unplug the power cord.
- Remove the object preventing the brushroll from turning.
- Locate the circuit breaker switch on the back of the power nozzle and press it to reset the breaker (see diagram 9).
- When the unit is turned back on, the warning light should be green and ready to go. If the circuit trips again, repeat steps 1-3 again to correct the problem. If this does not correct the problem, contact your authorized vacuum cleaner retailer for further assistance.

6. Dirt Sensor

The warning indicator light will turn orange if the dirt sensor detects dirt in the carpet and will change to green when the carpet is clean.

MAINTENANCE AND CARE

1. Removing the Brushroll

IMPORTANT: Before performing any maintenance work on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.

Your brushroll may need to be removed at times, for example, to cut threads that have become tangled around the brushroll or to replace the belt (see "Replacing the Belt").

To remove the brushroll, turn the unit over and lift off the metal bottom plate by first unscrewing the two bottom plate screws located by the rear wheels (see diagram 10). Pull out the belt cover guard (see diagram 11) and pull the brushroll out.

To reinstall the brushroll, reinsert the brushroll back into the unit (make sure the belt is attached properly). Next, insert the belt cover guard. Then, place the metal bottom plate back onto the unit (insert the front end of the bottom plate first). Re-insert the two bottom plate screws and secure.

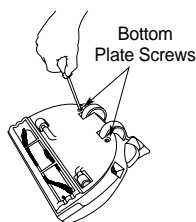


Diagram 10

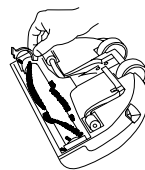


Diagram 11

MAINTENANCE AND CARE

2. Replacing the Power Nozzle Belt

IMPORTANT: Before performing any maintenance work on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.

To replace the power nozzle belt, you must first remove the brushroll (see "Removing the Brushroll"). Locate and discard broken belt.

To install new belt, locate the power nozzle motor pulley and loop the belt around it (see diagram 12). Place the other end of the belt around the brushroll making sure the belt is seated in the "belt groove" of the brushroll (see diagram 13). Insert the brushroll back into the brushroll tray and place the belt guard back into position (see diagram 11). Place the metal bottom plate back onto the unit (insert the front end of the bottom plate first). Re-insert the two bottom plate screws and secure.

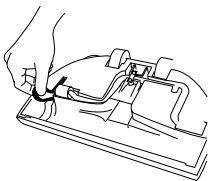


Diagram 12

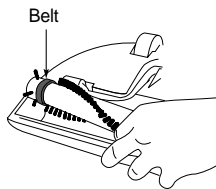


Diagram 13

3. Replacing the Bulb

IMPORTANT: Before performing any maintenance work on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.

Turn the power nozzle over and remove the bottom plate by first unscrewing the two bottom plate screws located by the rear wheels (see diagram 10). Locate and remove the two top cover screws (see diagram 14). Turn the power nozzle back over, push the power nozzle neck flat, and remove the top cover (see diagram 15). Simply pull the bulb out (no twisting) and reinsert a factory-authorized bulb. Place the top cover back on the unit, turn the machine over and re-insert the two top cover screws. Reinstall the bottom plate.



Diagram 14

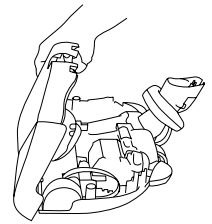


Diagram 15

DIAGRAM 1 REAR VIEW OF POWER WAND AND NOZZLE ASSEMBLY



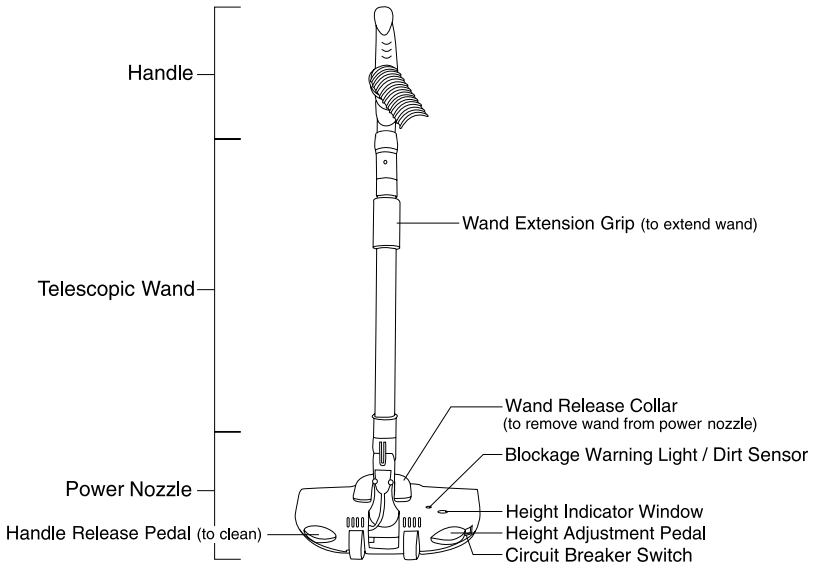


DIAGRAM 2 FRONT VIEW OF POWER WAND AND NOZZLE ASSEMBLY

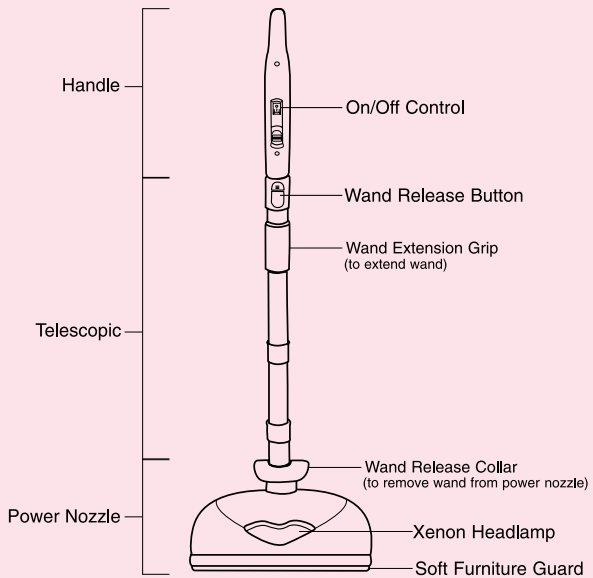

HOW TO USE CLEANING TOOLS

- Open the tool cover lid to access tools.

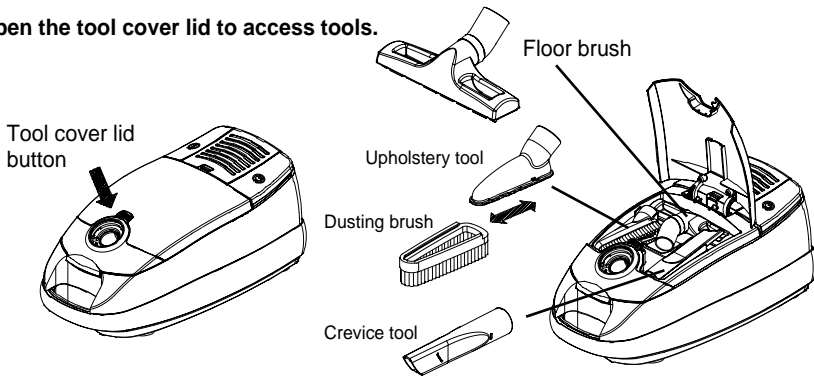

- On-board tools can be attached either to the power handle or to the end of the wand.


Floor brush: effective for hard surface cleaning (wood, tile, etc)

Upholstery tool: ideal for cleaning furniture

Dusting brush: (slides off the end of the upholstery tool) for shelves, tables, etc

Crevice: designed to clean in tight spaces (i.e. between sofa cushions)

REPLACING VACUUM BAG

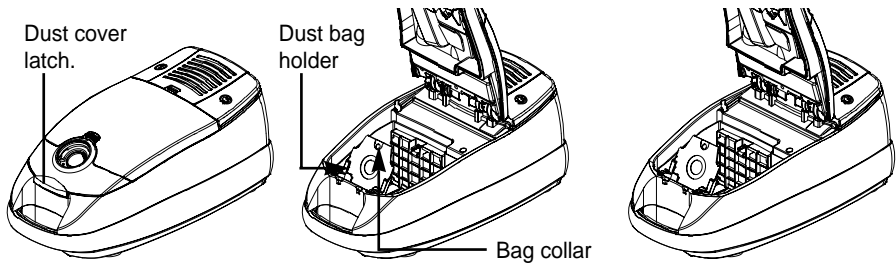

- Turn canister off, remove hose, and open the dust cover.

- Grab the bag collar and pull the vacuum bag out of the dust bag holder. Insert new bag.
- **Do not re-use vacuum bag.**


- Dust cover will not close without a bag in the unit or if the bag is not fully inserted.

NOTE: The "change bag" light is located on the power handle and will light up when either the bag is full or when a clog is detected in the machine. If upon inspection the bag is not full, please inspect the hose or wand for a clog and remove.

REPLACING THE FILTERS


Replacing the charcoal filter:

- Unplug canister and remove the hose.
- Open the dust cover and locate the charcoal filter behind the bag.
- Remove filter case and discard used filter.
- Insert new charcoal filter into filter case and re-insert case.
- Close the dust cover.

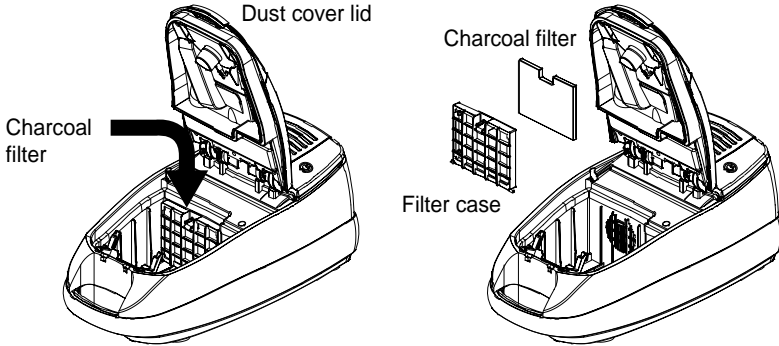

Replacing the S-Class HEPA filter:

- Unplug canister and remove HEPA filter cover.
- Remove and discard used HEPA filter.
- Insert new S-Class HEPA filter.
- Press the "reset filter button" located next to the S-Class HEPA filter.
- Reinsert HEPA filter cover onto the machine.

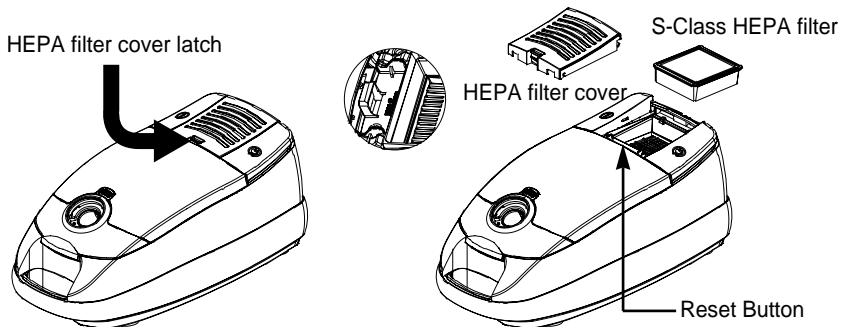

NOTE : Change the S-Class HEPA filter when the "service filter" light is illuminated on the power handle. Genuine S-Class HEPA filters cannot be washed or re-used.

SAFETY PRECAUTIONS

This vacuum cleaner should be used for normal dry household dust and dirt.


The manufacturer cannot be held responsible for any damage caused by use or operation of the cleaner contrary to these instructions.

If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.

- Do not vacuum areas which contain moisture or water, flammable matter, needles, pins, razor blades, matches, cigarettes, etc., since they may damage the vacuum or dust bag.




- When rewinding the power cord, hold the plug before pressing the cord rewind button to prevent the cord from whipping.
- Do not pull the power cord out beyond the red mark.

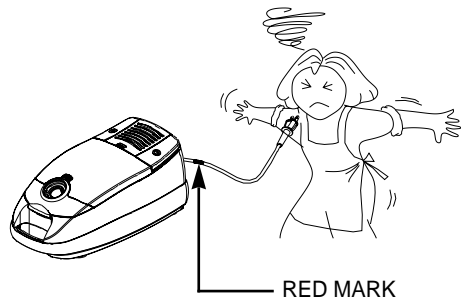

- Make sure a dust bag and a charcoal filter are always inserted.



- This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug fits into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

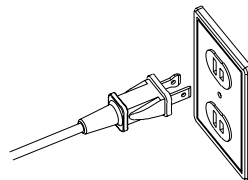

TROUBLESHOOTING GUIDE


- Please check each item below if you have trouble with your vacuum.
Before checking, ensure that the vacuum is unplugged from the power supply.

Problem	Check Point	Note
<ul style="list-style-type: none"> • Suction power is weak. 	<ul style="list-style-type: none"> • Dust bag • Wand or hose 	<ul style="list-style-type: none"> • If dust bag is full, replace it. • If clogged or blocked, remove the object.
<ul style="list-style-type: none"> • The vacuum does not work. 	<ul style="list-style-type: none"> • Is the hose adapter inserted into the suction opening of the cleaner completely? • When the dust bag is full or blocked or any of the accessories are blocked, the over-heating protection for the motor is activated. 	<ul style="list-style-type: none"> • Insert it completely. • Switch off and unplug the cleaner and check the dust bag and accessories and remove any blockages. The cleaner can be switched on again after approximately 20 minutes.
<ul style="list-style-type: none"> • Power cord does not rewind. 	<ul style="list-style-type: none"> • Power cord 	<ul style="list-style-type: none"> • Pull the power cord out a little and press the cord rewind button again.
<ul style="list-style-type: none"> • Power cord won't pull out of the cleaner. 	<ul style="list-style-type: none"> • Power cord 	<ul style="list-style-type: none"> • Do not pull it by force. Rewind it a little by pressing the cord rewind button and try pulling it out again.

SPECIFICATIONS

Model	S38
Rating	120V/60Hz
Power	12 Amps
Weight	26.25 Pounds
Dimension (L X W X H)	21.3" x 11.4" x 9.8"
Cord Length	28 feet

- Specifications can be changed for improvement without notice.
For assistance please visit www.simplicityvac.com or call 1-888-9 Simply

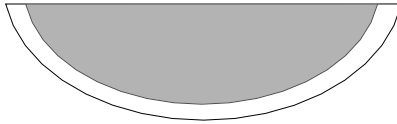

ABOUT THIS MANUAL

VISION CREATIVE, INC.

571 526

16

		TEL	
MODEL	S38()		
BUYER	Simplicity		
	1	6	
	2	7	
	3	8	
	4	9	
	5	10	
	148X210		
MEMO	2004.07.26 -		

VISION

TEL: 730 - 0660 FAX: 730 - 3788

Simplicity[®]
The vacuum you'll *flip* over.[™]

www.simplicityvac.com