

Simplicity[®]

*(The chances are you're
never going to read me)*

Owner's Manual



MOXIE and GUSTO Models

www.simplicityvac.com

Simplicity[®]

The vacuum you'll *flip* over.™

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING:

The manufacturer cannot accept responsibility for damage caused when the appliance is not used according to the instructions, or for uses other than those for which it was intended.

To reduce the risk of fire, electric shock or injury:

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not handle plug or appliance with wet hands.
- **WARNING: ELECTRIC SHOCK COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to your Authorized Retailer for service.
- Do not use without vacuum bag in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not attempt to service the unit while appliance is plugged in.
- Do not use vacuum to pick up water or any wet materials.
- Hold plug when rewinding the power cord to prevent the cord from whipping.

SAVE THESE INSTRUCTIONS.

Contents

Safety Precautions 4

Replacing Vacuum Bag and Filters..... 5

Description and Operation..... 6-8

Using the Full Size Power Nozzle..... 9-10

Maintenance and Care..... 11-12

Troubleshooting Guide 13


Owner's Information..... 14

Warranty..... 15

Safety Precautions

This vacuum cleaner should be used for normal, dry household dust and dirt. The manufacturer cannot be held responsible for any damage caused by use or operation of the vacuum contrary to these instructions. If the vacuum is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.


- Do not vacuum areas which contain moisture or water, flammable matter, needles, pins, razor blades, matches, cigarettes, etc., since they may damage the vacuum or vacuum bag.
- When rewinding the power cord, hold the plug before pressing the cord rewind button to prevent the cord from whipping.
- Make sure a vacuum bag and filters are always in place.
- This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug fits into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

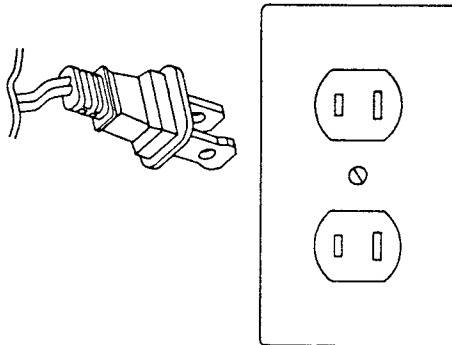

Replacing Vacuum Bag and Filters


Replacing the vacuum bag

Dust cover latch

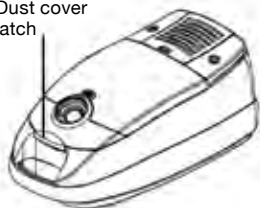

- Turn canister off, remove hose, and open the dust cover.

Vacuum bag holder

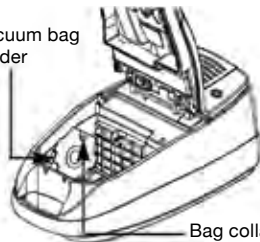

- Pull the tab on the cardboard bag collar which closes the bag while removing it from the bag holder.

- **Do not re-use vacuum bag.**

Bag collar




- The dust cover will not close without a bag in the unit or if the bag is not inserted properly.

NOTE: The “check bag” light is located on the power handle and will light up when either the bag is full or when a clog is detected in the machine. If upon inspection the bag is not full, please inspect the hose or wand for a clog and remove. The check bag light may illuminate when cleaning with on-board tools. Should this occur, continue cleaning normally.


Replacing the secondary filter

- Unplug canister and remove the hose.
- Open the dust cover and locate the secondary filter behind the bag.
- Remove filter case and discard used filter.
- Insert new filter into filter case and re-insert case.
- Close the dust cover.

Dust cover lid

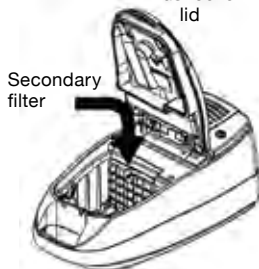

Secondary filter

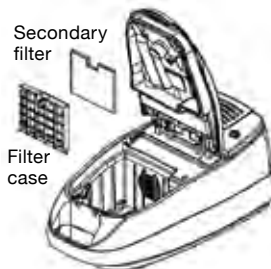


Replacing the HEPA filter

- Unplug canister and remove HEPA filter cover.
- Remove and discard used HEPA filter.
- Insert new HEPA filter.
- Press the “reset filter button” located next to the HEPA filter.
- Reinsert HEPA filter cover onto the machine.

HEPA filter cover latch



HEPA filter cover

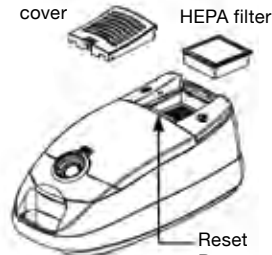

Reset Button

NOTE: Change the HEPA filter when the “service filter” light is illuminated on the power handle. Genuine HEPA filters cannot be washed or re-used.

Description and Operation

CANISTER FEATURES

POWER CONTROL HANDLE

When lit, change vacuum bag or check for clog in hose* (page 5)

When lit, change HEPA filter (page 5)

Light indicates when power nozzle is in use.

Power nozzle On / Off

*Check bag light may illuminate when cleaning with on-board tools. Should this occur, continue cleaning.

CHECK BAG

SERVICE FILTER

POWER BRUSH

MAX

HIGH

MED

LOW

OFF

SUCTION

+ Increase power

- Decrease power

POWER BRUSH On / Off

ON / OFF On / Off Button

Power Levels:	
MAX	100%
HIGH	75%
MED	50%
LOW	25%
OFF	0%

Telescopic wand

3n1 multi-purpose
Insert end of wand into tool for multiple uses

Power nozzle

Please, refer to pages 8-10 <How to Use Power Nozzle>

RUG/FLOOR TOOL


- For use on area rugs with the brushes retracted and for use on tile, hard wood or vinyl floors with the brushes exposed.

BARE FLOOR BRUSH

- For use on tile, hard wood or vinyl floors.

FLOOR

- Insert the wand holder into the

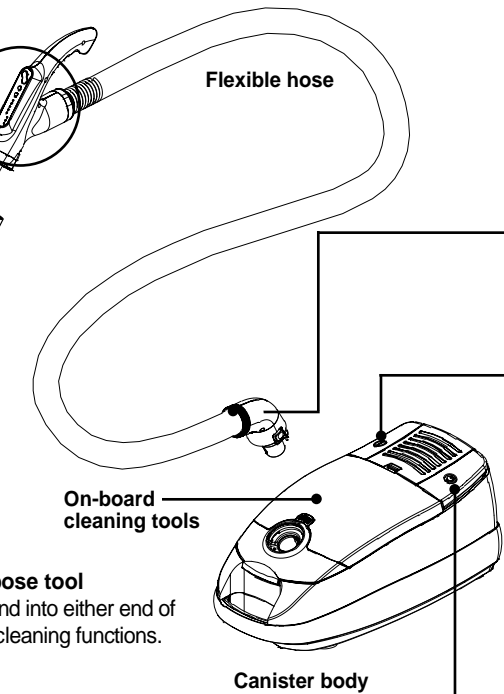

HOSE ADAPTER

Adapter button

- When separating the hose from the body, press the adapter buttons to release the hose.

On-board cleaning tools

Insert cleaning tool into either end of cleaning functions.

For brush

MAIN ON / OFF BUTTON

ON

OFF

- **ON** - Canister power is on and power nozzle is off.
- **OFF** - All power is off.

BRUSH STORAGE



Parking slot

Insert brush into parking slot on bottom or backside of unit.

CORD REWIND

Cord rewind


Description Continued

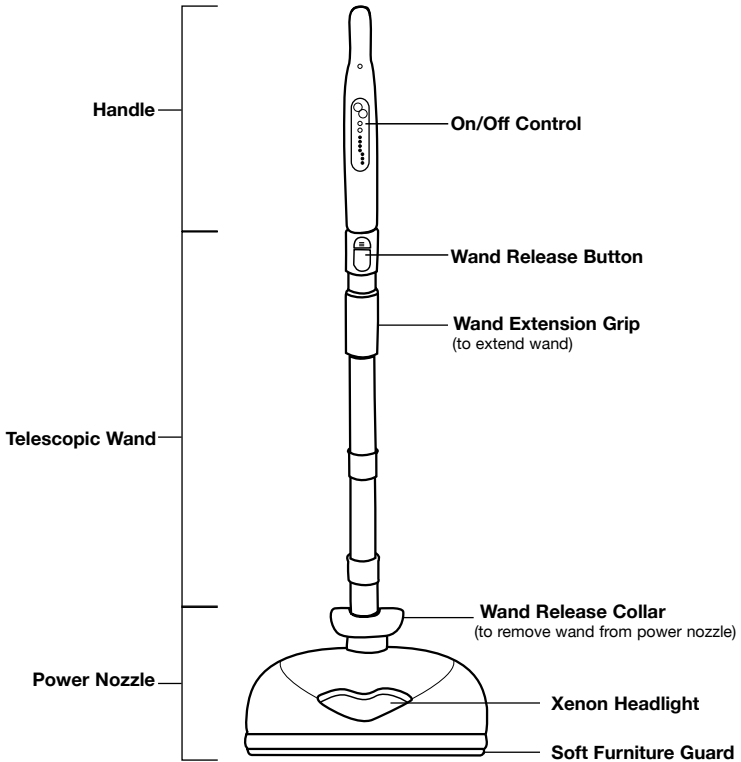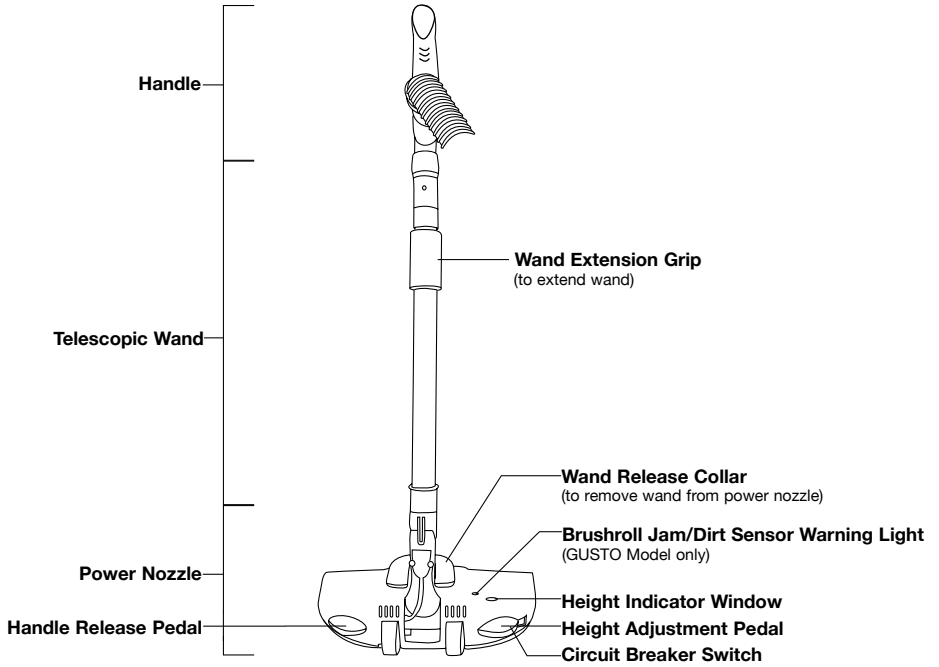

Using the Full Size Power Nozzle

Using the Power Nozzle

After turning on the canister, lower the wand by pressing the left pedal on the back side of the power nozzle.

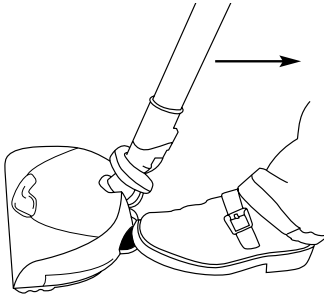


Turning On the Power Nozzle

The power nozzle can only be turned on if the canister is also turned on (canister on / off switch is located on the main body). The power nozzle on/off button is located on the handle. Simply press the Power Brush button to engage the power nozzle.

Removing and Inserting the Wand


Removing the wand from the power nozzle allows you to use cleaning tools for baseboard or ceiling cleaning. To do this, first turn the power nozzle and canister off. Then, press the wand release collar pictured below and pull the wand out.

To reinsert the wand into the power nozzle, simply press the wand back into the neck of the power nozzle. The wand will then “click” into place.

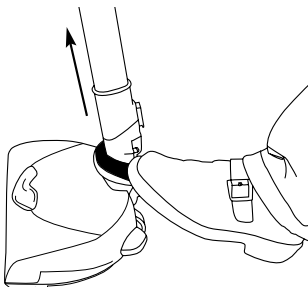


Carpet Height Adjustment

Your power nozzle has six different settings to clean a variety of carpet types and floor surfaces. To adjust the carpet height setting of the power nozzle, press the right pedal located on the back of the power nozzle. Each press of this pedal will adjust the height to the next carpet height position.

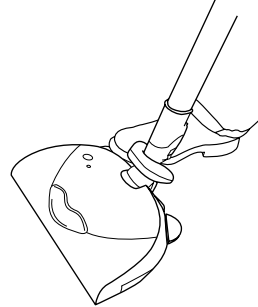

To determine which setting you are currently on, look through the height indicator window on the top of the unit. You will see one of the six settings detailed below:

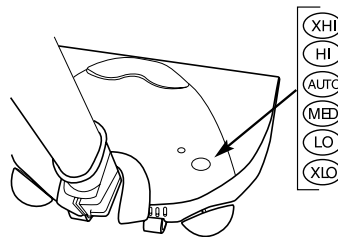

Setting:

1. XHI
2. HI
3. Auto
4. MED
5. LO
6. XLO

Intended Use:


- Very plush carpet
- Plush carpet
- General carpet thickness or bare floors
- Medium pile carpet
- Low pile carpet
- Indoor/Outdoor carpet

Using the Full Size Power Nozzle

Carpet Height Adjustment Tips: When using the power nozzle, start on the “Auto” setting. If pushing the power nozzle feels difficult, then adjust to a higher setting. If the power nozzle feels very easy to push, you may want to lower the power nozzle for more effective cleaning. The “Auto” setting is the recommended setting for hard floor surfaces (i.e. tile, vinyl, wood).

Warning Light/Dirt Sensor

Your power nozzle is equipped with a circuit breaker safety system that protects it from a jammed situation. Common items that cause jammed brushrolls include socks, excessive threads, corners of area rugs, etc. The warning indicator light on top of the unit will change from green to red should this condition occur.

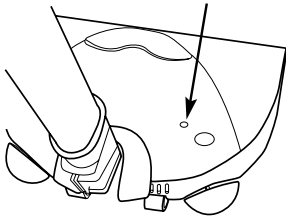


Dirt Sensor - Gusto Model Only

The warning light will change to orange if the dirt sensor detects dirt in the carpet and will change to green when the carpet is clean.

If the circuit breaker trips:

- Turn off the vacuum cleaner and power nozzle then unplug the power cord.
- Remove the object preventing the brushroll from turning.
- Locate the circuit breaker switch on the back of the power nozzle and press it to reset the breaker. When the unit is turned back on, the warning light should be green.

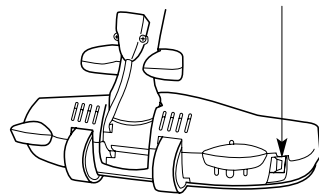


If the breaker trips again, repeat these steps again to correct the problem. If this does not correct the problem, contact your authorized Simplicity Vacuum retailer for further assistance.

Removing the Brushroll


IMPORTANT: Before performing any maintenance on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.

Your brushroll may need to be removed at times to cut threads that have become tangled around the brushroll or to replace the belt (see “Replacing the Power Nozzle Belt”).

To remove the brushroll, turn the unit over and take off the metal bottom plate by first removing the two bottom plate screws located by the rear wheels.

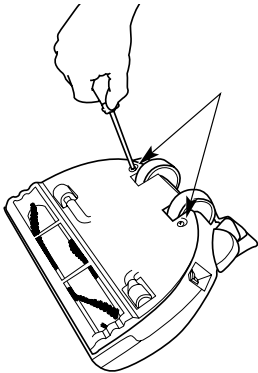

Remove the belt cover guard and pull the brushroll out.

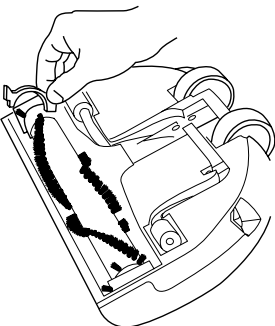


To reinstall the brushroll, reinsert the brushroll back into the unit (make sure the belt is attached properly). Next, insert the belt cover guard. Then, place the metal bottom plate back onto the unit (insert the front end of the bottom plate first). Re-insert the two bottom plate screws and secure.

Replacing the Power Nozzle Belt


IMPORTANT: Before performing any maintenance work on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.

To replace the power nozzle belt, you must first remove the brushroll (see “Removing the Brushroll”). Then locate and discard broken belt.

To install new belt, locate the power nozzle motor pulley and loop the belt around it.

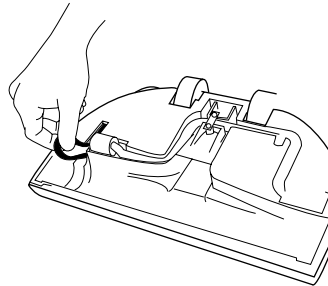


Place the other end of the belt around the brushroll making sure the belt is seated in the “belt groove” of the brushroll.

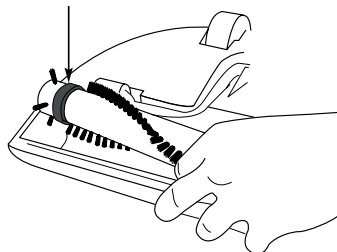

Maintenance and Care

Replacing the Power Nozzle Belt Cont.


Insert the brushroll back into the brushroll tray and place the belt guard back into position. Place the metal bottom plate onto the unit (insert the front end of the bottom plate first). Re-insert the two bottom screws and secure.

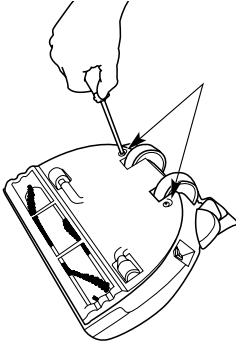


Replacing the Bulb

IMPORTANT: Before performing any maintenance work on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.


Turn the power nozzle over and remove the bottom plate by first removing the two bottom plate screws located by the rear wheels.

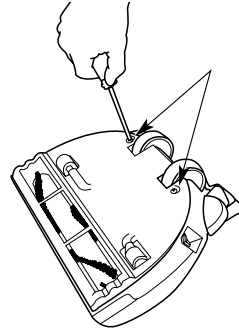

Remove the two top cover screws.

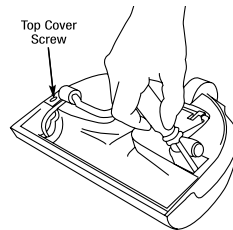

Turn the power nozzle back over, push the neck flat, and remove the top cover.

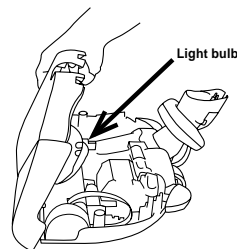

Simply pull the bulb out (no twisting) and reinsert a factory-authorized bulb. Place the top cover back on the unit, turn the machine over and re-insert the two top cover screws. Reinstall the bottom plate.

Troubleshooting Guide

Please check each item below if you have trouble with your vacuum.
Unplug the vacuum from the power supply before servicing.

Problem	Check Point	Possible Solution
Suction power is weak.	Vacuum bag	If vacuum bag is full, replace it.
	Wand or hose	If clogged or blocked, remove the object.
The vacuum does not work.	Is the hose adapter inserted into the suction opening of the vacuum completely?	Insert it completely.
	When the vacuum bag is full or any of the accessories are blocked, the over-heating protection for the motor is activated.	Turn the vacuum off and unplug the vacuum. Check the vacuum bag and accessories and remove any blockages. The vacuum can be turned on again after approximately 20 minutes.
Power cord does not rewind.	Power cord	Pull the power cord out a little and press the cord rewind button again.
Power cord won't pull out of the vacuum.	Power cord	Do not pull it out by force. Rewind it a little by pressing the cord rewind button and try pulling it out again.

Owner's Information (keep this for your records)

The model and serial number of this product may be found on the back side of the unit. You should note the model and serial number of your unit in the spaces provided below, and retain this book as a permanent record of your purchase.

Date of purchase _____

Serial number _____

Model number _____

Purchased from:

Store name _____

Address _____

City, State, Zip _____

Telephone _____

For Best Performance:

- Keep your canister clean and in good operating condition.
- Change vacuum bags once a month or when the bags are 2/3 full to maximize cleaning performance.
- Always use genuine vacuum bags and replacement parts. Use of other products may result in poor cleaning performance, potential vacuum cleaner damage and may void vacuum warranty. Genuine products are designed for maximum cleaning performance.
- Have your canister checked periodically by your Authorized Simplicity Vacuum Retailer.
- Use only Authorized Simplicity Vacuum Retailers for parts or service.
- Store your canister carefully in a dry area.
- For optimum cleaning performance and safety, follow your owner's manual instructions.

What is Covered:

This warranty covers any defects in material and workmanship in your new Simplicity vacuum and applies exclusively to the original purchaser.

How Long Coverage Lasts:

Warranty coverage for the Simplicity Moxie and Gusto canisters lasts five years. Household models used commercially are only warranted for 90 days.

What is Not Covered:

- Damage to the vacuum which occurs from neglect, abuse, alterations, accident, misuse or improper maintenance.
- Normal replacement items: filters, lightbulbs and disposable bags.

What Simplicity Vacuums Will Do:

This warranty provides, at no cost to you, all labor and parts to place this vacuum in correct operating condition during the warranted period.

How to Get Service:

Warranty service can only be obtained by presenting the vacuum to an Authorized Simplicity Vacuum Retailer. A proof-of-purchase and product serial number will be required before service is rendered. To locate your nearest Simplicity Vacuum Retailer, please call 1-888-9-SIMPLY or visit www.simplicityvac.com.

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER WARRANTIES WHETHER WRITTEN, ORAL, EXPRESSED OR IMPLIED, (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). THIS WARRANTY DISCLAIMS LIABILITY FOR INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

How State Law Applies:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Simplicity[®]
The vacuum you'll *flip* over.[™]

www.simplicityvac.com