BISSELL®

AEROSWIFT™

USER GUIDE

1009 SERIES

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

Always connect to a polarized outlet (one slot is wider than the other). Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

⚠WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

» Always connect to a polarized outlet (one slot is wider than the other). Do not modify the polarized plug to fit a non-polarized outlet or extension cord.

» Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.

» Do not use outdoors or on wet surfaces.

» Do not allow to be used as a toy. Close attention is necessary when used by or near children.

» Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.

» Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.

» Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

» Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

» Do not handle plug or vacuum cleaner with wet hands.

» Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.

» Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

» Turn off all controls before plugging or unplugging vacuum cleaner.

» Use extra care when cleaning on stairs.

» Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosine, etc.) or use in areas where they may be present.

» Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.

» Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).

» Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

» Do not use without filters in place.

» Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.

» Use only on dry, indoor surfaces.

» Keep appliance on a level surface.

» Do not carry the vacuum cleaner while it is running.

» Unplug before connecting or disconnecting the Turbobrush® Tool

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

Thanks for buying a BISSELL vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited two-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL vacuum.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

Safety Instructions 2

Product View 4

Assembly 5-6

Operations 6-7

Maintenance & Care 8-12

Troubleshooting 13

Replacement Parts 14

Warranty 15

Consumer Care 16

Product Registration 16

Product View

1 Quick Release Handle
2 TurboBrush® Tool
3 Crevice Tool
4 Tank Release Button
5 Stretch Hose
6 Carry Handle
7 Extension Tool
8 Power Cord
9 Bottom Empty Dirt Bin
10 Filter Tray
11 Height Adjustment Knob
12 Quick Release Handle Lever
13 Combination Dusting/ Upholstery Tool
14 Hose Wand Base
15 Power Foot Pedal
16 Handle Release Lever

⚠WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

⚠WARNING

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

⚠WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Assembly

No tools required! Remove all protective plastic before assembly and operating.

⚠WARNING

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

Attach Quick Release Handle to Base

1. Locate vacuum handle and remove the protective plastic overwrap.

NOTE: The plastic wrap will easily slide off the handle by removing the TurboBrush® Tool Clip.

2. With the Quick Release Lever in upright position – slide handle into base and push the lever down to lock handle into place.

1.

2.

Attach TurboBrush® Tool to Handle Clip

1. Locate the TurboBrush® Tool in the box and remove the protective plastic wrap.

2. Snap the TurboBrush® Tool Clip to the handle.

3. Line up the back of the TurboBrush® to the bottom of the clip - the top of the brush opening will rest over the bottom of the clip.

4. With the lower tool in position, push the top of the tool handle into the upper clip to secure.

1.

2.

3.

4.

TurboBrush® Tool

Attach Vacuum Hose and Secure Tools

1. Insert the end of the hose into the hose connector at the foot base inlet opening. Wrap the hose around the upper hose clip.

Note: Check that the tabbed end of the hose is connected and secured to the upper suction inlet. The vacuum will not operate properly unless the both hose ends are secure.

2. Check that the crevice tool is inserted into the extension wand in the storage post on the side of the vacuum.

3. Place the combo dusting/upholstery brush on the storage post located on the back of the unit under the wand release lever.

4. Wrap power cord around the cord wraps for storage.

1.

2.

Crevice Tool

3.

Combo Brush

4.

Power Cord Wrap

Assembly

Febreze® Foam Filter Option

Your vacuum comes with a standard foam filter (yellow) located in the lower filter tray. A separate Febreze® foam filter (black) is also packed in the box protected by a plastic bag. Replace the standard yellow foam filter with the Febreze® foam filter to eliminate odors and freshen as you vacuum.

NOTICE: Both foam filters are washable. Overtime, the Febreze® filter will begin to lose scent strength after use and washing. Reference the maintenance section for instructions on washing and replacing filters.

⚠WARNING

Do not operate cleaner with damp or wet filters or without vacuum bags and all filters in place.

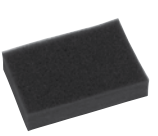

Filter

Filter Tray

Operations

Power Cord and Power Button:

1. To use your vacuum, remove the cord and plug into an electrical outlet. For quick cord access, rotate upper hook 180˚ and remove the cord. Rotate it back to store.

2. The power button pedal is located on lower back of the unit next to the handle release pedal.

2.

Floor Cleaning

1. Press POWER button pedal located at the base of the unit to start cleaning.

2. Press handle release lever with your foot to start floor cleaning mode. Handle release pedal lever is located next to POWER button pedal.

3. To clean under low furniture, press the handle release pedal lever again to lower the handle.

NOTICE: The floor brush will continue to rotate in upright position. To prevent carpet damage, do not lean on the vacuum or let the power foot tilt forward.

Febreze and related trademarks are owned by The Procter & Gamble Company, Cincinnati, Ohio and used under license by BISSELL Homecare, Inc.

Operations

5 Height Adjustments

Turn the height adjustment dial on the front of the power foot to match your cleaning needs. The graphics around the dial indicate the appropriate setting for cleaning bare floor to high pile carpet. Turn the dial to the center for medium pile carpet.

NOTE: If difficult to push, adjust to highest setting.

Above Floor Cleaning

Long Reach Cleaning

Ideal for cleaning areas with 5- to 10-foot required reach.

1. In upright position, lift the Quick Release Lever on the back of the vacuum to slide the Quick Release Handle out of the base.

2. Remove the hose from the hose wand base and connect to the open inlet at the handle.

3. Connect desired tool to the end of the wand for cleaning different above floor surfaces.

- **a. Extension Wand:** connect with a desired tool for a farther reach.
- **b. Crevice Tool:** use in tight, narrow spaces.
- **c. TurboBrush® Tool:** use air-driven power brush to clean areas such as stairs, furniture, and other areas too small to clean in floor cleaning mode.
- **d. Combo Dusting/Upholstery Brush:** use dusting brush to clean delicate surfaces; slide dusting brush off to clean upholstery and other hard surfaces.

1. **2.**

3a. **3b.**

3c. **3d.**

Short Reach Cleaning

Ideal for cleaning areas with below 5-foot required reach.

4. In upright position remove the hose from the hose wand base.

5. Attached desired tool to the end of the hose.

4. **5.**

NOTICE:
The brush will continue to rotate at the same speed at all settings.

NOTICE:
Refer to maintenance section if you observe a loss in suction performance while in floor cleaning mode.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited Two-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE two YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Visit BISSELL.com or contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website or E-mail:

www.BISSELL.com

Or Call:

BISSELL Consumer Care
1-800-237-7691
Monday – Friday 8am - 10pm ET
Saturday 9am - 8pm ET
Sunday 10am - 7pm ET

Or Write:

BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids, MI 49501
ATTN: Consumer Care

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.
You'll receive:

BISSELL Rewards Points
Automatically earn points for discounts and free shipping on future purchases.

Faster Service
Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts
We'll contact you with any important product maintenance reminders and alerts.

Special Promotions
Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration now!

BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday	8 am - 10 pm ET
Saturday	9 am - 8 pm ET
Sunday	10am - 7pm ET

Write:

BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids MI 49501
ATTN: Consumer Care

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 15 for details.

©2013 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-0238 Rev 12/12
Visit our website at: www.BISSELL.com