BISSELL®

WE MEAN CLEAN

Earn BISSELL Rewards!
Register your product today!
See details on back page

LIFT-Off®
FLOORS & MORE pet

USER'S GUIDE
53Y8, 75Q3 SERIES

2 Thank You
3 Safety Instructions
4 Product View
5 Assembly
5-6 Operations
6-9 Maintenance and Care
9-10 Troubleshooting
10 Replacement Parts
11 Warranty
12 Product Registration
12 Consumer Care

Thanks for buying a BISSELL Lift-Off® Floors & More Pet Vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL vacuum.

Thanks again, from all of us at BISSELL.

Mark J. Bissell
Chairman & CEO

DETACHABLE INNOVATION

Complete Line of BISSELL Lift-Off® Products

Lift-Off® Steam Mop | Lift-Off® Deep Cleaner | Lift-Off® Multi Cyclonic Vacuum | Lift-Off® Floors & More Cordless Stick Vacuum

For more information visit www.bissell.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM.

⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy.
- Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle charger, including charger plug and charger terminal with wet hands.
- Do not charge the unit outdoors.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it severely damaged. The batteries can explode in a fire.
- Do not put any object into opening.
- Do not use with any opening blocked.
- Keep openings free of dust, lint, hair and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning stairs.
- Do not pick up flammable materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapors.
- Always turn off this appliance before connecting or disconnecting the motorized nozzle.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup or filters in place.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

Product view

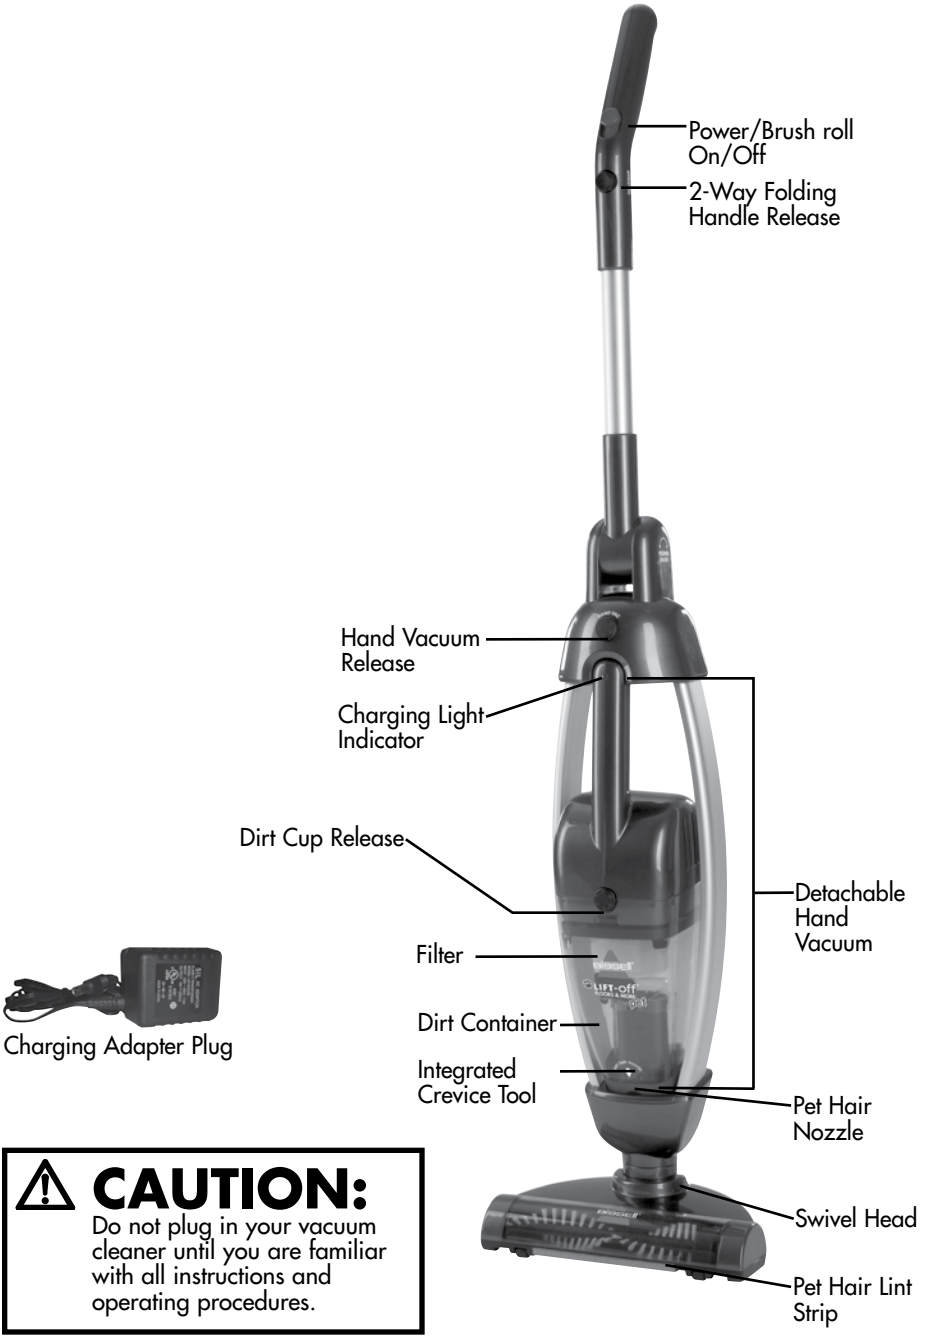

⚠ CAUTION:
Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

Assembly

No tools are required for assembly; simply insert foot into body of unit until you hear a click.

Charging

Before charging, make sure unit is in the OFF position.

1. Insert the charging adapter plug into the charging port on the back of the unit.

2. Plug the adapter into the wall outlet. The red indicator light will illuminate and remain on when plugged into wall outlet. Charge the unit completely for 24 hours prior to first use.

NOTE: The adapter may become warm during charging – this is normal.

3. When the unit is fully discharged, approximately 16 hours of charging is required for the battery to regain full capacity.

1.

Operations

Power switch

The power switch is located on the top of the handle. Settings include:

(O) = OFF

(I) = Suction ON

(BRUSH) = Suction and Brush ON

Using your stick vacuum

1. Push power switch on to desired setting.

2. Easily clean hard floors, low pile carpet, and area rugs.

3. When finished cleaning, turn power switch to OFF (O) position.

2-way folding handle

For cleaning under couches, beds and other hard to reach areas.

1. To release, push button located under power switch to bend handle forward for cleaning under furniture.

2. For space saving storage, push button to bend handle backward.

1. ——2-Way Folding Handle Release