BISSELL®

**Experts In Home Cleaning™**

# PEThair ERASER™

Cordless Hand Vacuum

## USER'S GUIDE

15E5 SERIES 220-240V

2 Thank You

3 Safety Instructions

4 Product View

5 Assembly

6 Operations

6-8 Maintenance and Care

9 Troubleshooting

10 Replacement Parts

11 Warranty

12 Consumer Care

## Thanks for buying a BISSELL Pet Hair Eraser™ Cordless Hand Vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL vacuum.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman, President & CEO

# IMPORTANT SAFETY INSTRUCTIONS

**When using an electrical appliance, basic precautions should be observed, including the following:**

**READ ALL INSTRUCTIONS BEFORE USING YOUR BISSELL VACUUM.**

## ⚠ WARNING -

## To reduce the risk of fire, electric shock, or injury:

- Store indoors.
- Do not expose to rain.
- Do not immerse.
- Do not handle with wet hands.
- Do not use if vacuum cleaner has been dropped, damaged, left outdoors or dropped into water, have it repaired at an Authorized Service Center.
- Do not use with damaged cord or plug on the charger.
- Do not unplug charger by pulling on cord.
- Do not damage the charger cord. Never carry or pull the charger unit by the cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use an extension cord. Charger should plug directly into electrical outlet.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not use with any opening blocked.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot, burning or smoking objects such as cigarettes, matches or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not allow to be used as a toy.
- Not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Use only the charger supplied by BISSELL (packaged with your appliance) to recharge your BISSELL Vacuum.
- Use charger unit only in standard electrical outlet (220-240V~50/60 Hz.).
- Keep openings free of dust, lint, hair, etc.
- Unplug charger unit from outlet before maintenance or cleaning.
- Unplug by grasping the plug, not the cord.
- Be extra careful when cleaning stairs.
- Turn off all controls when finished cleaning.
- Do not charge the unit outdoors.

Your Pet Hair Eraser Hand Vacuum contains rechargeable nickel metal hydride (NiMH) batteries. Do not incinerate batteries or they can explode when exposed to high temperatures.

Battery cell leaks can occur under extreme conditions. If battery cell contents comes in contact with the skin:

- Flush immediately with warm water for at least 15 minutes, then wash with soap and water.

If battery cell contents comes in contact with the eyes:

- Flush immediately with clean water for a minimum of 15 minutes
- Seek medical attention.

## SAVE THESE INSTRUCTIONS FOR FUTURE USE.

**IMPORTANT** FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

# Product view

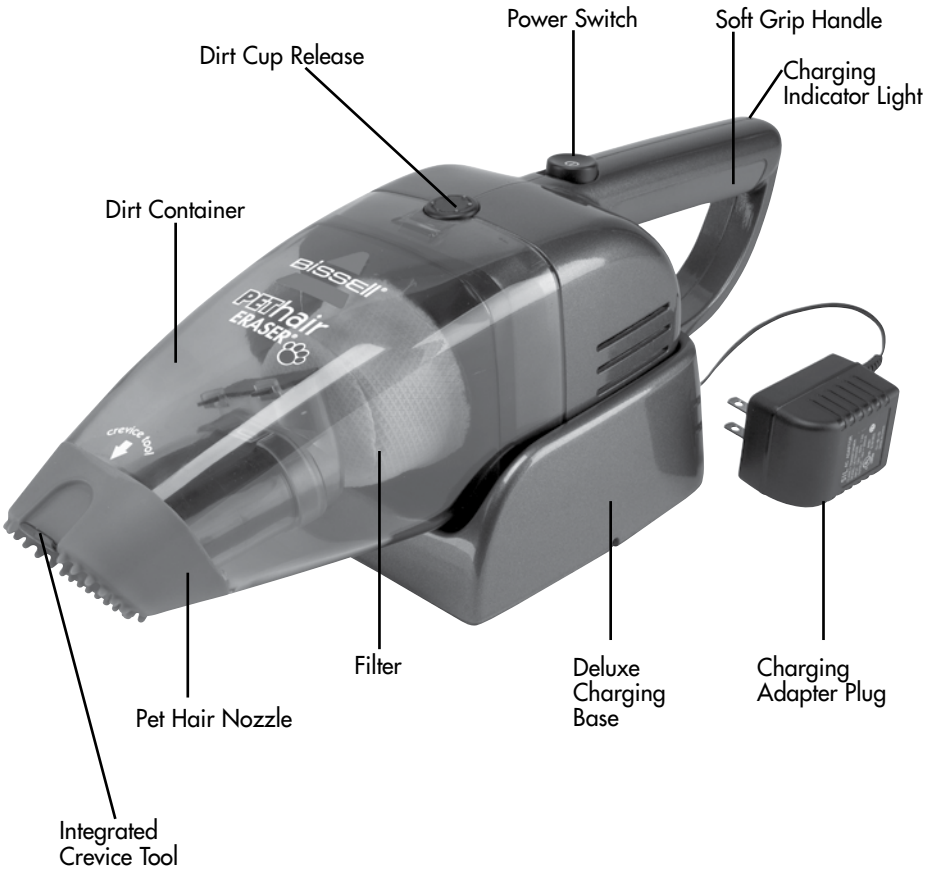


**⚠ CAUTION:**
Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

## Deluxe charging base

**The included charging base can be mounted on the wall or sit on a table top.**

**Mounting on wall (optional)**

**1.** Select an area close to a wall outlet and make sure the wall area is free from any hidden electrical wires, water pipes and gas lines.

**NOTE: Do not mount near direct sunlight, near a heat source or outdoors.**

**2**. Select an appropriate drill type for the material to be drilled.

**3.** Carefully measure and mark the location of the screw holes and then drill holes and screw the wall mounting base onto the wall.

**3.**

## Charging

*****IMPORTANT*****

**ALWAYS TURN UNIT OFF PRIOR TO CHARGING***

***failing to do so may result in battery not fully charging**

**1.** In order for the unit to charge, the hand vac must be securely in the charging base, with the charging contacts fully engaged.

**2.** Plug the charging base adaptor into the wall outlet. The red indicator light will illuminate and remain on when plugged into wall outlet. Charge the unit completely for 24 hours prior to first use.

**NOTE: The adaptor may become warm during charging – this is normal.**

**3.** When the unit is fully discharged, approximately 16 hours of charging time is required for the battery to regain full capacity.

**1.**

# Operations

## Power switch

**The power switch is located on the top of the handle**

**2.**



Power Switch

## Using your hand vacuum

**1.** Remove unit from the charging base.

**2.** Slide switch forward to turn unit ON ( I ), slide back to turn OFF ( O ).

## Rubber Pet Nozzle

**The rubberized nozzle is designed to attract and pull pet hair and dirt from upholstery and carpet.**

## Integrated Crevice Tool

**For hard to reach messes use the integrated crevice tool. To access crevice tool, pull on tab indicated by arrow on front of hand vac nozzle. Listen for click to know crevice tool is ready to use. When finished cleaning, simply push crevice tool back into unit.**

# Maintenance and care

**To maintain maximum cleaning performance, the following maintenance steps must be performed:**

## Emptying the dirt cup

**Dirt cup should be emptied before debris reaches the FULL line on cup.**

**2.** **3.**

**1.** Turn power OFF ( O ).

**2.** Hold the hand vacuum vertically and depress release button on the front to release dirt container.

**3.** Gently pull dirt container away from the hand vacuum grip and remove the filter. Empty dirt into waste container.

**4.** Replace filter back into the dirt container and attach dirt container to hand vacuum until it snaps securely into place.