BISSELL®

WE MEAN CLEAN

Earn BISSELL Rewards!
Register your product today!
See details on page 2

PowerFresh™ Steam Mop

USER'S GUIDE
1940 SERIES

2 Thank You

3 Safety Instructions

4 Product View

5 Assembly

6 Special Features

7-9 Operations

9 Maintenance and Care

10 Troubleshooting

10 Replacement Parts & Additional Accessories

11 Warranty

12 Product Registration

12 Consumer Care

Thanks for buying a BISSELL PowerFresh™ Steam Mop

We're glad you purchased a BISSELL PowerFresh™ Steam Mop. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL PowerFresh Steam Mop is well made, and we back it with a limited two-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL PowerFresh Steam Mop.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your PowerFresh Steam Mop.

⚠WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not direct steam at people, animals, or at electrical outlets.
- Do not expose to rain.
- Store indoors.
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- Do not leave steam cleaner unattended.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not service steam cleaner when it is plugged in.
- Do not handle steam cleaner with wet hands.
- Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- Do not unplug by pulling on cord.
- Do not use appliance in an enclosed space filled with vapor given off by oil-base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not allow to be used as a toy.
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- Do not immerse.
- Not for space heating purposes
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments – use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Never put descaling, aromatic, alcoholic or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.
- Unplug by grasping the plug, not the cord.
- Close attention is necessary when used by or near children.

SAVE THESE INSTRUCTIONS

Commercial use of this unit void the manufacturer's warranty.

THIS APPLIANCE HAS A POLARIZED PLUG.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider then the other) This plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

This model is for household use only.

Product view

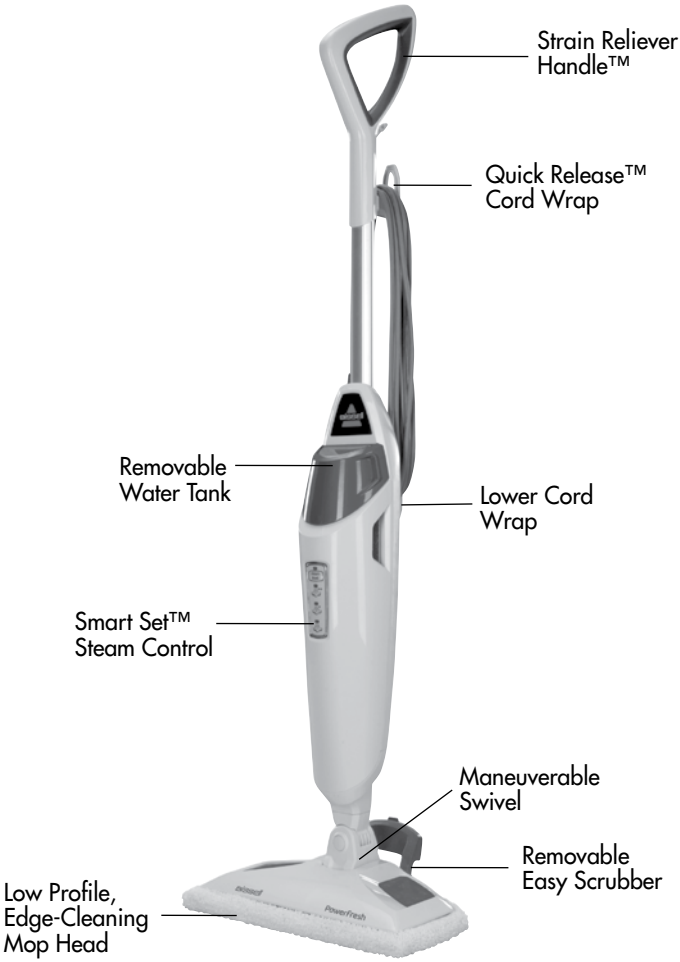

Optional Accessories:



Washable Microfiber Mop Pads with Microban® Antimicrobial Product Protection (2-pack)

Removable & Washable Easy Scrubber

Spring Breeze Fragrance Discs Replacement Pack (2-pack)

Assembly

Your PowerFresh™ Steam Mop assembles quickly and easily. It is packaged with the following items:

Handle Assembly with one screw

Lower Body

Maneuverable Mop Head

Removable Water Tank

Removable Easy Scrubber (attached to mop head)

2 - PowerFresh™ Steam Mop Pads

2 - Spring Breeze Fragrance Discs

1. Attach lower body to mop head by snapping it into place.

2. Slide handle assembly down and screw until tightened.

PowerFresh Steam Mop assembly is now complete.

Removable Water Tank

2 PowerFresh Steam Mop Pads

1

2

Special features

Removable water tank

The water tank is located on the top of the PowerFresh™ Steam Mop. It can be refilled with water any time during use. Distilled or demineralized water is recommended in place of tap water.

Do not use chemicals in the water tank of your PowerFresh Steam Mop.

SmartSet™ Steam Control (Low, Medium, High)

SmartSet™ Steam Control indicator light will stop blinking when PowerFresh™ Steam Mop is ready to use. Then press the Steam Level button to choose the level of steam you desire.

Microfiber Mop Pads with Microban® Antimicrobial Product Protection

Reusable microfiber mop pads are machine washable and safe for virtually all hard floor surfaces. Your PowerFresh may have come with two different pads. The white microfiber pad is best for everyday use on delicate flooring like sealed hardwoods and laminate. The gray and white striped pad can be used for scrubbing heavily soiled floors and cleaning tougher messes. The Microban® Antimicrobial Product Protection fights odor causing bacteria for a fresher and cleaner mop pad.

Removable Easy Scrubber

Quickly clean sticky messes by pressing the Easy Scrubber with your foot and locking it into position. Clean grout and crevices easily with this effective tool.

Tip:

Do not attempt to use your PowerFresh Steam Mop without water in the tank. You may hear a knocking sound indicating there is no water.

Getting ready

The mop pad may have already come attached to the mop head, if not follow steps 1A and 1B below.

1A **1B**

1. Add Freshening Disc and Attach Mop Pad

- **A.** Insert Spring Breeze Freshening Disc into pocket inside mop pad. Use the whole disc for a refreshing scent or cut in half for a lighter scent.
- **B.** Set mop head in mop pad, making sure quick-grip release tab is located on the back.

2A **2B**

2. Fill the water tank

- **A.** Remove tank by lifting straight up and away from unit.
- **B.** Unscrew cap at bottom of water tank.
- **C.** Fill water tank with water. For best results, water should be at room temperature.
- **D.** Replace the cap, tighten until snug.
- **E.** Replace water tank by gently sliding tank into place and press down firmly.

3. Twist the Quick Release™ cord wrap clockwise to unwrap the power cord completely and plug into a 120-Volt outlet as described on the **Important Safety Instructions**, page 3.

4. SmartSet™ Steam Select Indicator light will glow when PowerFresh Steam Mop is ready to use. Press the Steam Level button to choose the level of steam you desire.

NOTE: Upon first use of the PowerFresh™ Steam Mop or first use after refilling the water tank, the pump may make a "knocking" sound. This is normal and should only last a few seconds.

Tip:

Use of distilled water is recommended to prolong the life of your PowerFresh Steam Mop,