BISSELL®

Earn BISSELL Rewards!
Register your product today!
See details on back page

PRO lite®

USER'S GUIDE

17G5 SERIES

2 Thank You

3 Safety Instructions

4 Product View

5-6 Assembly

6-8 Operations

9-12 Maintenance and Care

13 Troubleshooting

14 Replacement Parts

14 Accessories

15 Warranty

16 Product Registration

16 Consumer Services

Thanks for buying a BISSELL PROlite Multi Cyclonic Vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited five year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL vacuum.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman, President & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

Always connect to a polarized outlet (left slot is wider than right). Unplug from outlet when not in use and before conducting maintenance.

⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

- Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- Do not leave vacuum cleaner unattended when it is plugged in.
- Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow children to operate vacuum cleaner or use as a toy.
- Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug.
- If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle vacuum cleaner or plug with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before plugging or unplugging vacuum cleaner.
- Use extra care when cleaning stairs.
- Do not pick up flammable materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapors.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

THIS APPLIANCE HAS A POLARIZED PLUG.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

This model is for household use only.

Product view

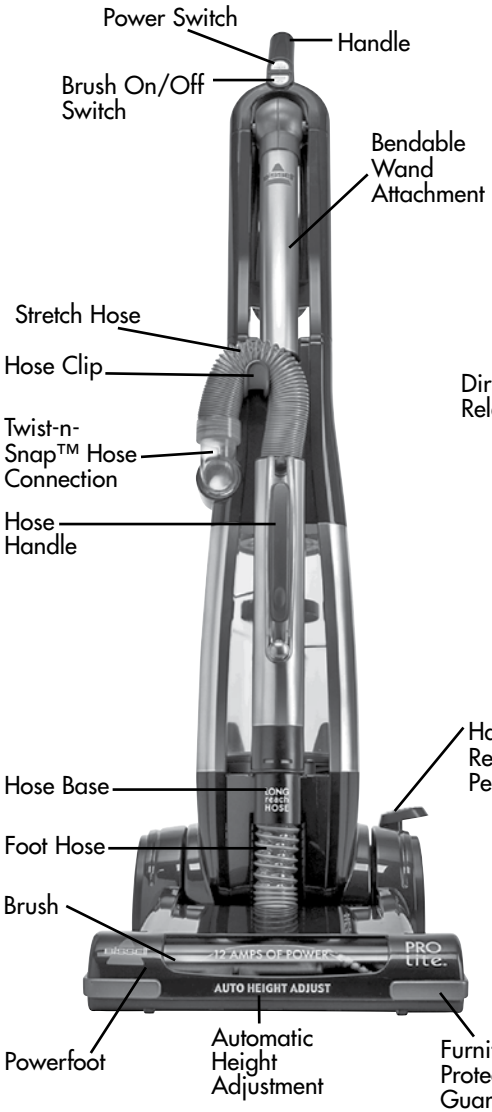

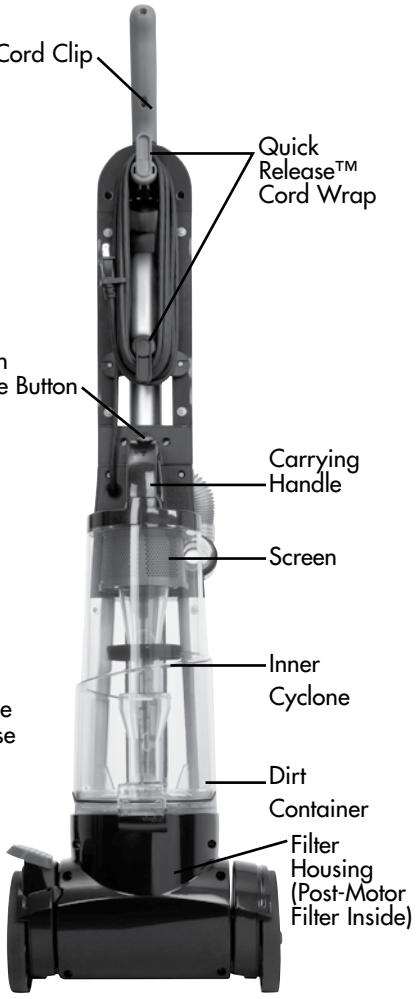

⚠ CAUTION:

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

Assembly

The only tool you'll need to assemble your vacuum cleaner is a Phillips head screwdriver.

Remove handle and tools from box

1. Locate and remove the deluxe floor tool, extension wand, bendable wand attachment, dusting brush, TurboBrush®, crevice tool and accessory bag from box.
2. Locate and remove vacuum handle and Twist 'n Snap Hose and set aside.
3. Lift vacuum body out of box using carrying handle on dirt container.

⚠ WARNING:
Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

Attach handle to vacuum

1. Take vacuum handle and remove the screw packet taped to the base of the handle.
2. Stand the vacuum upright and slide the base of the handle firmly into the grooves at the top of the vacuum body.
3. Check to be sure the handle is fitted to the vacuum body. If there is a gap in front, continue to push firmly until the handle is flush.
4. Insert the two screws from the screw packet into the existing holes. Tighten securely with a screwdriver.

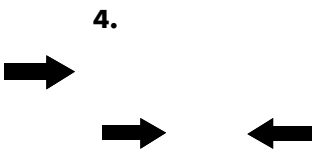

Attach vacuum hose & on-board tools

1. Position the Twist 'n Snap Hose assembly on the vacuum and line up the tabs on the base of the hose with the corresponding notches. Turn the Twist 'n Snap Hose to the right to lock into place.
2. Slide the end of the hose into the hose base.Make sure the tab on hose wand inserts into hole on front side of handle. Place the hose into the hose clip.

   NOTE: The powerfoot will not operate effectively unless the hose is firmly attached to the base.
3. Snap the bendable wand attachment into front side of handle.
4. Place the remaining tools into accessory bag.

Rotating brush and drive belt maintenance continued

9. Place one end of the drive belt over motor pulley and the other end over the brush in the space between the bristles. Ensure the grooves on the belt line up with the grooves on the motor pulley and the brush.

10. Push the belt side of the brush down into the slots on the side and then push the non-belt side into the slots.

11. Reposition brush cover and screws. Tighten screws securely.

12. Plug in vacuum and make sure motor turns on.

10.

Brush reset

The brush power switch will blink 5 times and the motor will shut off if the rotating brush is jammed. To reset the brush, turn the cleaner off and unplug from the outlet. Remove the obstruction. The brush will automatically reset when the cleaner is plugged in and turned back on.

Cleaning clogs

Low suction or poor pickup may be due to a clog in the vacuum cleaner. If you notice a change in the sound of the motor or a reduction in the spinning action, check for clogs.

1. Unplug cleaner from electrical outlet.

2. Empty dirt container.

3. Check Tank for build up or clogs.

4. Remove the inner cyclone and check suction inlets for a clog.

5. Grasp the hose handle and lift to separate from the suction opening. Check for a clog in the base or the hose.

4.

5.

To remove clogs from the hose base:

6. Recline handle and turn vacuum cleaner over so bottom side is up. Locate and turn the quick release tabs on the foot hose cover as shown and pivot the cover out to remove.

7. Pull foot hose straight up to remove from foot base. Turn the vacuum back over, straighten the foot hose and unclog with a long, narrow object such as a broomstick.

6.

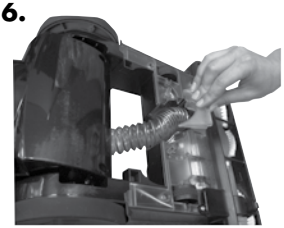

Cleaning clogs continued

To remove clogs from the hose:

8. Release the Twist n' Snap hose from the vacuum by turning to the left. Straighten the hose and unclog with a long, narrow object such as a broomstick.

9. If the low suction persists, follow the instructions for Checking the Rotating Brush on page 10 and inspect the air passageway for obstructions.

TurboBrush maintenance

The TurboBrush should be checked regularly for clogs or debris wrapping around the brush.

1 Twist collar so opening is at the top and lift top cover to remove.

2. Remove the brush from the belt and clean debris.

3. Replace the brush inside the belt and place ends into slots on sides as shown.

4. Reposition top cover making sure to line up inside tab at the front with the opening on the cover. Twist collar until opening is at the bottom to lock into place.

Electronic protector

An internal electronic protector has been designed into your cleaner to protect it from overheating. When the electronic protector activates, both power buttons will flash continuously and the cleaner will stop working. If this happens, proceed as follows:

1. Turn the cleaner OFF by pressing the ⏻ power switch and unplug from electrical outlet.

2. Check the inner cyclone area, pre-motor filter and post-motor filter for dirt accumulation.

3. Refer to the "Cleaning Clogs" section on pg.12.

4. After the above steps are completed, plug vacuum in and continue cleaning. If the electronic motor protector continues to activate after following the above steps, your cleaner may need servicing. Call BISSELL Consumer Services, or visit the website.

9.

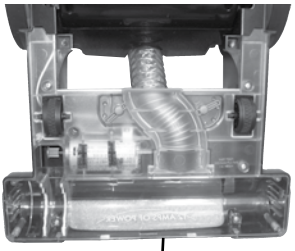

Air Passageway

1.

3.

4.

⚠Caution:

To reduce the risk of injury from moving parts, turn off vacuum cleaner and disconnect power plug from electrical outlet.

Troubleshooting

⚠ WARNING:
To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Vacuum cleaner won't turn on

Possible causes	Remedies
1. Power cord not firmly plugged in	1. Check electrical plug
2. Blown fuse/tripped breaker	2. Check/replace fuse or reset breaker
3. Electronic protector activated	3. Turn vacuum off and unplug, see page 12
4. Hose handle not full attached	4. Remove handle and reinstall

Brush not rotating fully

Possible causes	Remedies
1. Brush switch turned "OFF"	1 Make sure brush switch is pushed "ON"
2. Vacuum is in upright position	2. Recline vacuum to operate brush
3. Brush is jammed	3. Remove obstruction or debris unplug cleaner and reset brush (pages 11 & 12)
4. Brush needs to be reset	4. Unplug cleaner to reset brush (page 11)
5. Handle not fully attached	5. Remove handle and reinstall

Vacuum cleaner won't pick up or low suction

Possible causes	Remedies
1. Hose wand not properly positioned	1. Make sure hose wand is fully seated in base
2. Dirt container not installed properly	2. Correctly position and snap into place
3. Dirt container full	3. Empty dirt container
4. Clog in cleaner	4. Follow instructions on page 11
5. Filters are dirty	5. Check and clean foam filter, check and replace post-motor filter cartridge if needed
6. Hose not properly attached	6. Check Twist-n-Snap hose connection and make sure hose is securely in hose base

Visible dirt escaping from cleaner

Possible causes	Remedies
1. Dirt container full	1. Empty dirt container
2. Filters or inner cyclone missing or installed incorrectly	2. Check inner cyclone, pre-motor and post-motor filters for correct installation
3. Dirt container not installed properly	3. Make sure dirt container is correctly postioned and snapped into place
4. Hose not installed properly	4. Make sure hose wand is fully seated in base
5. Hole or crack in hose	5. Check hose for holes or cracks and replace as needed

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Replacement parts - BISSELL vacuum

You may purchase parts from your retailer, by calling BISSELL Consumer Services or by visiting our website.

Item	Part No.	Part Name
1	203-2050	Style 20 Drive Belt (2-Pack)
2	203-2011	Twist 'n Snap Hose and Handle
3	203-2054	Brush Roll - Grey
4	203-2091	Style 20 Pre-Motor Filter
5	203-2093	Style 20 Post-Motor Filter
6	203-2097	Inner Cyclone Assembly

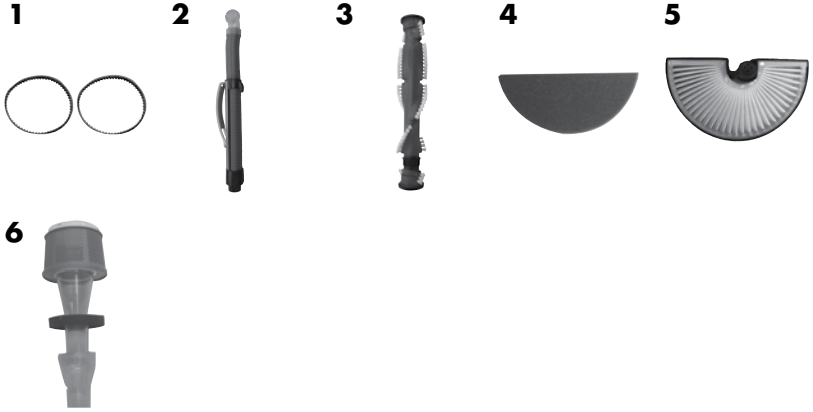

Accessories

These items are available for purchase as accessories for your BISSELL PROlite Multi Cyclonic: To purchase call 1-800-237-7691 or visit www.bissell.com.

Item	Part No.	Part Name
1	203-2002	Crevice Tool
2	203-1429	TurboBrush®
3	203-2001	Dusting Brush
4	203-2003	Extension Wand
5	203-2004	Deluxe Floor Tool
6	203-2006	Bendable Wand Attachment

Warranty - BISSELL PROlite Vacuum

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, or regular mail as described below.

Limited Five Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL Homecare, Inc. will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for five years any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

If your BISSELL product should require service:

Contact BISSELL Consumer Services to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Services.

Website or E-mail:
www.bissell.com
Use the "Customer Services" tab.

Or Call:
BISSELL Consumer Services
1-800-237-7691
Monday - Friday 8 a.m. - 10 p.m. ET
Saturday 9 a.m. - 8 p.m. ET

Or Write:
BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids, MI 49501
ATTN: Consumer Services

BISSELL HOMECARE, INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE FIVE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

Don't forget to register your product!

Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive:

BISSELL Rewards Points
Automatically earn points for discounts and free shipping on future purchases.

Faster Service
Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts
We'll contact you with any important product maintenance reminders and alerts.

Special Promotions
Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.bissell.com/registration now!

BISSELL consumer services

For information about repairs or replacement parts, or questions about your warranty, call:

BISSELL Consumer Services
1-800-237-7691

Monday - Friday 8 a.m. — 10 p.m. ET
Saturday 9 a.m. — 8 p.m. ET

Or write:
BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids MI 49501
ATTN: Consumer Services

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.
Please record your Model Number: _____
Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 19 for details.

©2013 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 110-4216
Rev 09/13
Visit our website at:
www.bissell.com