BISSELL®

WE MEAN CLEAN

Earn BISSELL Rewards!
Register your product today!
See details on page 2

SPOTbot®

USER'S GUIDE

33N8, 78R5 SERIES

2 Thank You

3 Safety Instructions

4-5 Product View

6 Special Features

7-11 Operations

12-13 Troubleshooting

14 Replacement Parts

14 Accessories

15 Warranty

16 Product Registration

16 Consumer Services

Thanks for buying a BISSELL SpotBot Portable Cleaner

We're glad you purchased a BISSELL SpotBot portable cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL SpotBot portable cleaner is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL SpotBot portable cleaner.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your SpotBot®.

⚠ WARNING: To

reduce the risk of fire, electric shock, or injury:

- Use only BISSELL cleaning products intended for use in this appliance.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments.
- Do not expose to rain, store indoors.
- Do not handle SpotBot plug or appliance with wet hands.
- Do not put any object into appliance openings or use with blocked openings. Keep free of dust, lint, hair, and anything that may reduce air flow.
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage. See the Cleaning Fluid section of this guide.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Keep appliance on a level surface.
- Be extra careful when cleaning stairs.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not pick up hot or burning objects, such as cigarettes matches or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.).
- Do not use appliance in an enclosed space filled with vapors given off by oil based thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces.
- Do not use with damaged cord or plug.
- Turn off all controls before unplugging.
- Unplug from outlet when not in use and before conducting maintenance and troubleshooting.
- Do not use SpotBot if it is not working as it should, has been dropped, damaged, left outdoors or dropped into water. Have it repaired at an Authorized Service Center.
- Unplug by grasping the plug, not the cord. Do not unplug by pulling on cord.
- Always connect to a properly grounded outlet; see grounding instructions.
- Do not use without tanks in place.
- Do not modify the 3-prong grounded plug.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

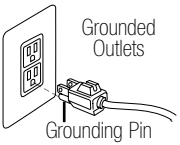

⚠ WARNING:

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. DO NOT MODIFY THE PLUG. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the drawing above. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

This model is for household use only.

Product view

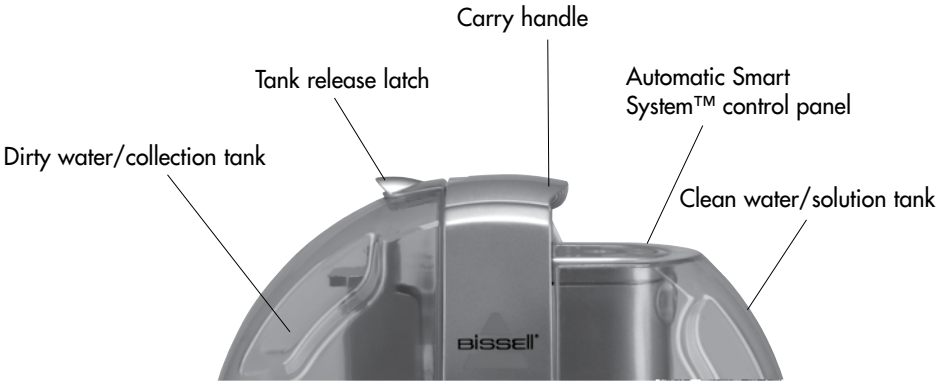

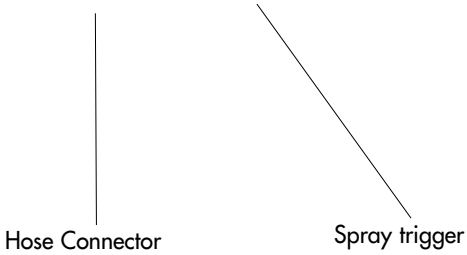

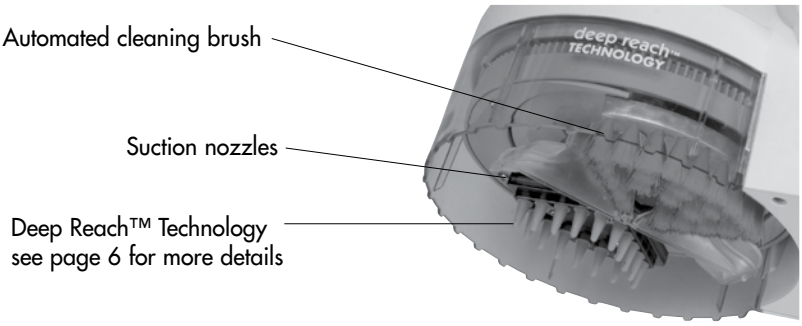

Troubleshooting

Automated cleaning

SpotBot will not run

Possible causes	Remedies
1. Power cord not plugged in	1. Check electrical plug
2. Blown fuse/tripped breaker	2. Replace household fuse or reset breaker
3. Vacuum flex hose is not snapped into place securely	3. Check to make sure the vacuum flex hose is snapped into place

Unusual or odd noise

Possible causes	Remedies
1. Clean water/solution tank is out of fluid	1. Fill clean water/solution tank

Reduce or no spray

Possible causes	Remedies
1. Clean water/solution tank is out of fluid	1. Fill clean water/solution tank
2. Clean water/solution tank is not inserted into the unit securely	2. Gently press the clean water/solution tank until you see "bubbles" coming from the base of the tank
3. Deep Reach spray tips clogged	3. Clean Deep Reach spray tips

No suction

Possible causes	Remedies
1. Tank is full	1. Empty tank
2. Dirty water/collection tank latch is not down	2. Push latch down, securely into place
3. Black valve on the dirty water/collection tank is missing	3. Replace black valve into dirty water/collection tank

Troubleshooting

Manual cleaning

Cleaner will not run

Possible causes	Remedies
1. Power cord not plugged in	1. Check electrical plug
2. Blown fuse/tripped breaker	2. Replace household fuse or reset breaker
3. Hose not removed from receiver	3. Remove hose
4. SpotBot shut off automatically during use	4. Press start button to resume manual cleaning

Unusual or odd noise

Possible causes	Remedies
1. Clean water/solution tank is out of fluid	1. Fill clean water/solution tank

Reduce or no spray

Possible causes	Remedies
1. Spray tip clogged on Tough stain brush	1. Clean spray tip
2. Clean water/solution tank is out of fluid	2. Fill clean water/solution tank
3. Clean water/solution tank is not inserted into the unit securely	3. Gently press the clean water/solution tank until you see "bubbles" coming from the base of the tank

No suction

Possible causes	Remedies
1. Tank is full	1. Empty tank
2. Dirty water/collection tank latch is not down	2. Push latch down, securely into place
3. Black valve on the dirty water/collection tank is missing	3. Replace black valve into dirty water/collection tank

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Replacement parts - BISSELL SpotBot®

Item	Part No.	Part Name
1	203-7471	Dirty Water/Collection Tank (33N8 series)
2	203-7472	Dirty Water/Collection Tank (78R5 series)
3	203-7473	Dirty Water/Collection Latch (33N8 series)
4	203-7473	Dirty Water/Collection Latch (78R5 series)
5	203-7475	Clean Water Tank (33N8 series)
6	203-7476	Clean Water Tank (78R5 series)
7	203-7477	Cap & Insert
8	203-7480	Mounting Bracket 3" Tool (33N8 series)
9	203-7481	Mounting Bracket 3" Tool (78R5 series)
10	203-7488	Cord Wrap, Upper & Lower (33N8 series)
11	203-7488	Cord Wrap, Upper & Lower (78R5 series)

1/2

3/4

5/6

7

8/9

10/11

Accessories

Item	Part No.	Part Name
1	203-6651	3" Tough Stain Brush
2	203-6652	TurboBrush® Tool
3	203-6653	4" Upholstery Tool
4	203-6654	6" Wide Stair Tool
5	203-6655	Spraying Crevice Tool
6	203-7490	Storage Tray
7	79B9	2X Little Green® Formula 32 oz.
8	79B9-1	2X Little Green® Formula 16 oz.
9	74R7	2X Pet Stain for Compacts formula 32 oz.
10	74R7-1	2X Pet Stain for Compacts formula 16 oz.
11	0801	Oxy GEN2® formula 32 oz

1

2

3

4

5

6

7/8

9/10

11

Warranty - BISSELL SpotBot®

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, or regular mail as described below.

Limited One Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

If your BISSELL product should require service:

Contact BISSELL Consumer Services to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Services.

Website or E-mail:
www.bissell.com

Or Call:
BISSELL Consumer Services
1-800-237-7691
Monday – Friday 8 am - 10 pm ET
Saturday 9 am - 8 pm ET

Or Write:
BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids, MI 49501
ATTN: Consumer Services

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**
THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Don't forget to register your product!

Registering is quick, easy and offers you benefits over the lifetime of your product. You'll receive:

BISSELL Rewards Points
Automatically earn points for discounts and free shipping on future purchases.

Faster Service
Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts
We'll contact you with any important product maintenance reminders and alerts.

Special Promotions
Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.bissell.com/registration now!

BISSELL consumer services

For information about repairs or replacement parts, or questions about your warranty, call:

BISSELL Consumer Services
1-800-237-7691

Monday – Friday 8 am - 10 pm ET
Saturday 9 am - 8 pm ET

Or write:
BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids MI 49501
ATTN: Consumer Services

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.
Please record your Model Number: _____
Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 15 for details.

©2012 BISSELL Homecare, Inc
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4469
Rev 1/12
Visit our website at:
www.bissell.com