BISSELL®

Experts In Home Cleaning™

STEAMmop SELECT™

USER'S GUIDE

23V8-Z SERIES

2 Thank You

3 Safety Instructions

4 Product View

5 Assembly

7-8 Operations

9 Maintenance and Care

9-10 Troubleshooting

10 Replacement Parts

10 Additional Accessories

11 Warranty

12 Product Registration

12 Consumer Services

Thanks for buying a BISSELL Steam Mop Select

We're glad you purchased a BISSELL Steam Mop Select. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL Steam Mop Select is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL Steam Mop Select.

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR STEAM MOP SELECT.

Always connect to a properly Earthed outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.

⚠WARNING: To reduce the risk of fire, electric shock, or injury:

- Use indoors only
- Do not immerse
- Use only on surfaces moistened by cleaning process
- Do not leave machine when it is plugged in
- Do not service machine when it is plugged in
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard
- Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
- Do not expose to rain, store indoors
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces
- Do not carry the appliance while in use
- Do not unplug by pulling on cord; unplug by grasping plug not the cord
- Do not handle plug or appliance with wet hands
- Do not put any object into appliance openings, use with blocked opening or restrict air flow
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts
- Do not pick up hot or burning objects
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours
- Remove plug from electrical outlet before cleaning or maintaining the appliance
- Do not run appliance over supply cord. A hazard may occur if the appliance runs over the supply cord
- Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Young children should be supervised to ensure that they do not play with the appliance
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not modify the Earthed plug
- Do not allow to be used as a toy
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface
- Turn off all controls before unplugging
- Be extra careful when cleaning stairs
- Liquid or steam must not be directed towards equipment containing electrical components
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

⚠WARNING:

This appliance must be Earthed.

⚠ The symbol  means WARNING: Danger of scalding.

⚠ Surface may be hot. Avoid contact.

IMPORTANT

FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. Spares may be obtained from your BISSELL supplier. If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.

Product view

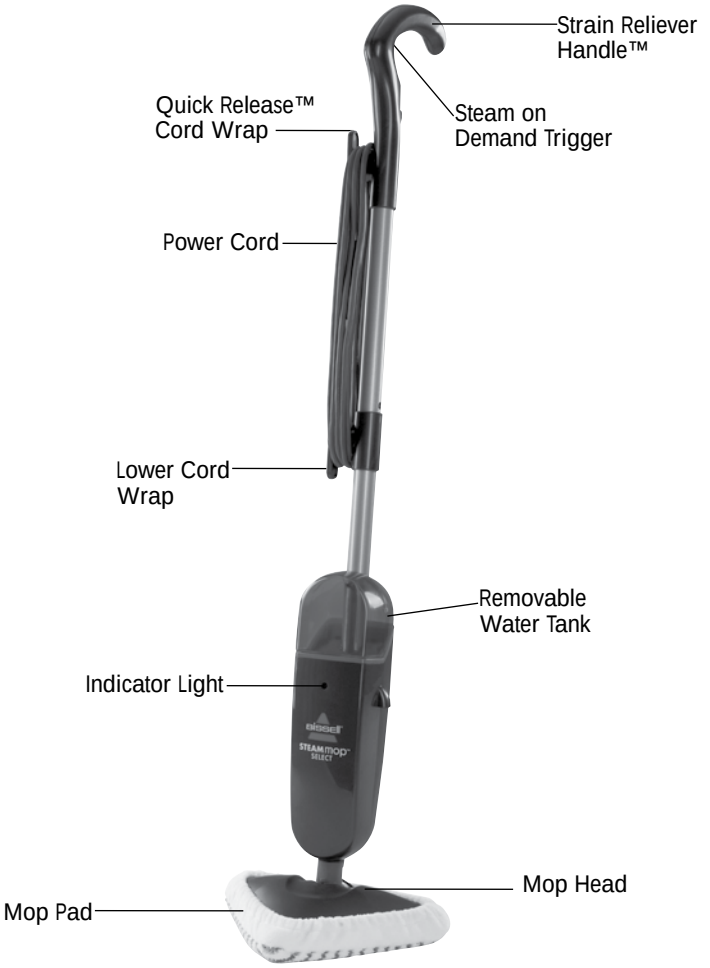

Optional Accessories:

Washable Mop Pads-2 Pack

Steam Mop Scented Water-Eucalyptus Mint

Assembly

Your Steam Mop Select assembles quickly and easily. Your Steam Mop Select is packaged with the following items:

- **Handle Assembly**
- **Lower Body**
- **Maneuverable Mop Head**
- **Removable Water Tank**
- **2 Steam Mop Select Mop Pads**

1. Attach lower body to mop head by snapping it into place.

2. Slide handle assembly down into lower body until it snaps into place.

3. Slide water tank onto lower body and gently push tank into place.

Steam Mop Select assembly is now complete.

Removable Water Tank

Triangular Mop Pads

1

3

Special features

Removable Water Tank
The water tank is located on the top of the Steam Mop Select. It can be refilled with water any time during use. Distilled or demineralized water is recommended in place of tap water.

Do not use chemicals with your Steam Mop Select.

Indicator Light
The indicator light will glow when the Steam Mop Select is plugged in.

Maneuverable Mop Head

This triangular mop head allows you to clean in tight spaces and under cabinets.

Reusable Mop Pads

These reusable microfiber mop pads are machine washable and safe for fully sealed hard floor surfaces. The all-white "soft" pad is best for everyday use on delicate flooring like sealed hardwoods and laminate.
The gray and white striped pad can be used for scrubbing heavily soiled floors and tougher messes.

Steam on Demand Trigger
Press to release steam.

Tip:

Do not attempt to use your Steam Mop Select without water in the tank.