BISSELL®

WE MEAN CLEAN

Earn Reward Points
register your new product today!
on back page

VAC&shine™

USER'S GUIDE

60P4 SERIES

2 Thank You

3 Safety Instructions

4 Product View

5 Assembly

6-7 Operations

7-8 Maintenance and Care

9 Troubleshooting

10 Replacement Parts

11 Warranty

12 Product Registration

12 Consumer Services

Thanks for buying a BISSELL Vac&Shine™

We're glad you purchased a BISSELL Vac&Shine™. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your Vac&Shine™ is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your .

Thanks again, from all of us at BISSELL.



Mark J. Bissell
Chairman, President & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR VAC&SHINE™ CORDLESS HARD FLOOR CLEANER.

⚠ WARNING: To reduce the risk of fire, electric shock, or injury:

- Store indoors.
- Do not expose to rain.
- Do not immerse.
- Do not handle with wet hands.
- Do not use Vac&Shine™ if it has been dropped, damaged, left outdoors or dropped into water. Have it repaired at an Authorized Service Center.
- Do not use with damaged cord or plug on the charger.
- Do not unplug charger by pulling on cord.
- Do not damage the charger cord. Never carry or pull the charger unit by the cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use an extension cord. Charger should plug directly into electrical outlet.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot, burning or smoking objects such as cigarettes, matches or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapor.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, gasoline, etc.)
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this User's Guide.
- Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Use only cleaning products formulated or recommended by BISSELL for this appliance.
- Use only the charger supplied by BISSELL (packaged with your appliance) to recharge your Vac&Shine™.
- Use charger unit only in standard electrical outlet (120v–60 hz).
- Use charger in dry location only.
- Keep openings free of dust, lint, hair, etc.
- Unplug charger unit from outlet before maintenance or cleaning.
- Unplug by grasping the plug, not the cord.
- Be extra careful when cleaning stairs.
- Turn off all controls when finished cleaning.
- Do not charge the unit outdoors.

Your Vac&Shine™ contains rechargeable nickel cadmium batteries. Do not incinerate batteries as they can explode when exposed to high temperatures.

Battery cell leaks can occur under extreme conditions. If battery cell liquid comes in contact with the skin:

- Wash immediately with soap and water, then neutralize with a mild acid such as vinegar or lemon juice.
- If battery cell liquid gets into the eyes: Flush immediately with clean water for a minimum of 10 minutes.
- Seek medical attention.
- Do not use without dust bin and/or filters in place.
- Do not run appliance over the charging cord.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

Product view

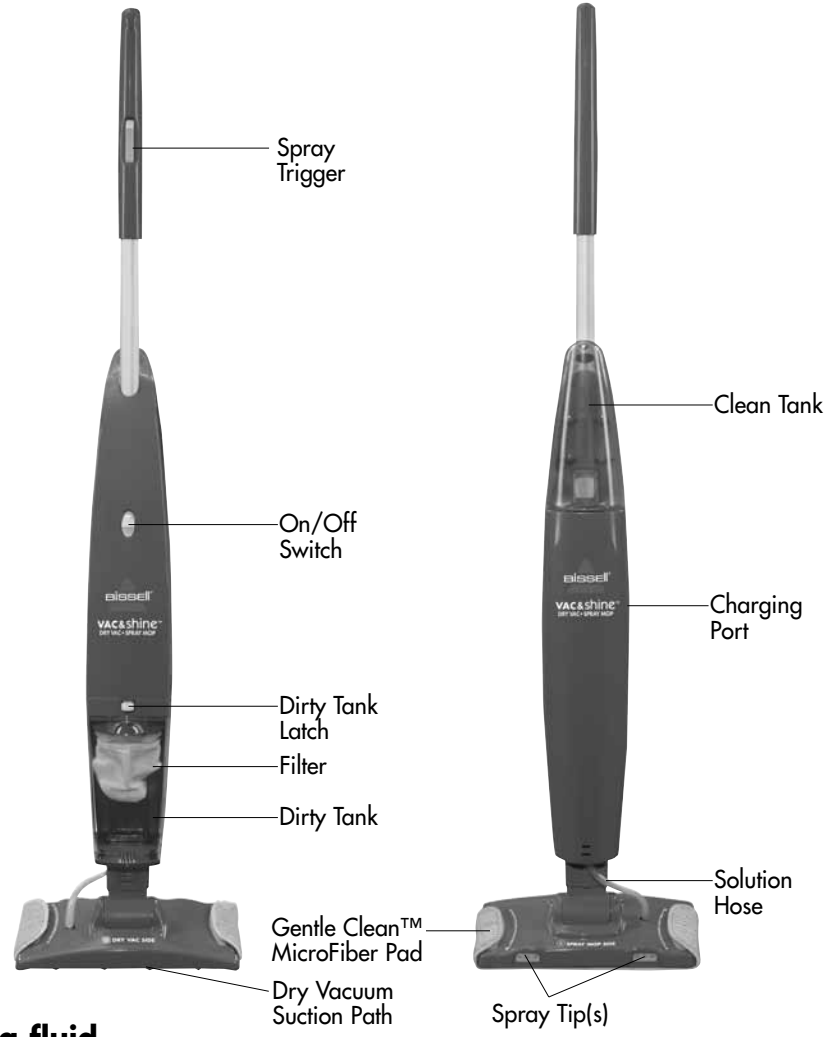

Cleaning fluid

Keep plenty of genuine BISSELL 2X formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the warranty.

BISSELL 2X Hard Floor Solutions Formula

BISSELL 2X Wood Floor Solutions Formula

Assembly

Assembling your new Vac&Shine is a 3 Step Process, requiring no tools.

1. Insert foot into body of unit until you hear a click.

2. Place the Solution Tube onto the spray connector.

3. Insert the handle into the body of the unit. Turn handle until key in handle falls into position until you hear a "click".

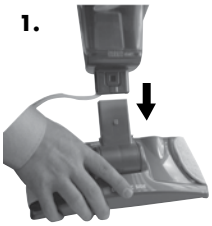

Charging

Note: The unit will come partially charged. Charge completely before using 12 hours or overnight.

Average run time for Dry Vacuuming is 12 minutes.

A. To charge, place the charger plug into the Charging Port on the side of the unit. Make sure it is in securely and the charge indicator light is illuminated. Make sure power switch is in the "off" position.

Filling the Clean Tank

1. Remove tank from the unit.

2. Unscrew the black cap on the bottom of the solution tank and remove the insert.

3. Fill with Tap Water to the full line and fill the remainder with BISSELL 2x Hard Floor or Wood Floor Solutions formulas. Replace the cap and insert assembly. Place the full tank back into the unit.

Tip:

You will only utilize battery charge while dry vacuuming. For wet mopping, the batteries are not used, extending usage time.

Tip:

Gently push the tank into place. If you see air bubbles in the tank, it is seated properly.