OWNER'S MANUAL

Operating and Servicing Instructions

Español - página E1

www.hoover.com

MAX Extract DUAL V carpet cleaner

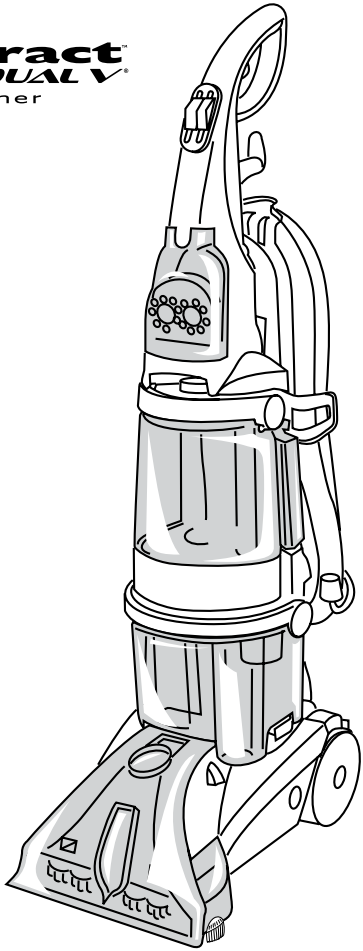

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE.

Questions or concerns? For assistance, please call Customer Service at 1-800-944-9200
Mon-Fri 8am-7pm EST. **PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.**

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.
IF USED COMMERCIALLY WARRANTY IS VOID.

©2011 Techtronic Floor Care Technology Limited. All rights reserved. #56518217 ID100262-R2

Thank you for choosing a HOOVER® product.

Please enter the complete model and Manufacturing Code in the spaces provided.

MODEL _____

MFG. CODE _____

Hint: Attach your sales receipt to this owner's manual. Verification of date of purchase may be required for warranty service of your HOOVER® product.

Be sure to register your product online at Hoover.com or call 1-800-944-9200 to register by phone.

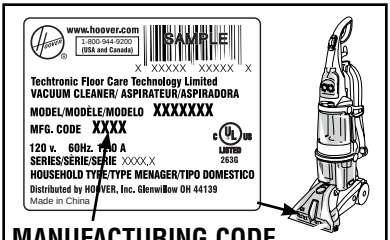

MANUFACTURING CODE

(Label located on bottom of cleaner)

CONTENTS

Important Safeguards **3**

Cleaner Assembly **5**

How To Use **7**

Cleaner Description 7

The Tanks 8

How to Clean **10**

Tools **13**

Maintenance **17**

Nozzle 17

Brushes 17

Valve 18

Storage 18

Lubrication 18

Troubleshooting **19**

Helpful Reminders 19

Service **20**

Cleaning Products **21**

Warranty **22**

If you need assistance:

Visit our website at hoover.com. Follow the authorized dealer locator link to find the Hoover® authorized dealer nearest you or call 1-800-944-9200 for an automated referral of Hoover® authorized dealer locations (U.S. only) or to speak with a customer service representative; Mon- Fri 8am- 7pm EST.

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

IMPORTANT SAFETY INSTRUCTIONS
SAVE THESE INSTRUCTIONS

7 H E U N S I A N G E L E C T A R P C L A A N S P E R E C A S H T C A N L S A E S
F O L L C N W C E D T H E N G L O W I N G

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- 4 A O V O N D T E C R O N M A P L O M A E M A U S E N (L O Y O ® V C E L R E A P N R N O G N C E N D F O U R S W E I T H ! P S P L I A 3 N E E A N R K O G S U E C C T O H M A N U A L
- 5 S O E N O M S U R F M A C E S T E Y N H E E L E A P N R K O G E S V S A L P L S O T immerse product.
- # O N T A P C R T O P G E R R O L U K N U D T E L E E ' R O U N D S I N S T R U C T I O N S
- $ K O C T L E A V E L R E O E R C O E T C L A E T S
- $ K O U T S W E I T H T A N P S L A C E
- 5 S E E X T C H A R W H E I N E A N S T A $ N S O P T L A C A E R C P L E T A N S E T A I R S
- 5 S C E A R C P L E T A N E A Y R S N T E N S A E S D E S C R N T H E N S T R U C T I O N
- 5 S O E N A L T Y T A C H R M E E N T S B E (K O D ® V E R H E A R S A U H S A E Z A R D S
- 4 H U E S O E A N E X T E N S I N S O R T E C O M M) A N E D X E T E N S I N S O L U T N E C E S U S A E R E Y A S T G A U G W E I G R E W H E H C A S P R G R G U T N Y D H E P L A N A D P O R L E C E T H A C T C E H M E A S C H P I L N U E G
- 5 N P C L A R G P L E T A N R E O R M T W L H E N O T U S 4 U R N A F L C O N T B R E F O S R U N P L U G G I N G
- 5 N P B L E U F G O R N E T C H E P I N G 3 C H A U T B O L
- ! L W A Y S S C O C N O N H E R O T M E C O T H E A S E R E V T H E A N C P L E T A N E
- $ K O U T N P B L Y G L O I N G R O U N P L G U R A T S H P E L U N G T T H C E O R D
- . E V H E A R N P L U G A P P L M A I N T C H E T A N D S
- $ K O P T U O R A B P C Y O S C E O A R S H A N D L E D S O E O R O R U C O R D A R O S H A E R D P G O E S O R S E N R O T U A N P P L I C A W E E R E C P O A R W A Y F R H E M A S T E R F A C E S
- $ K O U T S W E I T H A M A C G E R L U A P P L I A S N O V E O R A S N S G H O U L H A B S E E D N R O P D P A E N D A G E O U T D O O R S P R E V A T T E A R K T E A N ! U T H O (R O I Z ® V E A R R 3 A E N T $ E C A E L E R
- # L O S S E E R S N S C O E N S S H A E R N A Y P P L I A S N S O E D R E A R I L D R E N N O A T L L O A V R C P L E T A N E U R S E A D A T O Y R U N N A T T A E A N D Y E N D E
- $ K O P T O I N O T O O S M A E R O D P R E T S
- 4 A O S S I N S E E D U D R M T I G N M E E C E R T H A E R E S W E V L E N T W L H A E S D N G D E T E R A G N E D N T R C S E R A M E T H S M A C H I N E
- + E D E P T E R A G N E D N T R C S E R A O U E R S H I L D R F R E A N C H S
- $ K O U T S T E P I C U K P F L A M M A B O L E B U L S T Q U S U D A S G A S O L E S N E A R E W A H S E T H E M A Y B E P R E S E N T
- $ K O P T I C U K R C H L O R I N E A G N A E S R O L A R N O E T H E R X I A C T E R I W I T H A S P L I A N C E
- $ K O P T C U K A N Y T T H H A S B G U R N O R M G O K S I N G S I G A R M E A T T C O S H E S H O A T S H E S

- ! V O I D K U N K I N G S B Y A C C E P T I N G E A C H P L E A S E T A K E H E A D Y A M A G E M A C H I N E
- + E H E A P L R O C E S S E D T H I N G E E A S T A D P A R T S A W A R R A N T I E S M E N A N D S M O V I N G P A R T S
- 5 S E D O O N L Y
- $ N O P T A T N O Y B J E C T O P E N $ N G S T V E I A N O Y P E B L O C K E E D R E E O E U S I T H A A R N A D N Y T H I N G E A S Y E D A U E O W
- 4 H O E P R E V E A N T A I N E S O A L V O N G N T A C H A R E N T B A E R Y + E E C H I L A N R E N T A V A R O A R E N T B A E C O M P U T E R T Y E L Y
- 3 T O M R O P Y L A $ C O E X P O S E T H E E E T Z E M P E R A T U R E S
- $ N O L E A V E P L U A N A C T E V E N E N G G E D
- $ / . / 4 5 3 % ( ) % 8 4 2 ! # / 4 / (2 2 $ & , / / 2 5 3 . , % 3 5 (! 6 % (% 2 / 0 % 2 (! 2 $ & , / / 2 4 4 ! # (- % 5 4) . 4 ( ) 3 ! # ( ) . % (! 2 $ & , / / 2 3) 4 (/ 5 4 0 2 / 0 % 4 2 4 ! # (- % ! 4 3 # 2 ! 4 # 2 ($! - ! ' % 9 / 5 2 & , / / 2

GROUNDING INSTRUCTIONS

4 H A S P P L I M A U S T G R O U) F D E H D O M A D F U O N R E A N K G R O U N D P R O V A I D A E C H E A R S E T S I S F T A E N E C T R O A E N D T H E S H O C K H A S P P L I A S E Q E I P M E N T G C O N D U # A T O R O U N D U ! N G H E L U G S T P L U G N T O A P P R O P R O U T L E T H A S P R O P E R T A N D E R D U N A C C O R D A N C E W I T H A L C O D E S and ordinances.

DANGER:) M P R O P E R C O N N E C T I O N O F T H E E Q U I P M E N T G R O U N D I N G C O N D U C T O R R E S U L T I N A R I S K O F E L E C T R O C U T I O N . C H E C K W I T A Q U A L I E D E L E C T R I C I A N I F D O U B T W H E T H E R E C E P T A C L E I S P R O P E R L Y G R O U N D E D . D O N O T M O D I F Y T H E P L U G P R O V I D E D W I T H E E P L I A N O T F I T T H E O U T L E T H A V E A P R O P E R E C E P T A C L E I N S T A L L E D B Y A Q U A L I E D E L E C T R I C I A N . A N I M P R O P E R C O N N E C T I O N O F T H E E Q U I P M E N T G R O U N D I N G C O N D U C T O R C A N R E S U L T I N A R I S K O F E L E C T R O C U T I O N ! T E M P O R A R Y A D A P T E R M A Y B E U S E D T O C O N N E C T A P L U G T O A P O L E C E P % A C L E D O P E R G R O U N D E D O N L Y U N A P P R O P E R L Y G R O U N D E D E C E P T A C L E I N S T A L L E D B Y A Q U A L I E D E L E C T R I C I A N 4 H G R E E N C O L O R E D R U G T H E K & E X T E N S I O N C O R D S P L U G S M U S T B E C O N N E C T E D T O P R O P E R L Y G R O U N D E D O U T L E T S & I G 7 H E N E T H E R A P P L I A N C E S H O U L D B E S E R V I C E D O R S H E L D A B O V E T O A V O I D P O S S I B L E E L E C T R I C A L

NOTE:) N # A N A T D H E S C E A T E M P E R A T U R E S N E A R T H E R M O S T A T H E A D I A % L E C T R I C A L

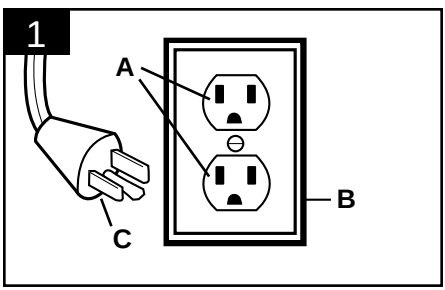

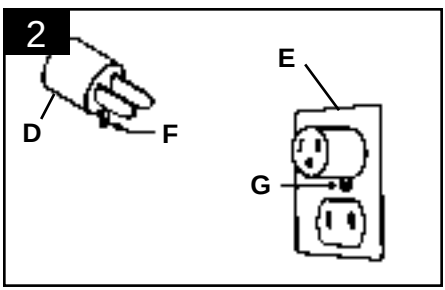

1. CLEANER ASSEMBLY

CARTON CONTENTS

1.1

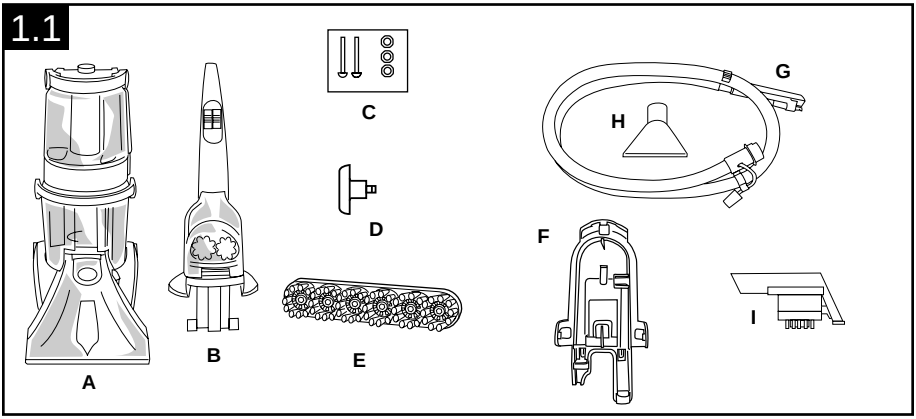

A. Cleaner
B. Upper Handle
C. Handle Bolts and Nuts (Three nuts may be in bag but only two or need for assembly. Bolts and nuts located in bag with hose)
D. Hose/Cord Hook
E. SpinScrub® Brush Assembly

Remove all parts from carton and identify each item shown.

Make sure all parts are located before disposing of packing materials.

F. Hose/Tool Caddy*
G Hose
H Stair/Upholstery Nozzle
I. SpinScrub® Hand Tool*

*Available on select models only. Accessories not included with your model may be purchased separately by visiting hoover.com.

NOTE: Phillips screwdriver needed for assembly.

ATTACH HANDLE

1.2 Remove tank.

1.3 Position cord protector.

1.4 Slide handle down.

1.5 Insert bolts and attach nuts. Tighten with screwdriver.

1.2

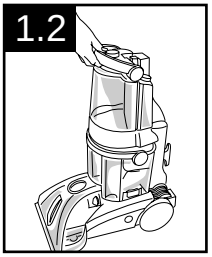

1.3 Cord Protector -V2

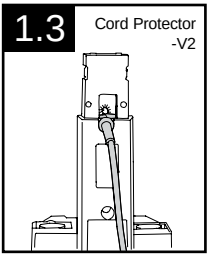

1.4

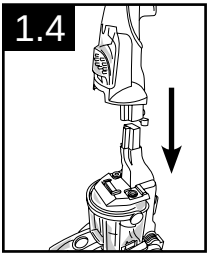

1.5

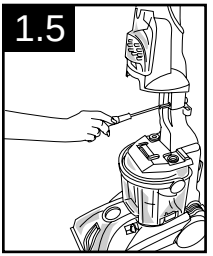

REPLACE UPPER TANK

1.6 Position bottom of tank onto cleaner.

1.7 Push top of tank and tank handle while supporting back of cleaner with other hand.

1.8 Push up on handle to latch it to cleaner. Check tank to make sure it is secure.

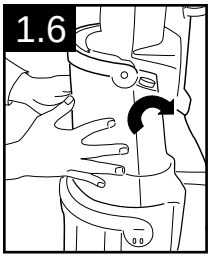

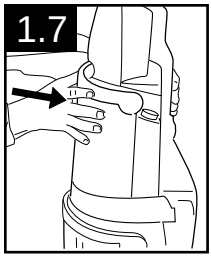

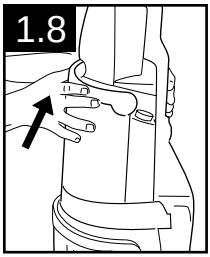

ATTACH HOSE/CORD HOOK

1.9 Snap hook onto cleaner.

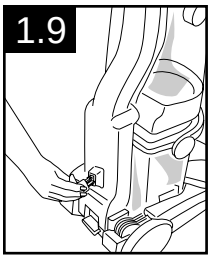

ATTACH TOOL CADDY

(for storage on cleaner)

(Available on select models only)

1.10 Insert tabs.

1.11 Slide caddy down. Notch (B) rests on hook (C).

• IMPORTANT •

Tool caddy is removable for storage on wall or in closet.

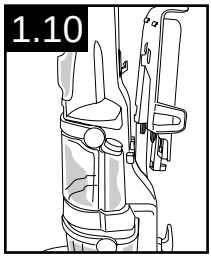

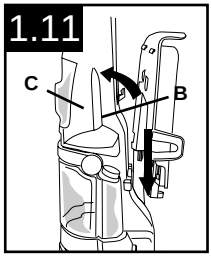

STORE HOSE

1.12 Start.

1.13 Wrap.

1.14 Finish. Use clips (D) to secure hose and solution tube (E and inset).

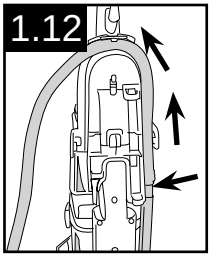

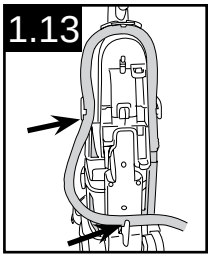

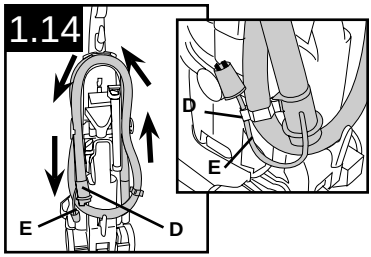

STORE TOOLS

1.15 Store Tools on back side of cleaner as shown.

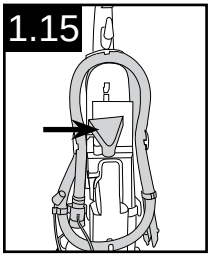

2. HOW TO USE

CLEANER DESCRIPTION

1. Hand Grip
2. SolutionTrigger: press to release cleaning solution
3. ON/OFF Switch
4. Rinse Setting Switch
5. SpinScrub® Hand Tool*
6. Carry Handle
7. Clean Water Tank Handle
8. Clean Water Tank
9. Detergent Container
10. Dirty Water Tank Handle
11. Dirty Water Tank
12. Dirty Water Tank Latches
13. SpinScrub® Mode Selector
14. Solution Tube Connection Port
15. Edge Cleaners: provided on both sides of nozzle to remove dirt near baseboards
16. Nozzle
17. Hose Connection Port
18. Cord Hook: rotates for quick cord release
19. Hose*
20. Hose/Tool Caddy*
21. Stair/Upholstery Nozzle*
22. Cord/Hose Hook
23. Handle Release Pedal
24. Wheels

*Accessories not included with your model may be purchased separately by visiting www.hoover.com, or your local HOOVER® service center.

2.1

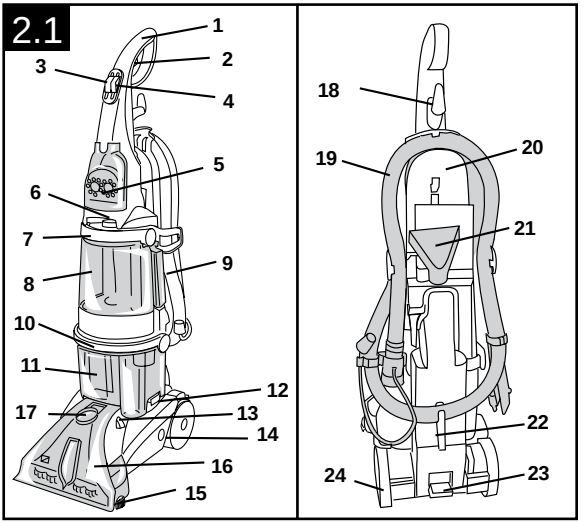

Operate cleaner only at voltage specified on data plate on bottom of cleaner.

This cleaner is intended for household use.

⚠ CAUTION ⚠

DO NOT USE THIS EXTRACTOR ON HARD FLOORS UNLESS YOU HAVE THE PROPER HARD FLOOR ATTACHMENT. USING THIS MACHINE ON HARD FLOORS WITHOUT PROPER ATTACHMENT MAY SCRATCH OR DAMAGE YOUR FLOOR.

ON-OFF SWITCH

To turn cleaner ON, push switch down.

To turn cleaner OFF, push switch up.

2.2

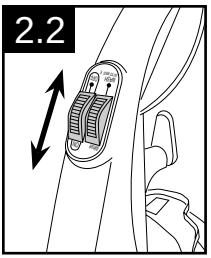

HANDLE RELEASE PEDAL

Step on pedal (A) to lower handle to operating position. Handle does not lock into a single position but "floats" to allow convenient operation.

2.3

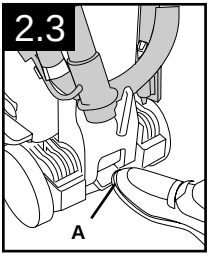

TRANSPORTING

To move your cleaner from room to room, put handle in upright and locked position, tilt cleaner back on wheels and push forward.

2.4

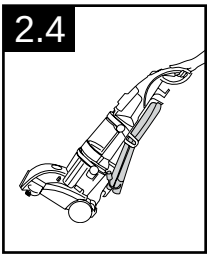

CARRY HANDLE

The cleaner may also be lifted by placing a hand above the upper clean water tank handle as shown.

2.5

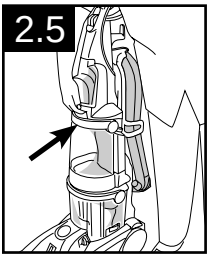

SPINSCRUB® MODE SELECTOR

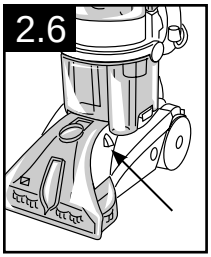

Your SteamVac® cleaner has two agitator brush settings.

SPILL PICK-UP - brushes OFF for picking up spills or cleaning carpets and hard floors when brushing is not desired.

POWER SCRUB - brushes at maximum speed for cleaning carpets

Slide setting selector to the desired setting before cleaning.

THE TANKS: CLEAN WATER SOLUTION TANK

(upper tank)

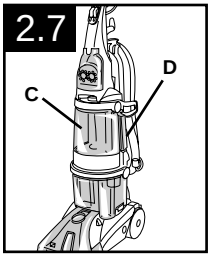

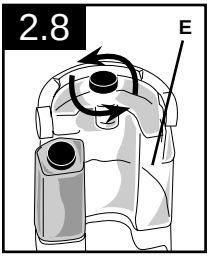

2.7 The clean water tank (C) holds the water that will either be mixed with detergent for cleaning the carpet or floor, or used to rinse the carpet or floor.

The detergent container (D) is permanently attached to the water tank. It holds the detergent that mixes with the water.

How to Fill

Unplug cleaner from electrical outlet.
To remove tank, press down on tank handle and pull forward.

2.8 Fill tank (E) with hot tap water.

⚠ CAUTION ⚠
Do not fill with water above 140°F (60°C).

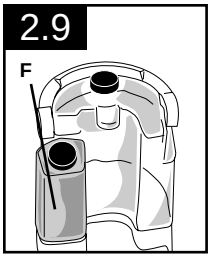

2.9 - 2.10 Fill detergent container (F) with Hoover® Carpet/Upholstery Detergent.

Replace container cap and tighten.

2.11 Position bottom of tank onto cleaner using one hand on each side of the tank to center it on the unit.

• IMPORTANT •
The tank pivots towards the back of the unit. Push the top of the tank and tank handle while supporting the back of the unit with your other hand.

• IMPORTANT •
Use only HOOVER® SteamVac® detergents. They are specially formulated for use with your SteamVac® cleaner. Non-Hoover® cleaning solutions may harm the machine and void the warranty.

How to Fill (continued)

2.12 Push up on the handle once the tank is back to latch it to the unit.

Check tank to make sure it is securely latched.

2.13 There may be a small amount of water (indicated by arrows) on the base when the tank is removed from the unit. This is a normal condition.

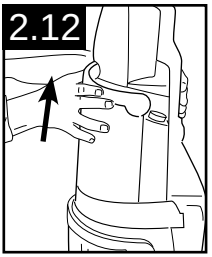

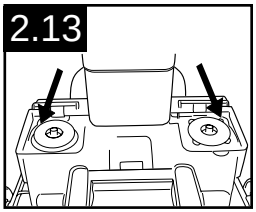

⚠ CAUTION ⚠

Detergents contain Anionic and Nonionic Surfactants. Avoid contact with eyes and skin. In case of contact with eyes, flush with cold water for 15 minutes. In case of contact with skin, wash with water. If irritation persists, call a physician.

⚠ WARNING ⚠

Certain oxygenated-type cleaners, such as OxiClean* and TuffOxi** will damage your SteamVac® detergent container (A), Clean Water Tank (B) or Dirty Water Tank (C).

Use only HOOVER® SteamVac® Oxy detergent for this purpose.

*OxiClean is a registered trademark of Orange Glo International, Inc.

**TuffOxi is a trademark of Tuff Products for Pets.

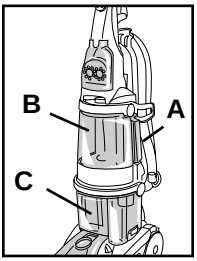

DIRTY WATER TANK

(lower tank)

The Dirty Water Tank holds the dirty solution that is picked up from the surface being cleaned.

When the Dirty Water Tank is full, the automatic shut-off will engage, suction will stop and the tank must be emptied (see Automatic Shut-Off section).

How to Empty

Turn cleaner off and unplug from electrical outlet.

To prevent possible leaking, remove clean water tank by pressing down on tank handle and pulling forward; set tank aside (do not set tank on furniture).

2.14 Turn Dirty Water Tank latches (G) outward (one on each side of tank). Raise handle straight up and lift tank off cleaner. Carry tank to sink or drain.

2.15 Lower handle toward back of tank to unlock lid. Lift lid off tank.

Empty tank and reposition lid.

For full suction, it is important that the Dirty Water Tank lid is properly secured before cleaning.

Raise tank handle to carrying position and place it onto cleaner. Lower handle to front of tank.

Turn latches (one on each side of tank) inward to lock tank in place.

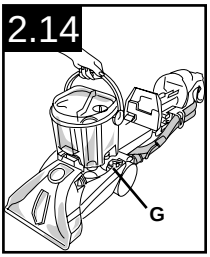

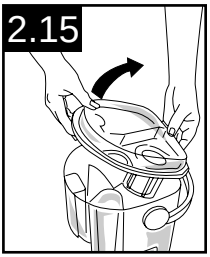

• IMPORTANT •

Make sure the tank handle is moved forward to lock the tank lid before putting cleaner in upright position. Failure to secure properly may result in damage to the tank handle and may cause poor suction.

Actual model may vary from images shown.

AUTOMATIC SHUT OFF

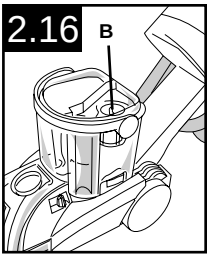

When the Dirty Water Tank (lower tank) is full the automatic shut off mechanism will shut off the cleaner suction (suction will be noticeably reduced).

2.16 At that time, the yellow float disk will rise to the top of the Dirty Water Tank lid (B). The cleaner will no longer pick up dirty solution and the motor sound will become noticeably higher in pitch.

When this happens, turn cleaner off and empty Dirty Water Tank before continuing use.

Check clean water tank also; it may need to be refilled.
Do not use without float and float retainer in place. If broken or dislodged, take to an Authorized Dealer for repair.

3. HOW TO CLEAN

BEFORE YOU BEGIN CLEANING

a. Vacuum thoroughly - For carpet, use a HOOVER® vacuum cleaner with an agitator for best results. Vacuum upholstery with a vacuum cleaner with cleaning tool attachments. Use a crevice tool to reach into tufts and folds. Do not use the carpet cleaner as a dry vacuum cleaner.

b. For upholstery, check cleaning code - Use your HOOVER® carpet cleaner only if the upholstery fabric is marked with a “W” (for “wet” clean) or “S/W” (for “solvent/dry” or “wet” clean). Do not clean fabric marked “S” (“solvent/dry” clean only). If your upholstery does not have a code, seek professional assistance.

c. Test for colorfastness - Wet a white absorbent cloth with the detergent. In a small, hidden area, gently rub the surface with the dampened cloth. Wait ten minutes and check for color removal or bleed with white paper towel or cloth. If surface has more than one color, check all colors.

d. When cleaning entire floor, move furniture out of area to be cleaned (may not be necessary if only high traffic areas are to be cleaned). For furniture too heavy to move, place aluminum foil or wax paper under legs. This will prevent wood finishes from staining carpet. Pin up furniture skirts and draperies.

e. Pretreat spots and heavy traffic areas with HOOVER® Spot & Stain Spray Cleaner*- Follow Directions on bottle.

f. To prevent staining, use plastic or aluminum foil to protect wood or metal surfaces from possible water spray.

g. To avoid wetting and possible damage to wood floors underneath area rugs/carpet, either move area rugs/ carpet to a non-wood hard floor surface or place waterproof material (e.g. plastic) underneath them before cleaning.

*Available at additional cost if not included with your model.

CLEANING CARPET

Read “Before You Begin Cleaning” instructions above.

Fill Clean Water Tank according to instructions for Figs. 2.9.

Fill detergent container with Hoover® detergent according to instructions for Figs. 2.10 and 2.11.

Select proper SpinScrub® mode (see pg. 8).

Dry hands and plug cord into a properly grounded outlet.

Do not clean over floor electrical outlets.

To avoid walking on damp carpet, start at the end of the room farthest from the door or path to sink where tanks will be emptied and filled.

Step on handle release pedal and lower handle to operating position.

3.1 Set Rinse Setting switch to Wash/Rinse. Turn cleaner ON.

3.2 Squeeze trigger to apply cleaning solution and slowly push cleaner forward (equals one wet stroke).

Continue to squeeze trigger and slowly pull cleaner back toward you (second wet stroke).

FOR MODELS WITH AUTO RINSE FEATURE
(available on select models only)

3.1a Set Rinse Setting switch to Wash/Auto Rinse. Turn cleaner ON.

3.2a Squeeze trigger to apply cleaning solution and slowly push cleaner forward (equals one wet stroke).

Continue to squeeze trigger and slowly pull cleaner back toward you (second wet stroke). The cleaner rinses the carpet on the backward pass.

• IMPORTANT •

To assure proper rinsing, it is important to keep the cleaner on the same path backward as forward.

Release trigger and slowly push cleaner forward over area just sprayed with solution (dry stroke). Then slowly pull cleaner back toward you without squeezing trigger (dry stroke). Continue using dry strokes until little water is visible passing through the Dirty Water Tank lid (Pass over the same area a minimum of 4 times = 2 while squeezing the trigger and 2 without).

For best results, use straight, parallel strokes. Overlap strokes by 1 inch to help prevent streaking.

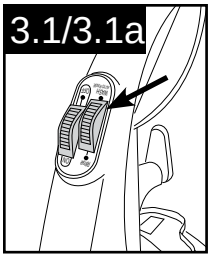

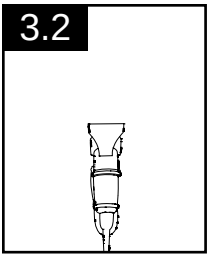

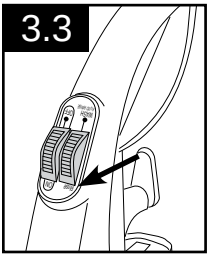

Keep nozzle flat on floor for both forward and reverse strokes.

3.3 If you would like to rinse the carpet with water only, set Rinse Setting switch to RINSE. Repeat cleaning motion. In this setting, rinsing will be done on both forward and reverse strokes.

For heavily soiled areas, repeat cleaning motion. Avoid saturating carpet, as noted.

It is best to alternate wet and dry strokes as described above.

For best cleaning results and to aid in faster drying of carpet, end with more dry strokes. (Continue using dry strokes until little water is visible passing through the Dirty Water Tank lid.)

Empty Dirty Water Tank when the motor sound becomes higher pitched and there is a loss in suction (see “Automatic shut-off”, Fig. 2.17).

When finished cleaning, follow “After Cleaning” instructions on page 13.

• IMPORTANT •

To avoid saturating carpet, do not use more than 4 wet strokes over one area. Always end with dry strokes.

PICKING UP SPILLS

Your HOOVER® SteamVac® cleaner may also be used to pick up small liquid spills on carpet or uholstery.

For best results, pick up spills immediately by placing the stair/upholstery nozzle just above the spill and suction up any residue on top of the carpet. If the spill remains, place either the stair/ upholstery nozzle or floor nozzle with the SpinScrub® mode selector to SPILL PICK-UP in front of the spill, pull the nozzle very slowly over the spill initially with suction only. Repeat with spray and suction.

If a spot is left, the stair/upholstery nozzle is generally more effective for removing it. Although no cleaning solution can completely remove all spots, they can be treated by following the instructions provided by the manufacturer of the carpet, upholstery, or hard floor surface being cleaned.

Do not use the SteamVac® cleaner to pick up flammable or combustible liquids or chemicals.

When finished, follow “After Cleaning” instructions.

AFTER CLEANING

Allow carpet or upholstery to dry. To help prevent matting and resoiling the carpet, keep children and pets away from surface until it is completely dry. If it is necessary to walk on damp carpet, place towels or white cloths on the traffic areas.

If furniture must be replaced before the carpet is dry, place plastic or aluminum foil under legs of furniture so metal slides or wood finishes will not stain the carpet.

Empty tanks, rinse with clean water and let air dry. Rinse the Dirty Water Tank lid and let air dry.

3.4 Remove lint from filter screen located inside Dirty Water Tank.

3.5 Remove lint from filter screen located on bottom of cleaner.

• IMPORTANT •

When brushes seem to be rotating slowly, disconnect cleaner from electical outlet and check and clean this screen.

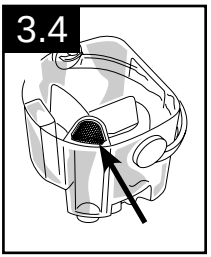

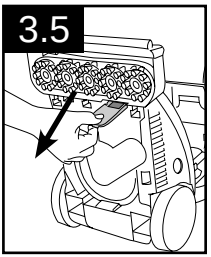

4. TOOLS

ATTACH HOSE

⚠ CAUTION ⚠

To reduce the risk of injury from moving parts, unplug cleaner.

How to Attach

4.1 Open hose connection port (A).

Insert short hose end, matching tabs on hose with same-sized slots in connection port.

Push hose into port and lock in place.

4.2 Plug solution tube firmly into solution connection port (B).

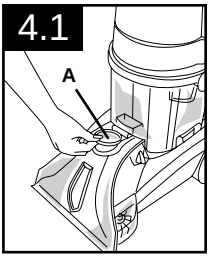

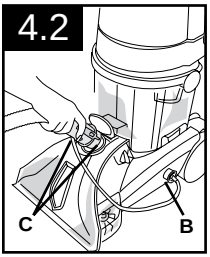

How to Remove

4.2 Squeeze latches (C) on top and bottom of hose. Remove hose from port. Close door.

Remove solution tube from solution connection port.

TOOLS

A. **SpinScrub® Hand Tool** (Available on select models only) has rotating brushes for extra scrubbing action on small carpet areas, carpeted stairs and upholstery. For some models, the brushes can be removed for converting to the scrub module. (Available on select models only)

B. **Stair/Upholstery Nozzle** has a built-in brush to help provide the scrubbing action some spots may need for removal.

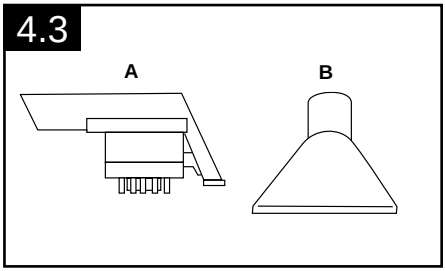

SPINSCRUB® HAND TOOL

(Available on select models only)

4.4 To remove the SpinScrub® hand tool pull tool down and outward.

To reposition the tool, reverse this procedure.

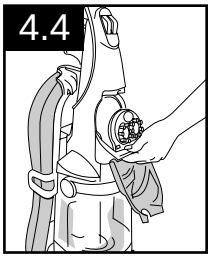

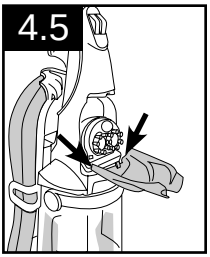

How to Reattach Tool Cover

4.5 The tool cover is designed with a break-away feature which allows it to snap free if it is pushed open too far.

To reattach, align hinges of cover with holes on sides of tool storage area. Snap door into place.

How to Attach Tools

⚠ CAUTION ⚠

To reduce the risk of injury from moving parts, unplug cleaner.

Place handle in upright position and remove hose from rack.

All tools attach to the hose in the same manner:

4.6 Connect tool to hose by sliding it onto connector until the tab (G) locks it securely.

Using your thumb, push forward and up on the latch (H) to remove tool.

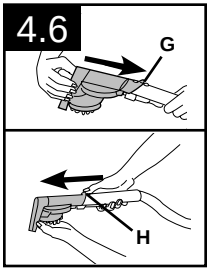

After Using Tool

Drain suction hose by turning cleaner ON and holding nozzle up for several minutes. Do not press trigger.

⚠ CAUTION ⚠

To reduce the risk of injury from moving parts, unplug cleaner.

Disconnect hose and solution tube from cleaner.

4.7 Drain solution tube by placing round end in sink and raising nozzle above your head. Press the trigger.

4.8 The tool caddy can be removed and hung on a coat hanger for storage or placed back on the cleaner.

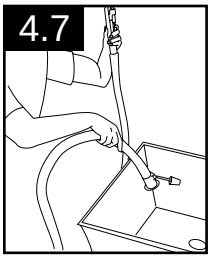

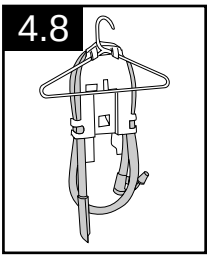

CLEANING CARPETED STAIRS

Read “Before You Begin Cleaning” instructions on page 10.

Attach hose and solution tube as instructed in Figs. 4.1 and 4.2.

Place handle in upright position. Agitator brushes will not rotate while handle is in upright position.

Fill clean water tank according to instructions for Figs. 2.9 to 2.11.

Fill detergent container with HOOVER® detergent according to instructions for Fig. 2.11.

Attach tool to end of hose.

Hose length may require that machine be placed at the top of the stairs to clean upper half of stairway and at bottom of stairs to clean lower half.

⚠ WARNING ⚠

To prevent machine from falling, use extra caution when cleaning on stairs.

Do not place cleaner on stairs.

Do not point tools toward people or pets.

Dry hands and plug cleaner into a properly grounded outlet.

Set Rinse Setting switch to WASH. Turn cleaner ON.

4.9 Pre-spray the carpeted stair by holding the tool (A) or (B) about one inch above the carpet and push it forward while pressing the trigger (equals one wet stroke).

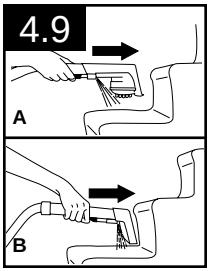

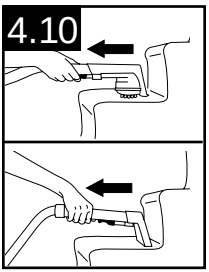

Position tool against the riser and slightly press it into carpet pile. Press the trigger and pull the tool slowly over the carpet (second wet stroke). Release trigger at end of stroke.

4.10 Lift tool, and position it against riser. Pull tool slowly over carpet without pressing trigger (dry stroke).

Overlap strokes by 1/2 inch to help prevent streaking.

It is best to alternate wet and dry strokes as described above. End with more dry strokes to aid in faster drying of carpet.

To avoid saturating carpet, do not use more than 4 wet strokes over any one area. Always end with dry strokes.

If additional cleaning is necessary, wait until the carpet is completely dry before using the tool again.

Empty Dirty Water Tank when the motor sound becomes higher pitched and there is a loss in suction (see “Automatic Shut-Off”, Fig. 2.17).

When finished cleaning, follow “After Cleaning” instructions on page 12 and “After Using Tool” instructions on page 14.

CLEANING UPHOLSTERY

Read “Before You Begin Cleaning” instructions on page 10.

Be sure to check the cleaning code on your upholstery. Use your cleaner only on upholstery marked “W” or “W/S”.

Attach hose and solution tube as instructed in Figs. 4.1 to 4.2.

Place handle in upright position. Agitator brushes will not rotate while handle is in upright position.

Fill Clean Water Tank according to instructions for Figs. 2.9 to 2.11.

Fill detergent container with HOOVER® detergent according to instructions for Fig. 2.10. Do not use hard floor cleaning solution when cleaning upholstery.

Attach tool to end of hose.

Do not point tools toward people or pets.

Dry hands and plug cleaner into a properly grounded outlet.

• IMPORTANT •

RINSE is not available during tool use. The hose will only dispense water mixed with detergent.

Set Rinse Setting switch to WASH. Turn cleaner ON.

4.11 Gently press the tool onto the fabric. Press the trigger and slowly pull the nozzle over the fabric.

Overlap strokes by 1/2 inch to help prevent streaking.

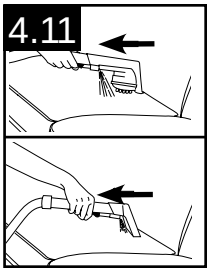

Make additional strokes without pressing the trigger to remove more moisture.

To clean in corners or creases, lift the tool one half inch from the fabric and press the solution trigger.

Vacuum up the solution with the tool without pressing the trigger.

4.12 For heavily soiled areas, it may be necessary to repeat the cleaning process. Make crisscrossing strokes to the original pattern; overlap each pass.

Make no more than 2 passes with the solution over any one area to prevent over-wetting and damage to fabric.

If additional cleaning is necessary, wait until the upholstery is completely dry before using the tool again.

Empty Dirty Water Tank when the motor sound becomes higher pitched and there is a loss in suction (see “Automatic Shut-Off”, Fig. 2.17).

When finished cleaning, follow “After Cleaning” instructions on page 12 and “After Using Tool” instructions on page 14.

5. MAINTENANCE

Familiarize yourself with these home maintenance tasks as proper use and care of your cleaner will ensure continued cleaning effectiveness.

Any other servicing should be done by an authorized service representative.

NOZZLE: How to Clean

If lint or other debris becomes lodged in nozzle, it can be removed for cleaning.

⚠ CAUTION ⚠

To reduce the risk of injury from moving parts, unplug cleaner before servicing.

Remove both tanks as described in Fig. 2.16. With handle in upright position, tilt cleaner back so that handle rests on the floor.

5.1 Lift up rear edge of nozzle. Slide nozzle up and remove from cleaner.

5.2 To replace nozzle, line up tabs (A) on nozzle with holes (B) in cleaner. Slide tabs into holes.

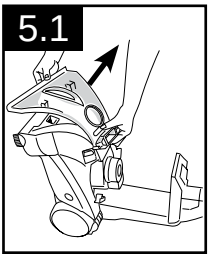

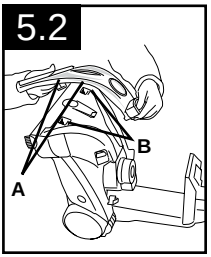

Slide nozzle completely onto cleaner. Press down on nozzle to secure it.

Replace Dirty Water Tank (Fig. 2.16).

The nozzle must be in the proper position in order for the Dirty Water Tank to go on properly.

BRUSHES: How to Change and Clean

Your cleaner is equipped with removable brushes. Follow these directions for changing brush assemblies or for easy cleaning.

⚠ CAUTION ⚠

To reduce the risk of injury from moving parts, unplug cleaner before servicing.

How to Remove

To prevent possible leaking, remove Clean Water Tank and Dirty Water Tank. Set tanks aside.

With handle in upright position, tilt cleaner back until handle rests on the floor.

5.3 Grab brush assembly and pull firmly.
The brushes can be cleaned under running water.

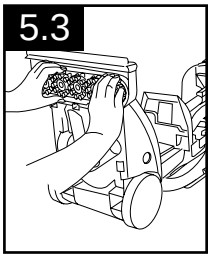

How to Replace

5.4 Align posts (A) on both ends of brush assembly with slots (B) in cleaner housing.

Make sure that the square post (C) also aligns with the square hole (D). Turn brushes slightly until post fits easily into hole.

Press brush assembly firmly to snap into place.

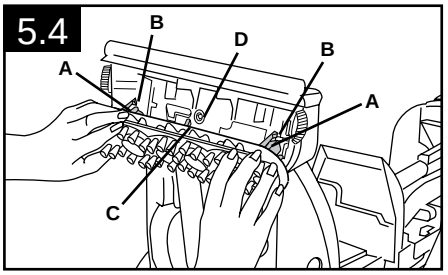

VALVE:

How to Unclog

Remove Clean Water Tank.

5.5-5.6 Turn valve cap (A) counter clockwise and remove.

Soak valve cap in warm water for at least 15 minutes. Wipe cap dry.

5.7 Align slots (B) on cap with tabs (C) in opening.

Turn cap clockwise to tighten.

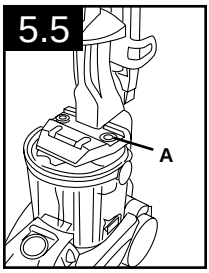

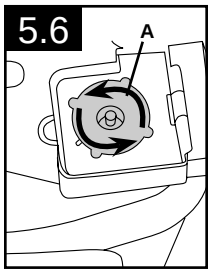

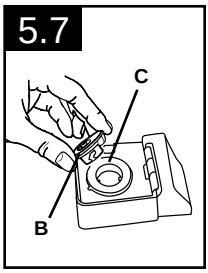

STORAGE

Before storing:

‡ (PSW\ &OHDQ 7DQN DQG OHW DLU GU\ Replace on cleaner.

‡ (PSW\ 'LUW\ 7DQN UQVH WDQN DQG OLG thoroughly with clean water and let air dry.

Allow brushes and underside of carpet cleaner to air dry thoroughly before storing carpet cleaner on a carpeted or wood surface.

LUBRICATION

The motor is equipped with bearings that contain sufficient lubrication for the life of the motor. Check

The addition of lubricant could cause damage. Therefore, do not add lubricant to motor bearings.

6. TROUBLESHOOTING

If a minor problem occurs, it usually can be solved quite easily when the cause is found by using the checklist below.

Any other servicing should be done by an authorized service representative.

⚠ WARNING ⚠

To reduce risk of personal injury - unplug cleaner before servicing.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run.	1. Not firmly plugged in.	1. Plug unit in firmly.
	2. No voltage in wall plug.	2. Check fuse or breaker in home.
	3. Blown fuse or tripped breaker.	3. Replace fuse or reset breaker in home.
Low suction.	1. Dirty Water Tank full/ automatic shut off engaged.	1.Remove and empty Dirty Water Tank. Clean filter screen.
	2. Blockage In tool on end of hose.	2. Remove tool and clear blockage.
	3. Dirty Water Tank lid not on correctly.	3. Make sure lid is on securely.
	4. Clean Water Tank empty, but detergent remains.	4. Fill Clean Water Tank
Clean water won't dispense.	1. Clean Water Tank not firmly in place.	1. Make sure tank is securely locked in position.
	2. Clean Water Tank or detergent container empty.	2. Refill container according to instructions for surface being cleaned.
	3. Dirty Water Tank lid not on correctly.	3 .Make sure lid is firmly in place.
Detergent won't dispense	1. Valve cap clogged.	1. Remove and clean valve cap (see instructions below).
Brushes/brush indicator won't rotate during floor cleaning.	1. Dirty filter screen on bottom of unit.	1. Clean screen.

HELPFUL REMINDERS

⚠ CAUTION ⚠

Unplug the cleaner before doing any of the following.

- 8VH +229® brand detergents; others may foam too much or cause leaking.
- 8VH H[WUD FDUH WR DLG LQ IDVWHU GU\LQJ R WKH carpet.
-)LOO WDQN $ ZLWK KRW XQGHU Ý) Ý& WDS water ONLY. Do not put any detergent in water tank. Fill detergent container (B) with HOOVER® detergent.
- 6HFXUH 'LUW\ 7DQN DQG &OHDQ EHIRUH FOHDQLQJ
- (PSW\ 'LUW\ 7DQN ZKHQ IXOO RU ZKHQ automatic shut-off engages.

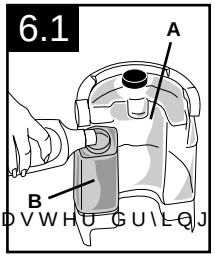

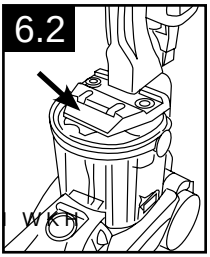

7. SERVICE

To obtain approved Hoover® service and genuine Hoover® parts, locate the nearest Authorized Hoover® Warranty Service Dealer (Depot) by:

- ‡&KHFNLQ<HOORZ3DJHV XQGHU ´9DFXXP &OHDQHUVµ RU ´+RXVHK
- ‡9LVLW RXU ZHEVLWH DW KRRYHU FRP 8 6 &XVWRPHUV RU KRRYHU
  Follow the service center link to find the service outlet nearest you.
- ‡)RU DXWRPDWHG UHIHUUDO RI DXWKRUL]HG VHUYLFH RXWOHW

Do not send your vacuum to Hoover®, Inc., Company in Glenwillow for service. This will only result in delay.

If you need further assistance:
To speak with a customer service representative call 1-800-944-9200; Mon-Fri 8am-7pm EST. In Canada, contact Hoover® Canada, Toronto: 755 Progress Ave., Scarborough, ON M1H 2W7 OR Hoover® Canada, Edmonton: 18129-111 Ave., Edmonton, AB T5W 2P2, Phone: 1-800-944-9200, Mon-Fri 8am-7pm EST.
Always identify your vacuum by the complete model number when requesting information or ordering parts. (The model number appears on the bottom of the vacuum.)

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

8. CLEANING PRODUCTS

: $51,1* 7RUHGXHWHULVN RDQHOHHLEWKRFN GXHUQRHLSRQWEQPDJHVRQO\ +RHYUŠ FOHSDQRGXFWV DQGUHRVYXHUŠFH DWQGHUPXQHWZLQWKWRMDS QRHWDRE

/VV]LY*SLHUPUN 7YVK

Product Name	Deep Cleansing	Premium Pet	Oxy	Anti-Allergen[1]	Hard Floor	Hoover Platinum Collection® Professional Strength	Hoover Platinum Collection® Pet Plus
Hoover® Quick & Light™	✓	✓	✓	✓		✓	✓
Hoover® SteamVac®	✓	✓	✓	✓	✓[2]	✓	✓
Hoover® MaxExtract™ Dual V®	✓	✓	✓	✓	✓[3]	✓	✓
Hoover® MaxExtract™ Dual V® All Terrain	✓	✓	✓	✓	✓	✓	✓
Hoover Platinum Collection®	✓	✓	✓	✓		✓	✓
Hoover® FloorMate®					✓		

[1] Allergens: pollen, pet dander, dirt, and dust.

[2] : KHQ FOHDQLQJXLDEHKHDWRŠH KDVUXDFH DWWDFKPHQWVHOHFWHGRQZXEVHIG RLSRVQLDOQ FOXGLQG %UXVK ÊRSEVUMU

[3] : KHQOHDQLQJXUXIDFH DWWEDFKPHQ +RRŠHKDUGXIDFH DWWEDFKPHQ PXVWEHIG %UXVK ÊRSEVUMU %UXVK ÊRSEVUMU

For optimal performance use Hoover® brand detergents, wipes, and spot cleaners available at Hoover.com and retailers nationwide.

9. WARRANTY

LIMITED ONE YEAR WARRANTY

(Domestic Use)

WHAT THIS WARRANTY COVERS

When used and maintained in normal household use and in accordance with the Owner's Manual, your HOOVER® product is warranted against original defects in material and workmanship for a full one year from date of purchase (the "Warranty Period"). During the Warranty Period, Hoover® will provide labor and parts, at no cost to you, to correct any such defect in products purchased in the United States, U.S. Military Exchanges and Canada.

HOW TO MAKE A WARRANTY CLAIM

If this product is not as warranted, take or send the product to either a Hoover® Sales and Service Center or Hoover® Authorized Warranty Service Dealer along with proof of purchase. For an automated referral to authorized service outlets in the U.S.A., phone: 1-800-944-9200 OR visit Hoover® online at www.hoover.com. For additional assistance or information concerning this Warranty or the availability of warranty service outlets, phone the Hoover® Consumer Response Center, Phone 1-800-944-9200, Mon-Fri 8am-7pm EST. In Canada, contact Hoover® Canada, Carson Building, 100 Carson St., Etobicoke, Ontario M8W 3R9, Phone: 1-800-944-9200, Mon-Fri 8am-7pm EST.

WHAT THIS WARRANTY DOES NOT COVER

This Warranty does not cover: use of the product in a commercial operation (such as maid, janitorial and equipment rental services), improper maintenance of the product, damage due to misuse, acts of God, nature, vandalism or other acts beyond the control of Hoover®, owner's acts or omissions, use outside the country in which the product was initially purchased and resales of the product by the original owner. This warranty does not cover pick up, delivery, transportation or house calls. However, if you mail your product to a Hoover® Sales and Service Center for warranty service, cost of shipping will be paid one way.

This warranty does not apply to products purchased outside the United States, including its territories and possessions, outside a U.S. Military Exchange and outside of Canada. This warranty does not cover products purchased from a party that is not an authorized retailer, dealer, or distributor of Hoover® products.

OTHER IMPORTANT TERMS

This Warranty is not transferable and may not be assigned. This Warranty shall be governed and construed under the laws of the state of Ohio. The Warranty Period will not be extended by any replacement or repair performed under this Warranty.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY PROVIDED BY HOOVER®. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE, ARE DISCLAIMED. IN NO EVENT WILL HOOVER® BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE TO OWNER OR ANY PARTY CLAIMING THROUGH OWNER, WHETHER BASED IN CONTRACT, NEGLIGENCE, TORT OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER. Some states do not allow the exclusion of consequential damages, so the above exclusion may not apply to you. This warranty gives you specific rights; you may also have others that vary from state to state.

MANUAL DEL PROPIETARIO

Instrucciones de Funcionamiento y Servicio

MAX Extract DUAL V carpet cleaner

www.hoover.com

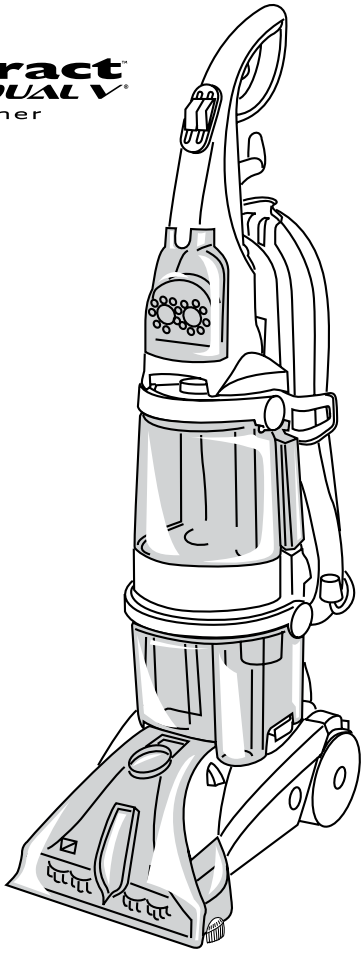

IMPORTANTE: LEA ATENTAMENTE ANTES DE ENSAMBLAR Y USAR.

¿Tiene alguna pregunta o inquietud? Para obtener asistencia, llame al Servicio de atención al cliente al 1-800 944 9200, de lunes a viernes, de 8 a.m. a 7 p.m., hora del ESTE.

POR FAVOR, NO DEVUELVA ESTE PRODUCTO A LA TIENDA.

ESTA ASPIRADORA PARA ALFOMBRAS ESTÁ DISEÑADA PARA USO DOMÉSTICO. EL USO COMERCIAL DE ESTE PRODUCTO ANULA LA GARANTÍA.

©2011 Techtronic Floor Care Technology Limited. Todos los derechos reservados. #56518217 ID100262-R2

Gracias por haber elegido un producto HOOVER®.

Anote los números completos de Código de fabricación en los espacios provistos.

MODELO _____

CÓDIGO DE FABRICACIÓN _____

Consejo: Adjunte su recibo de compra a este Manual del propietario. Para obtener el servicio de garantía de su producto HOOVER® puede requerirse la verificación de la fecha de compra.

Inscriba su producto en línea en Hoover.com, o llame al 1-800-944-9200 si prefiere hacerlo por teléfono.

CÓDIGO DE FABRICACIÓN

(Etiqueta ubicada debajo de la limpiadora)

ÍNDICE

Salvaguardias importantes..... E3
Ensamblado de la aspiradora E5
Funcionamiento..... E7
Descripción de la aspiradora..... E7
Los tanques..... E8
Cómo limpiar E10
Accesorios..... E13
Mantenimiento E17
Boquilla E17
Cepillos E17
Válvula E18
Almacenamiento..... E18
Lubricación..... E18
Solución de problemas..... E19
Recordatorios útiles E19
Servicio E20
Productos de limpieza E21
Garantía..... E22

Si necesita ayuda:

Visite nuestro sitio web en www.hoover.com. Haga clic en el enlace que permite localizar los vendedores autorizados hoover para encontrar el vendedor más cercano, o marque el 1-800-944-9200 para escuchar un mensaje indicando la dirección de los vendedores autorizados Hoover® (sólo en ee. Uu.) O para hablar con un representante de atención al cliente (de 8 am a 7 pm, hora estándar del este, de lunes a viernes).

POR FAVOR, NO DEVUELVA ESTE PRODUCTO A LA TIENDA.

¡SALVAGUARDIAS IMPORTANTES! ¡GUARDE ESTAS INSTRUCCIONES!

! LUSAUNRAPATREALÏCTORRBISESRVEMPARSERECAUBCÉISINCEA
INCLUYASSNGUIDIENTES

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR ESTE APARATO

ADVERTENCIA: PARA REDUCIR EL RIESGO DE INCENDIOS, CHOQUES ELÉCTRICOS O LESIONES:

- s 0AERVALDTARAOLSCSOMPONNETETBESENSICAMERNTDUEITMOPSIEZ Hoover® DISE×PAADBOASCOENSATEARAELASECIORÓNDUETMOPSIEZ de este manual).
- s 5SPENICAMEENSUTEERHFUCMIESPECOERRASOCDESIOMPIOEZNA DERRPAEMQUESEXSOUSMERRAODUCTO
- s #ONEACTAERPANTOAMUENTACEDACORRCIEUNTAEONEAXTIÓERR ADECUÓAEBA)NSTRUDCCIONEAEÑERAv
- s .OIMSBOETROEDAESORELEÏCTUBRICADEARSSO
- s .OUSLEAUNIDSADOTSANQEUSELUSGAR
- s 4ENGSAPECUIADALDOPEISACRALOSCAQIUMPIARADAERAOMB en escaleras.
- s 5SEAIMPIARDOCRAMCEENTEARAUFAUDESE×CADOSAD ESCRI en las instrucciones.
- s 5SPENICAMLEDSTCESPOERCIOSMENDO(ADOC®,VERuso de otros ACCESPOURESOBELIGROSO
- s .OSERECOMEENDSODEANCORDDEØXTENSIÓNDISPEUNTSAUBLAE CORDDEØXTENUSUERCNORDDEØMENCHSILCOASLIBRGUNENCHUF DECLAVDICAOSNEXTIÓERRURNRECEPTÉCTOLOOSMPACTOERLLE ENCHUEAEEQUINA
- s \$ESENLGAHUFIERADAERAOMBRAMACORRCIEANTEAOTILIC !PAGTUCEDLOOSSONTARNOTDEESSENCHUFARLA
- s\$ESENCEAPUAFRAANTDESONEQATACRESDEMADOIN3.CRUB
- s 3IEMDPERSECOENCEOCRTDEØAOMACORREIÏCTAENTDEASEAEILZA MANTENDMEIAEIMTPOARADAERAOMBRAS
- s .OAESENTCRADNEXCORDAØNESENCSHUJEATNECANUFCEORDØ
- s .UNMCANIPEENECHUFAPARCATOASANHOSMEDAS
- s .OIBECLORNDTÓRNASELAAPDAEIAIÓNEDLORNDÓAMPLOOCSCEOMO MANNJCAIERARUEECRUTAENCORESÓNTÉRAVETSAEESATEREDE DEBORDESQUFINLACSSOHSAGFUNCEOANPARREANTCOLVEALORDØ -ANTENGOARLEZÓDESUPERCFAICIIENSTES
- s .OUSESTAPARCATOOCORDØNCHUF×EA3IDIAPARNAGESTÉ FUNCIOANDENCUCADSAEMENTEBRDA×SØEAØANTEMPSERIE DECÓAERNTERALGULAÏVAEUNCENDEVENTYDAESERVDICCIO®VER AUNNCESAIOTNARIBAEVDICAORADETCÓA®VER
- s 3REQUINESARUPEREVSTSROUCTASAPEARESTSOAPDOR×OCSERCA DEST.OSERMQUEAIMPIARADAERAOSBURTACSICMENUGUNETE QUFEUNCSIÓNSUPEREVNSIÓNMENTO
- s .ÁPUNCTASCCESEODRROESALCAPBERSNDANLASSASCOTAS
- s 5SPENICAMLEMNTIEAPDARASSOSMERCIDAISMPENDTEEXBADRAS APLICEANCAMÓENQU.OUSNEINGPEDCEERALAIMPIARADAERAOMBR

s 0AARYAUDAR ED EICIER MDPESDE CAADSCE GHDRQESHEÉR IEASTBÏEN
VENTAIUASDAR TERYCCETNRTOMSPIACCOGNSBMAEQUINA
s -ANTIENDDSEATERYCCETNRTOMSPIAFDUCEPRMASCADNECONS×OS
s.OUSEESATEAR PARAR9APLIÓAQFUNIEDASMCACBLMBSUSCTOIBGAESSOLI
NILOSEENERDACSNDDIECHOSQPUDDCIERARRE SENTES
s .@ASPBIRAENQUECAODLCERHOPIADDIORRENGAJSEONLNNAGHTRO
MATERØIXCLOENSATEARATO
s .@ASPNIRNEGHBNGETSEESQÜEMANQUDBEREMCOMCOGARRI
FØSFOCIRNSZALSENTES
s %AISTEORBAIRTUYSISCSOMSMPIRAAERFAMYRAESEDEANARL
s-ANTENGAABELARLOPALGLADSEDLOSSYSTOLAMSARDTES
CUERUPDREAASBERYOTRRASEZANSOVIMIENTO
s 5SEEAPARRATCAMENTERIORES
s .COLONUGBNEAASBERTOURSESATEARCANNGAUBNEARTU
OBSTRMAINDTAINLGBARESUCIEPDEALDCSAVBEICLOALQEUJERUE
PUERDEADEICLRJAORE
s 0AARYAUDEAVRQTALRASSUPERQFUEQDESNOSAESUELAZANSUECVATRE
ECONTACOCNASLFOMHARSOAESTSENC-ASNTEANLGNS×OSLAS
MASCLOETJDOESSASLFOMHARSQAESTCNMPLESTAECTENTE
s 'UARDAPEARRANTOSAERQEXPOLNGÉQUATEAMPERDACTURGAESLAM
s .OEEAPARSASTUPERCVUAZNSÑCHUFADO
s ./54)/)#3#4130)2!$/2842!#4/235,$52/3-%./315%%.'!
%!##%3/2)2352,$52/3$%#5$4)/:!%/35%,$52/3).
%!##%3/2)2352/0)$!$34402!405%2!$»!2$!2535 0%2&)#)

INSTRUCCIONES DE CONEXIÓN A TIERRA

%SATEAPARATOSTCORNEACTIÆDRNADEESPECFFALOSCONEXI
ATIEORAUNCERCUITONPERSISTANCIAR ECIÑCTARIDA
REDEURCIERSOCHOQUÏCTRSICADARTAEUNCORCONNCONDUC
DECONEXTIØRREQUI#YUNCHUFCENEXTIØRRVENCHUF
DEBESTEARCHUFNUADOMACORRI'ANTECUARRECTASMTENA
YCONEATIÆDRAUECFONOLOSØMGRSENLANCZALES

PELIGRO:

,ACONEIXIÆDNECUALQADUCTONEXTIØRRIA
EQUIPUEDECASUORNIÆSOCHOQUÏCT#FONSAULNEECTRI
CÀLIFOARERSDEMANTENSNIENSTÉGDRQUEATOMAE
CORREISNTÉENECATADEARFORAVDAECUAMADIFEHUNCHUF
SUMINISTRNADARSANTOCALEZNATOMACORRHEAGTAEN
ELECTRACISNSATADAMACORRAENCTSATEARÉSATPOTO
PARSEUNCIRCUITONEALVOLTTESNENCHUFCENEXIØ
TIESRMAALEARCH!UFUSEELUSETRDAGR&AIGASNSDISPON
DEUNTAOMACORRCEUNTAONEXTIØRREACU&AIGASPUEDE
USARADAPTÆDPRSRARAONECSTEARCHAURECEPDÉCU
POL%SADAPTÆDPRERBALLIHZMARCSAEMSTUEELECTRI
CALIFICENDSTUNTAORMACORRCEUNTAONEXTIØRREACUA
" &IG,AOREJAATODLSAPOSSIMRVÁØBECOVERØUSEADEL
ADAPTÆDRONECUARASNEXTIØRRAMANENTMEADE
LÁCADENTAOMACORRCEUNTAONEXTIØRREACU&AIG#UANDO
SEUSEELADAPTÆDR
MANTENENSUSLEUGAR
con un tornillo de meta
./4!%#HANAEDÉDI
%LICTR#ACNADIE
#ANAD%EACNTR#IOEAL
no permite el uso de
adaptadores temporales.

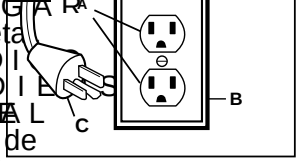

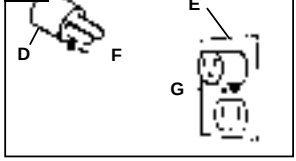

E4

1. ENSAMBLADO DE LA ASPIRADORA

CONTENIDO DE LA CAJA

1.1

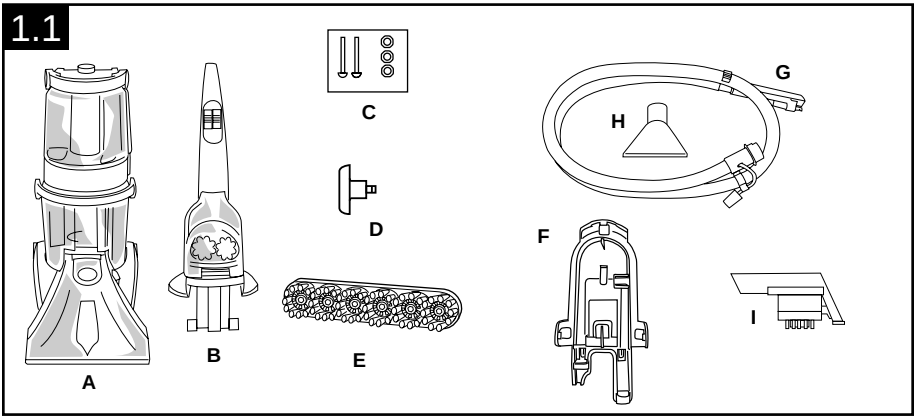

A. Aspiradora
B. Mango superior
C. Pernos y tuercas del mango (Puede haber tres tuercas en la bolsa, pero sólo se necesitan dos para el ensamblaje. Los pernos y las tuercas se encuentran en la bolsa con la manguera.)
D. Gancho para manguera/cordón
E. Ensamblaje del cepillo SpinScrub®.

Retire todas las piezas de la caja e identifique cada artículo que se muestra.

Asegúrese de ubicar todas las piezas antes de eliminar el embalaje.

F. Funda de manguera/accesorios*
G. Manguera
H. Boquilla para escaleras/tapizados
I. SpinScrub® cepillos del accesorio*

*Disponible sólo en algunos modelos. Los accesorios no incluidos con su modelo pueden comprarse por separado, visitando www.hoover.com.

NOTA: Se necesita un destornillador Phillips para el ensamblado

PARA COLOCAR EL MANGO

1.2 Quite el tanque.

1.3 Coloque el protector del cordón.

1.4 Deslice el mango hacia abajo.

1.5 Inserte los pernos y las tuercas. Apriete los pernos con un destornillador.

1.2

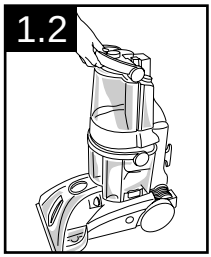

1.3

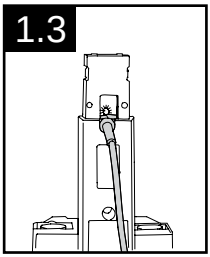

1.4

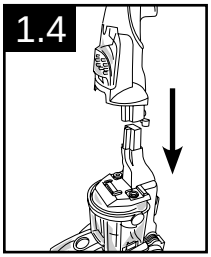

1.5

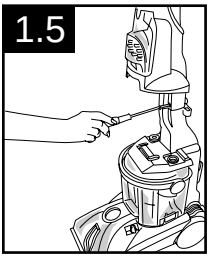

REEMPLACE EL TANQUE SUPERIOR

1.6 Coloque la parte inferior del tanque sobre la limpiadora.

1.7 Empuje la parte superior del tanque y el mango del tanque mientras sujeta la parte posterior de la limpiadora con la otra mano. .

1.8 Empuje el mango hacia arriba una vez que el tanque esté colocado, para trabarlo a la limpiadora. Revise el tanque para asegurarse de que está bien trabado.

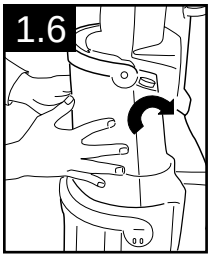

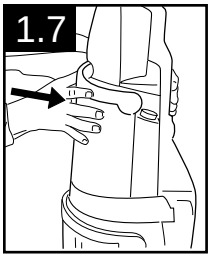

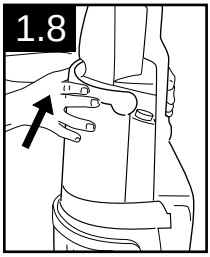

INSTALE EL GANCHO PARA LA MANGUERA/ CORDÓN

1.9 Encaje el gancho en la limpiadora.

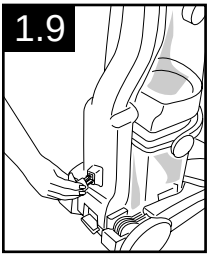

COLOQUE EL PORTA ACCESORIOS

(para guardarlos en la aspiradora)
(Disponible sólo en algunos modelos)

1.10 Inserte las lengüetas.

1.11 Deslice el portaaccesorios hacia abajo. La muesca (B) queda sobre el gancho (C).

• IMPORTANTE •

El portaaccesorios se desmonta para colgar el aparato en la pared o guardarlo en un armario.

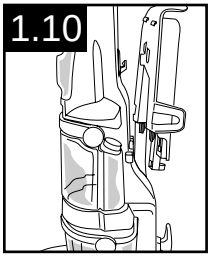

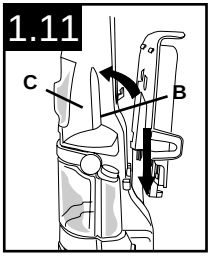

GUARDE LA MANGUERA

1.12 Inicio.

1.13 Envuelva.

1.14 Final. Use las pinzas (D) para fijar la manguera y el tubo de solución (E y encarte).

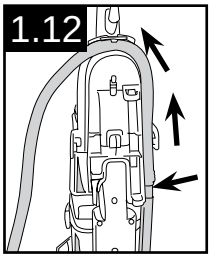

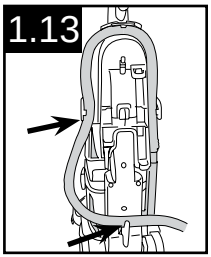

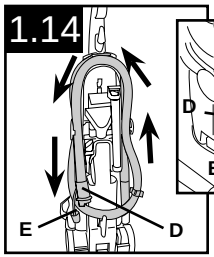

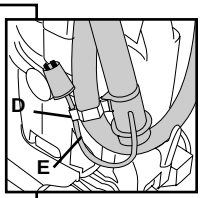

GUARDE LOS ACCESORIOS

1.15 Guarde los accesorios en la parte posterior de la limpiadora, como se muestra.

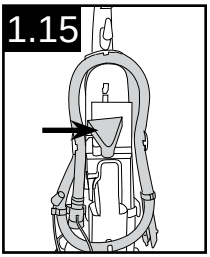

2. FUNCIONAMIENTO

DESCRIPCIÓN DE LA ASPIRADORA

1 Empuñadura del mango
2. Gatillo para la solución: presione para liberar la solución de limpieza
3. Interruptor para encender/apagar
4. Interruptor de posición Rinse (Enjuague)
5. Accesorio de mano SpinScrub®*
6. Mango de transporte
7. Mango del tanque de agua limpia
8. Tanque de agua limpia
9. Contenedor para detergente
10. Mango del tanque de recuperación
11. Tanque de recuperación: contiene la solución sucia
12. Trabas del tanque de recuperación
13. Selector de modo SpinScrub®
14. Orificio de conexión del tubo de solución
15. Limpiadoras de bordes: se encuentran en ambos lados de la boquilla para retirar la suciedad cerca de los zócalos
16. Boquilla
17. Orificio de conexión de la manguera
18. Gancho para el cordón: gira para soltar el cordón rápidamente
19. Manguera*
20. Funda de manguera/accesorios*
21. Boquilla para escaleras/tapizados*
22. Gancho para cordón/manguera
23. Pedal para soltar el mango
24. Ruedas

*Los accesorios no incluidos con su modelo pueden comprarse por separado, visitando www.hoover.com.

2.1

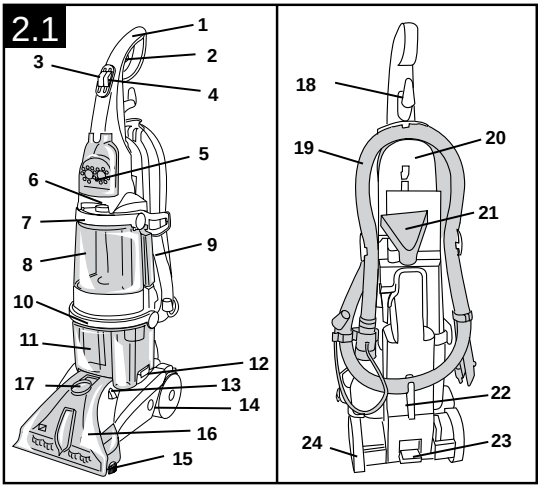

Haga funcionar la limpiadora solamente con el voltaje especificado en la placa de datos, que se encuentra en la parte inferior de la limpiadora.

Esta limpiadora está diseñada para uso doméstico.

⚠ PRECAUCIÓN ⚠

NO UTILICE ESTA ASPIRADORA EXTRACTORA EN SUELOS DUROS, A MENOS QUE TENGA EL ACCESORIO PARA SUELOS DUROS ADECUADO. UTILIZADO EN SUELOS DUROS SIN EL ACCESORIO APROPIADO, ESTE APARATO PUEDE RAYAR O DAÑAR SU SUPERFICIE.

INTERRUPTOR PARA ENCENDER/APAGAR

Para encender la aspiradora, empuje el interruptor hacia abajo.

Para apagar la aspiradora, empuje el interruptor hacia arriba.

2.2

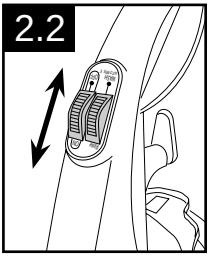

PEDAL PARA SOLTAR EL MANGO

Pise el pedal (A) para bajar el mango a la posición de funcionamiento. El mango no se traba en una sola posición, sino que "flota" para permitir un funcionamiento práctico.

2.3

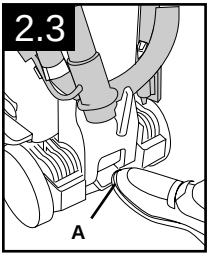

TRASLADO

Para mover su aspiradora de una habitación a otra, coloque el mango en posición vertical y trabada, incline la aspiradora hacia atrás, sobre las ruedas, y empuje hacia delante.

2.4

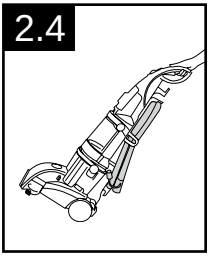

MANGO DE TRANSPORTE

También es posible levantar la aspiradora colocando una mano por encima del mango del tanque de solución limpia superior, como se muestra.

2.5

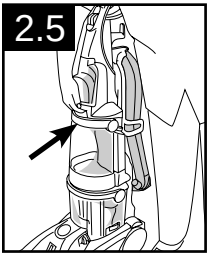

SELECTOR DE MODO SPINSCRUB®

Su aspiradora Steam Vac™ tiene dos posiciones de cepillos del agitador.

SPILL PICK-UP (ASPIRADO DE DERRAMES): Cepillos apagados para aspirar derrames o limpiar alfombras y suelos duros cuando no se requiere cepillado.

POWER SCRUB (FREGADO POTENTE): Cepilla a velocidad máxima para limpiar alfombras.

Deslice el selector de posiciones a la posición deseada antes de limpiar.

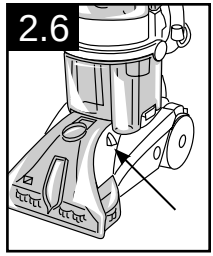

LOS TANQUES: TANQUE DE AGUA LIMPIA

(tanque superior)

2.7 El tanque de agua limpia (C) contiene el agua que se mezclará con el detergente para limpiar la alfombra o el suelo, o bien el agua que se usará para enjuagar la alfombra o el suelo.

El contenedor para detergente (D) está conectado permanentemente al tanque de agua. Contiene el detergente que se mezcla con el agua.

Cómo llenar

Desenchufe la aspiradora de la toma de corriente eléctrica.

Para retirar el tanque, presione el mango del tanque hacia abajo y tírelo hacia delante.

2.8 Llene el tanque (E) con agua caliente del grifo.

⚠ ADVERTENCIA ⚠

No lo llene con agua que tenga una temperatura superior a los 140 °F (60 °C).

2.9 - 2.10 Llene el contenedor para detergente (F) con detergente.

Vuelva a colocar la tapa del contenedor y ciérrela.

2.11 Coloque la parte inferior del tanque sobre la aspiradora con una mano a cada lado del tanque para centrarlo en la unidad.

• IMPORTANTE •

El tanque gira hacia la parte posterior de la unidad. Empuje la parte superior del tanque y el mango del tanque mientras sujeta la parte posterior de la unidad con la otra mano.

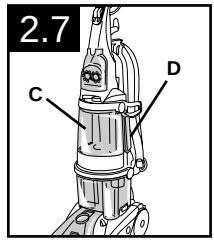

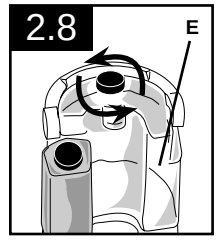

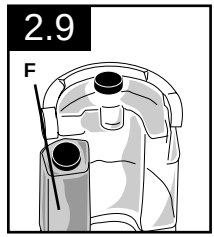

• IMPORTANTE •

Use únicamente detergentes para aspiradoras SteamVac™ HOOVER®. Estos están especialmente formulados para uso con su aspiradora SteamVac™. Las soluciones de limpieza que no sean Hoover® pueden dañar la máquina y anular la garantía.

Cómo llenar (continuado)

2.12 Empuje el mango hacia arriba una vez que el tanque esté colocado en la parte posterior de la unidad para trabarlo a ésta.

Revise el tanque para asegurarse de que esté bien trabado.

2.13 Es posible que haya una pequeña cantidad de agua (indicada con flechas) en la base cuando se retira el tanque de la unidad. Esto es normal.

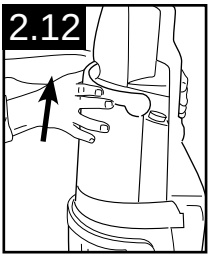

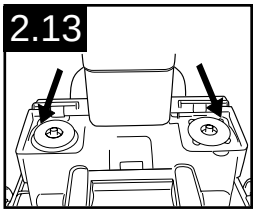

⚠ PRECAUCIÓN ⚠

Los detergentes contienen surfactantes aniónicos y no iónicos. Evite el contacto con los ojos y la piel. En caso de contacto con los ojos, enjuáguelos con agua fría durante 15 minutos. En caso de contacto con la piel, lávela con agua. Si la irritación persiste, llame a un médico.

⚠ ADVERTENCIA ⚠

Ciertos limpiadores de tipo oxigenado, como OxiClean* y TuffOxi** dañarán el contenedor para detergente (A), el tanque de agua limpia (B) o el tanque de recuperación (C) de su aspiradora SteamVac™.

Use únicamente detergente para aspiradoras SteamVac™ Oxy HOOVER® para este fin.

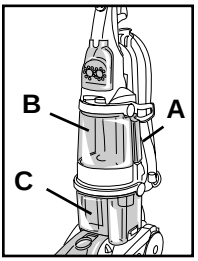

*OxiClean es una marca comercial registrada de Orange Glo International, Inc.

**TuffOxi es una marca comercial de Tuff Products for Pets

TANQUE DE RECUPERACIÓN

(tanque inferior)

El tanque de recuperación contiene la solución sucia que se ha aspirado de la superficie que se está limpiando.

Cuando el tanque de recuperación está lleno, el apagado automático se activará, la succión se detendrá y se debe vaciar el tanque.

Como vaciarlo

Apague la aspiradora y desenchúfela de la toma de corriente eléctrica.

Para evitar posibles fugas, retire el tanque de agua limpia presionando el mango del tanque hacia abajo y tirando hacia delante; coloque el tanque a un lado (no apoye el tanque sobre un mueble).

2.14 Gire las trabas del tanque de recuperación (G) hacia afuera (una a cada lado del tanque).Levante el mango en forma recta hacia arriba y levante el tanque de la aspiradora.

Traslade el tanque a un fregadero o sumidero.

2.15 Baje el mango hacia la parte posterior del tanque para destrabar la tapa. Levante la tapa del tanque.

Vacíe el tanque y vuelva a colocar la tapa.

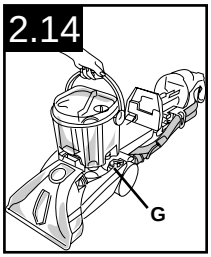

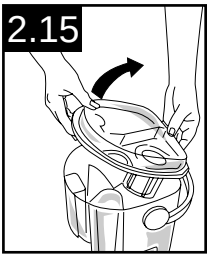

Para garantizar una máxima capacidad de succión, es importante que la tapa del tanque de recuperación esté asegurada correctamente antes de limpiar.

Levante el mango del tanque a la posición de transporte y colóquelo sobre la aspiradora. Baje el mango a la parte delantera del tanque.

Gire las trabas (una a cada lado del tanque) hacia adentro para que el tanque quede fijo en su lugar.

• IMPORTANTE •

Antes de poner la limpiadora en posición vertical, asegúrese de que el mango del tanque esté colocado hacia delante, de modo que la tapa del tanque quede bloqueada. Si el mango del tanque no está colocado adecuadamente, puede averiarse y ocasionar una baja succión.

APAGADO AUTOMÁTICO

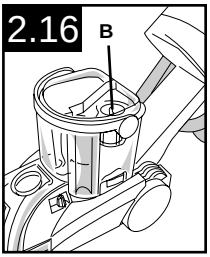

Cuando el tanque de recuperación (tanque inferior) está lleno, el mecanismo de apagado automático apaga la succión de la aspiradora (la succión se reduce de manera significativa).

2.16 En ese momento, el disco flotante amarillo se eleva a la parte superior de la tapa del tanque de recuperación (B). La aspiradora ya no aspira más solución sucia, y el sonido del motor se vuelve mucho más agudo.

Cuando esto ocurre, apague la aspiradora y vacíe el tanque de recuperación antes de seguir usándolo.

Revise también el tanque de agua limpia; es posible que se necesite volver a llenarlo.

No lo use si el flotador y el dispositivo de retención del flotador no se encuentran en su lugar. Si está roto o fuera de lugar, llévelo a un Centro o Concesionario autorizado de servicio de Hoover® para que lo reparen.

3. CÓMO LIMPIAR

ANTES DE COMENZAR A LIMPIAR

A. Aspire bien. En el caso de alfombras, use una aspiradora Hoover® con un agitador para obtener los mejores resultados. Limpie los tapizados con una aspiradora que tenga accesorios de limpieza. Use un accesorio para hendiduras para limpiar nudos y pliegues. No use la aspiradora como aspiradora en seco.

B. Para tapizados, consulte el código de limpieza. Use su aspiradora HOOVER® únicamente si la tela del tapizado está marcada con una “W” (para limpieza “húmeda”) o “S/W” (para limpieza con “solvente/en seco” o “húmeda”). No limpie las telas marcadas con una “S” (únicamente para limpieza “con solvente/en seco”). Si su tapizado no tiene un código, solicite la ayuda de un profesional.

C. Realice una prueba para verificar que no destiña. Humedezca un paño blanco absorbente con el detergente. Frote suavemente la superficie con el paño humedecido en un área pequeña y oculta. Espere diez minutos y, con una toalla de papel o un paño blancos, verifique si la superficie se ha descolorado o si el color se ha corrido. Si la superficie tiene más de un color, verifique todos los colores.

D. Al limpiar todo el suelo, mueva los muebles fuera del área que se desea limpiar (es probable que esto no sea necesario si únicamente se limpian áreas de alto tránsito). En el caso de que los muebles sean demasiado pesados para moverlos, coloque papel de aluminio o papel encerado debajo de las patas. Esto evitará que los acabados de la madera manchen la alfombra. Sujete con alfileres los faldones de los muebles y los cortinados.

E. Realice un tratamiento previo de las manchas y de las áreas de alto tránsito con el Rociador limpiador para manchas HOOVER®*. Siga las instrucciones incluidas en la botella.

F. Para evitar manchas, use papel de plástico o de aluminio para proteger las superficies de madera o de metal de la posibilidad de que sean rociadas con agua.

G. Para evitar que los suelos de madera debajo de las alfombras de área/la alfombra de pared a pared se humedezcan y se dañen, mueva las alfombras de área/la alfombra de pared a pared a una superficie de suelo duro que no sea de madera o coloque material impermeable debajo de las alfombras (p. ej., plástico), antes de limpiarlas.

Vea las páginas 14-18 para obtener instrucciones sobre distintas tareas de limpieza.

*Disponible a un costo adicional, si no viene incluida con su modelo.

LIMPIEZA DE ALFOMBRAS

Lea las instrucciones “Antes de comenzar a limpiar”, que figuran arriba.

Para moquetas de pared a pared y moquetas de área, coloque el conjunto de cepillos con las cerdas más cortas de color verde. (Consulte la sección Mantenimiento, Cepillos: cómo retirarlos y cómo volver a colocarlos). No use el conjunto de cepillos para suelos duros al limpiar moquetas.

Llene el tanque de agua limpia de acuerdo con las instrucciones que aparecen en la Fig. 2.9.

Llene el contenedor para detergente con detergente Hoover® de acuerdo con las instrucciones de las Fig. 2.10 y 2.11.

Seleccione el modo SpinScrub® apropiado (vea la pág. E8).

Séquese las manos y enchufe el cordón en una toma de corriente con una conexión a tierra adecuada.

No limpie sobre tomas de corriente eléctrica ubicadas en el suelo.

Para evitar caminar sobre la alfombra húmeda, comience por el extremo de la habitación más alejado de la puerta o por el trayecto hacia el fregadero donde se vacían y llenan los tanques.

Pise el pedal para soltar el mango y baje el mango a la posición de funcionamiento.

3.1 Coloque el Interruptor de posición Rinse (Enjuague) en WASH-Rinse (LAVADO-Enjuague) (o Auto-Rinse opcional). Encienda la aspiradora

Oprima el gatillo para aplicar la solución de limpieza y empuje lentamente la aspiradora hacia adelante (equivale a una pasada húmeda).

3.2 Continúe oprimiendo el gatillo y tire lentamente de la aspiradora hacia atrás en dirección a usted (segunda pasada húmeda). La aspiradora enjuaga la alfombra en la pasada hacia atrás.

PARA MODELOS CON FUNCIÓN DE AUTO-ACLARADO (Disponible sólo en algunos modelos) 3.1 Coloque el Interruptor de posición Rinse (Enjuague) en WASH-Rinse (LAVADO-Enjuague) (o Auto-Rinse opcional). Encienda la aspiradora

Oprima el gatillo para aplicar la solución de limpieza y empuje lentamente la aspiradora hacia adelante (equivale a una pasada húmeda).

3.2 Continúe oprimiendo el gatillo y tire lentamente de la aspiradora hacia atrás en dirección a usted (segunda pasada húmeda). La aspiradora enjuaga la alfombra en la pasada hacia atrás.

• IMPORTANTE •

Para asegurar un enjuague apropiado, es importante mantener la aspiradora en el mismo trayecto hacia atrás y hacia delante.

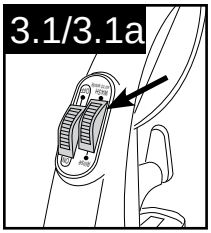

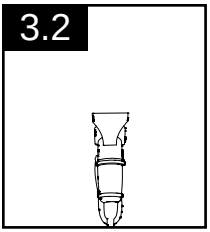

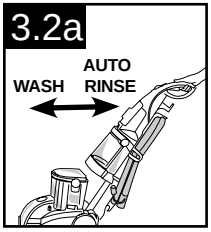

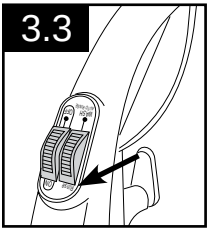

Suelte el gatillo y empuje lentamente la aspiradora hacia delante sobre un área donde recién se haya rociado la solución (pasada seca). Luego tire lentamente de la aspiradora hacia atrás en dirección a usted sin oprimir el gatillo (pasada seca). Siga usando pasadas secas hasta que se observe poca agua que pase por la tapa del tanque de recuperación (Pase sobre la misma área un mínimo de 4 veces = 2 oprimiendo el gatillo y 2 sin oprimirlo).

Para obtener los mejores resultados, realice pasadas en forma recta y paralela. Superponga las pasadas 1 pulgada para ayudar a evitar la formación de vetas.

Mantenga la boquilla plana sobre el suelo al realizar pasadas tanto hacia adelante como hacia atrás.

3.3 Si desea enjuagar la moqueta sólo con agua, coloque el interruptor de posición Rinse (Enjuague) en RINSE (ENJUAGUE). Repita el movimiento de limpieza. En esta posición, el enjuague se realizará en pasadas tanto hacia adelante como hacia atrás.

Para áreas muy sucias, repita el movimiento de limpieza. Evite saturar la moqueta, como se indica. Es mejor alternar pasadas húmedas y secas, como se describió anteriormente.

Para obtener los mejores resultados de limpieza y para ayudar a que la moqueta se seque más rápido, finalice con más pasadas secas. (Continúe realizando pasadas secas hasta que se observe poca agua que pase por la tapa del tanque de agua sucia).

Vacíe el tanque de agua sucia cuando el sonido del motor se vuelva más agudo y haya una pérdida de succión (vea “Apagado automático”, Fig. 2.17).

Cuando termine de limpiar, siga las instrucciones “Después de limpiar” que aparecen en la página 13.

• IMPORTANTE •

Para evitar saturar la alfombra, no realice más de 4 pasadas húmedas sobre un área. Siempre finalice con pasadas secas.

ASPIRACIÓN DE DERRAMES

Su aparato SteamVac® de HOOVER® también puede usarse para recoger pequeños derrames de líquidos en moquetas y tapizados.

Para obtener los mejores resultados, aspire los derrames inmediatamente colocando la boquilla para escaleras/tapizados justo por encima del derrame y succionando cualquier residuo que haya quedado sobre la alfombra. Si no se ha eliminado el derrame, coloque la boquilla para escaleras/tapizados o la boquilla para suelos delante del derrame con el selector de modo SpinScrub® en SPILL PICK-UP (ASPIRADO DE DERRAMES), tire de la boquilla muy lentamente sobre el derrame usando sólo la succión al principio. Repita con rociado y succión.

Si queda una mancha, la boquilla para escaleras/tapizados suele ser más eficaz para eliminarla. Si bien ninguna solución de limpieza puede eliminar completamente todas las manchas, éstas pueden tratarse siguiendo las instrucciones proporcionadas por el fabricante de la alfombra, el tapizado o la superficie del suelo duro que se está limpiando.

No use la aspiradora SteamVac™ para aspirar líquidos o sustancias químicas inflamables o combustibles.

Cuando termine, siga las instrucciones “Después de limpiar”.

DESPUÉS DE LIMPIAR

a. Deje secar la alfombra o el tapizado. Para ayudar a evitar que las superficies se opaquen o se vuelvan a ensuciar, mantenga a los niños y a las mascotas lejos de la superficie hasta que esté completamente seca. Si es necesario caminar sobre la alfombra húmeda, coloque toallas o paños blancos en las áreas de tránsito.

Si se deben colocar los muebles antes de que la alfombra esté seca, coloque papel de plástico o de aluminio debajo de las patas de los muebles de modo que las correderas de metal o los acabados de madera no manchen la alfombra.

Vacíe los tanques, enjuague con agua limpia y deje secar al aire. Enjuague la tapa del tanque de recuperación y deje secar al aire.

3.4 Retire las pelusas de la rejilla del filtro que se encuentra dentro del tanque de recuperación.

3.5 Retire las pelusas de la rejilla del filtro que se encuentra en la parte inferior de la aspiradora de la siguiente manera.

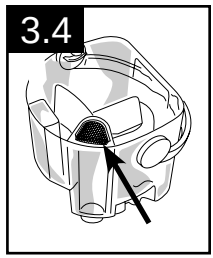

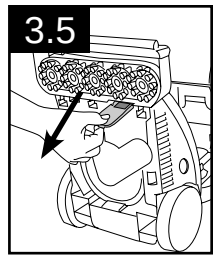

• IMPORTANTE •

Cuando parezca que los cepillos giran lentamente, desconecte la aspiradora de la toma de corriente eléctrica, verifique la rejilla y límpiela.

4. ACCESORIOS

PARA CONECTAR LA MANGUERA

⚠PRECAUCIÓN⚠

Para reducir el riesgo de lesiones ocasionadas por piezas en movimiento, desenchufe la aspiradora.

Cómo conectarlos

4.1 Abra el orificio de conexión de la manguera (A).

Introduzca el extremo corto de la manguera y haga coincidir las lengüetas de la manguera con las ranuras del mismo tamaño en el orificio de conexión.

Empuje la manguera en el orificio y fíjela en su lugar.

4.2 Enchufe con fuerza el tubo de solución en el orificio de conexión para la solución (B).

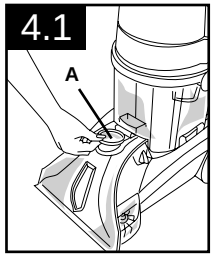

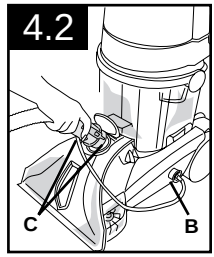

Cómo retirarlos

4.2 Oprima las trabas (C) de la parte superior e inferior de la manguera. Retire la manguera del orificio. Cierre la puerta.

Retire el tubo de solución del orificio de conexión para la solución.

ACCESORIOS

A. El accesorio de mano SpinScrub® tiene cepillos giratorios para una acción de fregado adicional en áreas pequeñas de alfombras, escaleras alfombradas y tapizados. En algunos modelos, es posible retirar los cepillos para convertir al módulo de fregado. (Disponible sólo en algunos modelos)

B. La boquilla para escaleras/tapizados tiene un cepillo incorporado que ayuda a proporcionar la acción de fregado que puede ser necesaria para eliminar algunas manchas.

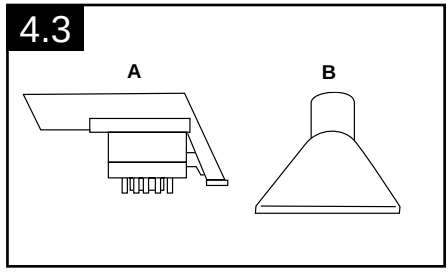

ACCESORIO DE MANO SPINSCRUB®

(Disponible sólo en algunos modelos)

4.4 Para retirar el accesorio de mano SpinScrub® tire del accesorio hacia abajo y hacia afuera.

Para volver a colocar el accesorio, invierta este procedimiento.

Cómo volver a colocar la tapa del accesorio

4.5 La tapa del accesorio ha sido diseñada con una función “desprendible” que permite que se suelte si se empuja demasiado para abrirla.

Para volver a colocarla, alinee las bisagras de la tapa con los orificios en los costados de la zona de almacenaje del accesorio. Encaje la puerta en su lugar.

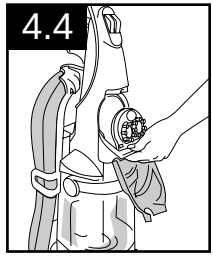

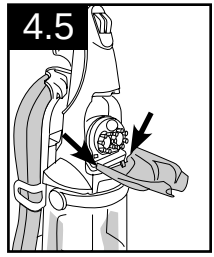

Cómo conectar los accesorios

⚠PRECAUCIÓN⚠

Para reducir el riesgo de lesiones ocasionadas por piezas en movimiento, desenchufe la aspiradora.

Coloque el mango en posición vertical y retire la manguera del soporte.

Todos los accesorios deben conectarse a la manguera de la misma manera.

Conecte el accesorio a la manguera deslizándolo sobre el conector hasta que la lengüeta (G) lo trabe con seguridad.

Con el pulgar, empuje hacia delante y hacia arriba sobre la traba (H) para retirar el accesorio.

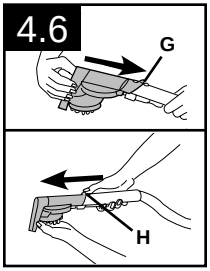

Después de usar el accesorio

Drene la manguera de succión encendiendo la aspiradora y manteniendo la boquilla levantada durante varios minutos. No presione el gatillo.

⚠PRECAUCIÓN⚠

Para reducir el riesgo de lesiones ocasionadas por piezas en movimiento, desenchufe la aspiradora.

Desconecte la manguera y el tubo de solución de la aspiradora.

4.7 Drene el tubo de solución colocando el extremo redondo en el fregadero y levantando la boquilla sobre su cabeza. Presione el gatillo.

4.8 Puede retirar la funda de los accesorios y colgarla en una percha para guardarla, o puede volver a colocarla en la aspiradora

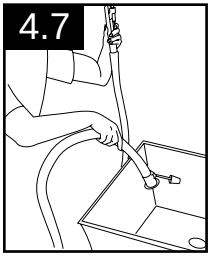

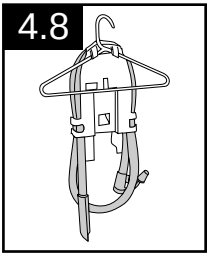

LIMPIEZA DE ESCALERAS ALFOMBRADAS

Lea las instrucciones “Antes de comenzar a limpiar” que se encuentran en la página 10.

Conecte la manguera y el tubo de solución como se indica en las Fig. 4.1 y 4.2.

Coloque el mango en posición vertical. Los cepillos del agitador no giran mientras el mango se encuentra en posición vertical.

Llene el tanque de agua limpia de acuerdo con las instrucciones que aparecen desde la Fig. 2.9 hasta la 2.11.
Llene el contenedor para detergente con Detergente para alfombras/tapizados HOOVER® de acuerdo con las instrucciones de la Fig. 2.11.

Conecte el accesorio al extremo de la manguera.

Según la longitud de la manguera, es posible que la máquina deba colocarse en la parte superior de las escaleras para limpiar la mitad superior de las escaleras y, al pie de las escaleras para limpiar la mitad inferior.

⚠ ADVERTENCIA ⚠

Tenga sumo cuidado cuando limpie escaleras para evitar que se caiga la máquina.

No coloque la aspiradora en escaleras.

No apunte los accesorios en dirección a las personas ni a las mascotas.

Séquese las manos y enchufe la aspiradora en una toma de corriente con una conexión a tierra adecuada.

Ponga el selector de la función de aclarado en la posición WASH (LAVAR). Ponga el aparato en marcha.

4.9 Realice un rociado preliminar de la escalera alfombrada sosteniendo el accesorio (A) o (B) aproximadamente una pulgada por encima de la alfombra y empújela hacia delante presionando el gatillo (equivale a una pasada húmeda)

Coloque el accesorio contra la parte vertical del escalón y presiónelo levemente en el pelo de la alfombra. Presione el gatillo y tire del accesorio lentamente sobre la alfombra (segunda pasada húmeda). Suelte el gatillo al final de la pasada.

4.10 Levante el accesorio y colóquelo contra la parte vertical del escalón. Tire del accesorio lentamente sobre la alfombra sin presionar el gatillo (pasada seca).

Superponga las pasadas 1/2 pulgada para ayudar a evitar la formación de vetas.

Es mejor alternar pasadas húmedas y secas como se describe anteriormente. Finalice con más pasadas secas para ayudar a que la alfombra se seque más rápido.

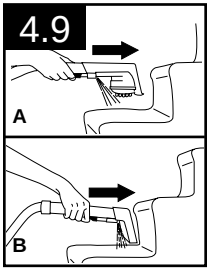

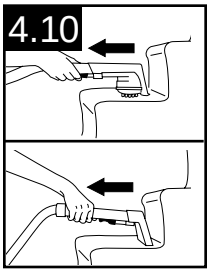

Para evitar saturar la alfombra, no realice más de 4 pasadas húmedas sobre un área. Siempre finalice con pasadas secas.

Si es necesario realizar una limpieza adicional, espere hasta que la alfombra esté completamente seca antes de volver a usar el accesorio.

Vacíe el tanque de recuperación cuando el sonido del motor se vuelva más agudo y haya una pérdida de succión (vea “Apagado automático”, Fig. 2.17).

Cuando termine de limpiar, siga las instrucciones “Después de limpiar” que aparecen en la página 15 y “Después de usar el accesorio” que aparecen en la página E15.

LIMPIEZA DE TAPIZADOS

Lea las instrucciones “Antes de comenzar a limpiar” que se encuentran en la página 13.

Asegúrese de consultar el código de limpieza en su tapizado. Use su aspiradora sólo en tapizados marcados con “W” o “W/S”.

Conecte la manguera y el tubo de solución como se indica desde la Fig. 4.1 hasta la 4.2

Coloque el mango en posición vertical. Los cepillos del agitador no giran mientras el mango se encuentra en posición vertical.

Llene el tanque de agua limpia de acuerdo con las instrucciones que aparecen desde la Fig. 2.9 hasta la 2.11.

Llene el contenedor para detergente con detergente HOOVER® de acuerdo con las instrucciones de la Fig.2.10.

No use solución de limpieza para suelos duros cuando limpie tapizados.

Conecte el accesorio al extremo de la manguera.

No apunte los accesorios en dirección a las personas ni a las mascotas.

Séquese las manos y enchufe la aspiradora en una toma de corriente con una conexión a tierra adecuada.

• IMPORTANTE •

La función de aclarado no se puede utilizar a la vez que el accesorio. La manguera sólo dispensará agua mezclada con detergente.

Ponga el selector de la función de aclarado en la posición WASH (LAVAR). Ponga el aparato en marcha.

4.11 Presione suavemente el accesorio sobre la tela. Presione el gatillo y tire lentamente de la boquilla sobre la tela

Superponga las pasadas 1/2 pulgada para ayudar a evitar la formación de vetas.

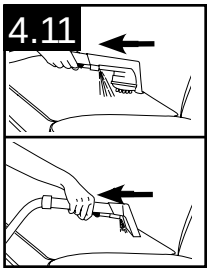

Realice pasadas adicionales sin presionar el gatillo para eliminar más humedad.

Para limpiar en esquinas o ranuras, levante el accesorio a una distancia de media pulgada de la tela y presione el gatillo para la solución.

Aspire la solución con el accesorio sin presionar el gatillo.

4.12 Para áreas muy sucias, es probable que sea necesario repetir el proceso de limpieza. Realice pasadas entrecruzadas al patrón original; superponga cada pasada

No realice más de 2 pasadas con la solución en cualquier área para evitar humedecer demasiado la tela y dañarla.

Si es necesario realizar una limpieza adicional, espere hasta que el tapizado esté completamente seco antes de volver a usar el accesorio.

Vacíe el tanque de recuperación cuando el sonido del motor se vuelva más agudo y haya una pérdida de succión (vea “Apagado automático”, Fig. 2.17).

Cuando termine de limpiar, siga las instrucciones “Después de limpiar” que aparecen en la página 13 y “Después de usar el accesorio” que aparecen en la página 15.

BOQUILLA: Cuándo limpiarlo

Si se depositan pelusas o cualquier otro residuo en la boquilla, puede retirarla y limpiarla.

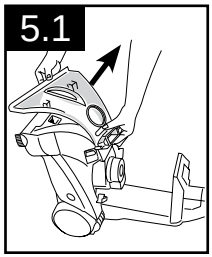

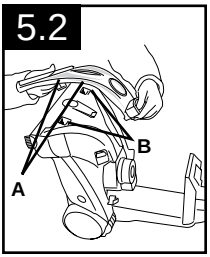

Retire ambos tanques, como se describe en la Fig. 2.16. Con el mango en posición vertical, incline la aspiradora hacia atrás de modo que el mango se apoye en el suelo.

5.1 Levante el borde posterior de la boquilla. Deslice la boquilla hacia arriba y retírela de la aspiradora.

5.2 Para volver a colocar la boquilla, alinee las lengüetas (A) de la boquilla con los orificios (B) de la aspiradora. Deslice las lengüetas en los orificios.

CEPILLOS: