Owner's Manual
Manual Del Propietario

Kenmore®

Vacuum Cleaner
Aspiradora

Model , Modelo 116.35912
116.35913

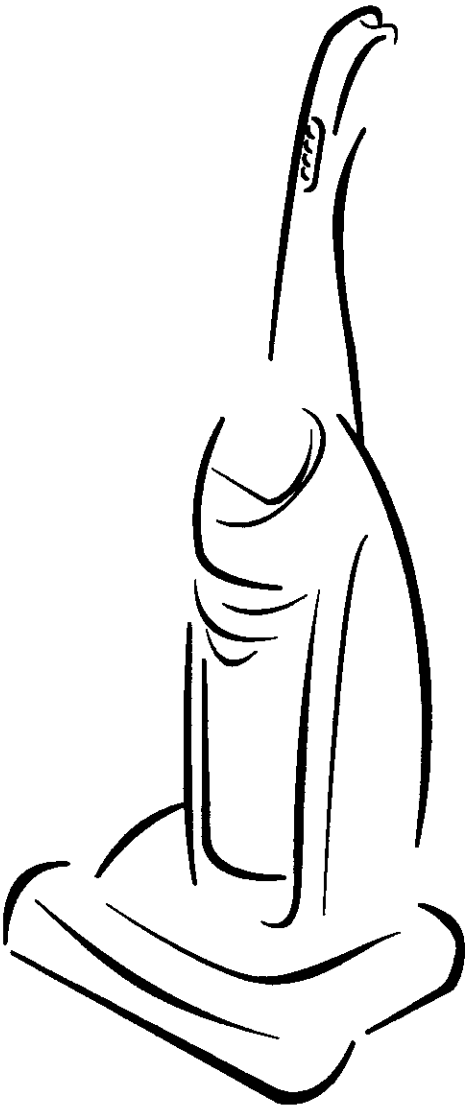

ENGLISH

ESPAÑOL

CAUTION:
Read and follow all safety and operating instructions before first use of this product.

CUIDADO:
Lea y sigue todas las instrucciones de operación y seguridad antes del uso de este producto.

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.
www.sears.com

Part No. CØ1ZCHEØØUØØ-KCØ1ZCHEZØUØ

Printed in Mexico
Impreso en Mexico

TABLE OF CONTENTS

Before Using Your New Vacuum Cleaner 2
Kenmore Vacuum Cleaner Warranty 2
Important Safety Instructions 3
Parts and Features 4
Assembly Instructions 5-6

Operating Instructions 6
- Cord Release 6
- Releasing the Handle 7
- Touch Control 7
- Gentle Sweep Function 7
- Pile Height Selection and Setting 8
- Attachments 9-10
- Attachment Use Table 11
- Vacuuming Tips 11
- Performance/Safety Features 12

Vacuum Cleaner Care 13
- Vacuum Cleaner Storage 13
- Cleaning Exterior and Attachments 13
- Dust Bin Cleaning 14
- Primary Filter Removal and Cleaning . 15, 16
- Motor Safety Filter Cleaning 16
- Exhaust Filter Replacement 17
- Light Bulb Replacement 18
- Agitator Cleaning 19
- Clog Removal 19

Troubleshooting 20
Requesting Assistance Or Service ... back page

BEFORE USING YOUR NEW VACUUM CLEANER

Please read this guide. It will help you assemble and operate your new Kenmore vacuum cleaner in the safest and most effective way.

For more information about vacuum cleaner care and operation, call your nearest Sears store. You will need the complete model and serial numbers when requesting information. Your vacuum cleaner's model and serial numbers are located on the Model and Serial Number Plate.

Use the space below to record the model number and serial number of your new Kenmore vacuum cleaner.

Model No._____

Serial No. _____

Date of Purchase _____

Keep this book and your sales check (receipt) in a safe place for future reference.

KENMORE VACUUM CLEANER WARRANTY

LIMITED ONE YEAR FULL WARRANTY ON KENMORE VACUUM CLEANER

This warranty is for one year from the date of purchase, and includes only private household vacuum cleaner use. During the warranty year, when this vacuum cleaner is operated and maintained according to the owner's manual instructions, Sears will repair any defects in material or workmanship free of charge.

This warranty excludes vacuum cleaner bags, belts, light bulbs, and filters, which are expendable parts and become worn during normal use.

For warranty service, return this vacuum cleaner to the nearest Sears Service Center in the United States.

This warranty applies only while this product is in use in the United States. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., D/817 WA, Hoffman Estates, IL 60179

IMPORTANT SAFETY INSTRUCTIONS

⚠ WARNING:

Your safety is important to us. To reduce the risk of fire, electrical shock, injury to persons or damage when using your vacuum cleaner, follow basic safety precautions including the following:

Read all instructions in this manual before assembling or using your vacuum cleaner.

Use your cleaner only as described in this manual. Use only with Sears recommended attachments.

Disconnect electrical supply before servicing or cleaning out the brush area. Failure to do so could result in electrical shock or the brush suddenly starting.

Do not leave cleaner when plugged in. Unplug from outlet when not in use and before performing maintenance.

To reduce the risk of electrical shock - Do not use outdoors or on wet surfaces.

Do not allow to be used as a toy. Close attention is necessary when used by or near children.

Do not use with a damaged cord or plug. If cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped in water, return it to a Sears Service Center.

Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run cleaner over cord. Keep cord away from heated surfaces.

Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

Do not handle plug or cleaner with wet hands.

Do not put any objects into openings.

Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

Turn off all controls before unplugging.

Use extra care when cleaning on stairs.

Do not put on chairs, tables, etc. Keep on floor.

Do not use cleaner to pick up flammable or combustible liquids (gasoline, cleaning fluid, perfumes, etc.), or use in areas where they may be present. The fumes from these substances can create a fire hazard or explosion.

Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

Do not use cleaner without dust bin and/or filters in place.

Always clean the dust bin after vacuuming carpet cleaners or freshener, powders, and fine dust. These products clog the filters, reduce airflow and can cause damage to the cleaner. Failure to clean the dust bin could cause permanent damage to the cleaner.

Do not use the cleaner to pick up sharp hard objects, small toys, pins, paper clips, etc. They may damage the cleaner or dust bin.

Unplug before connecting Handi-mate Jr.®

You are responsible for making sure that your vacuum cleaner is not used by anyone unable to operate it properly.

ENGLISH

SAVE THESE INSTRUCTIONS

Proper assembly and safe use of your vacuum cleaner are your responsibilities. Your cleaner is intended for **Household use**. Read this Owner's Manual carefully for important use and safety information. This guide contains safety statements under warning and caution symbols.

PARTS AND FEATURES

It is important to know your vacuum cleaner's parts and features to assure its proper and safe use. Review these before using your vacuum cleaner.

Item	Part No. In U.S.	Part No. In Canada
Headlight Bulb	20-5248	20-5248
Exhaust Filter	20-86889	20-86889C
Primary Filter	20-82912	

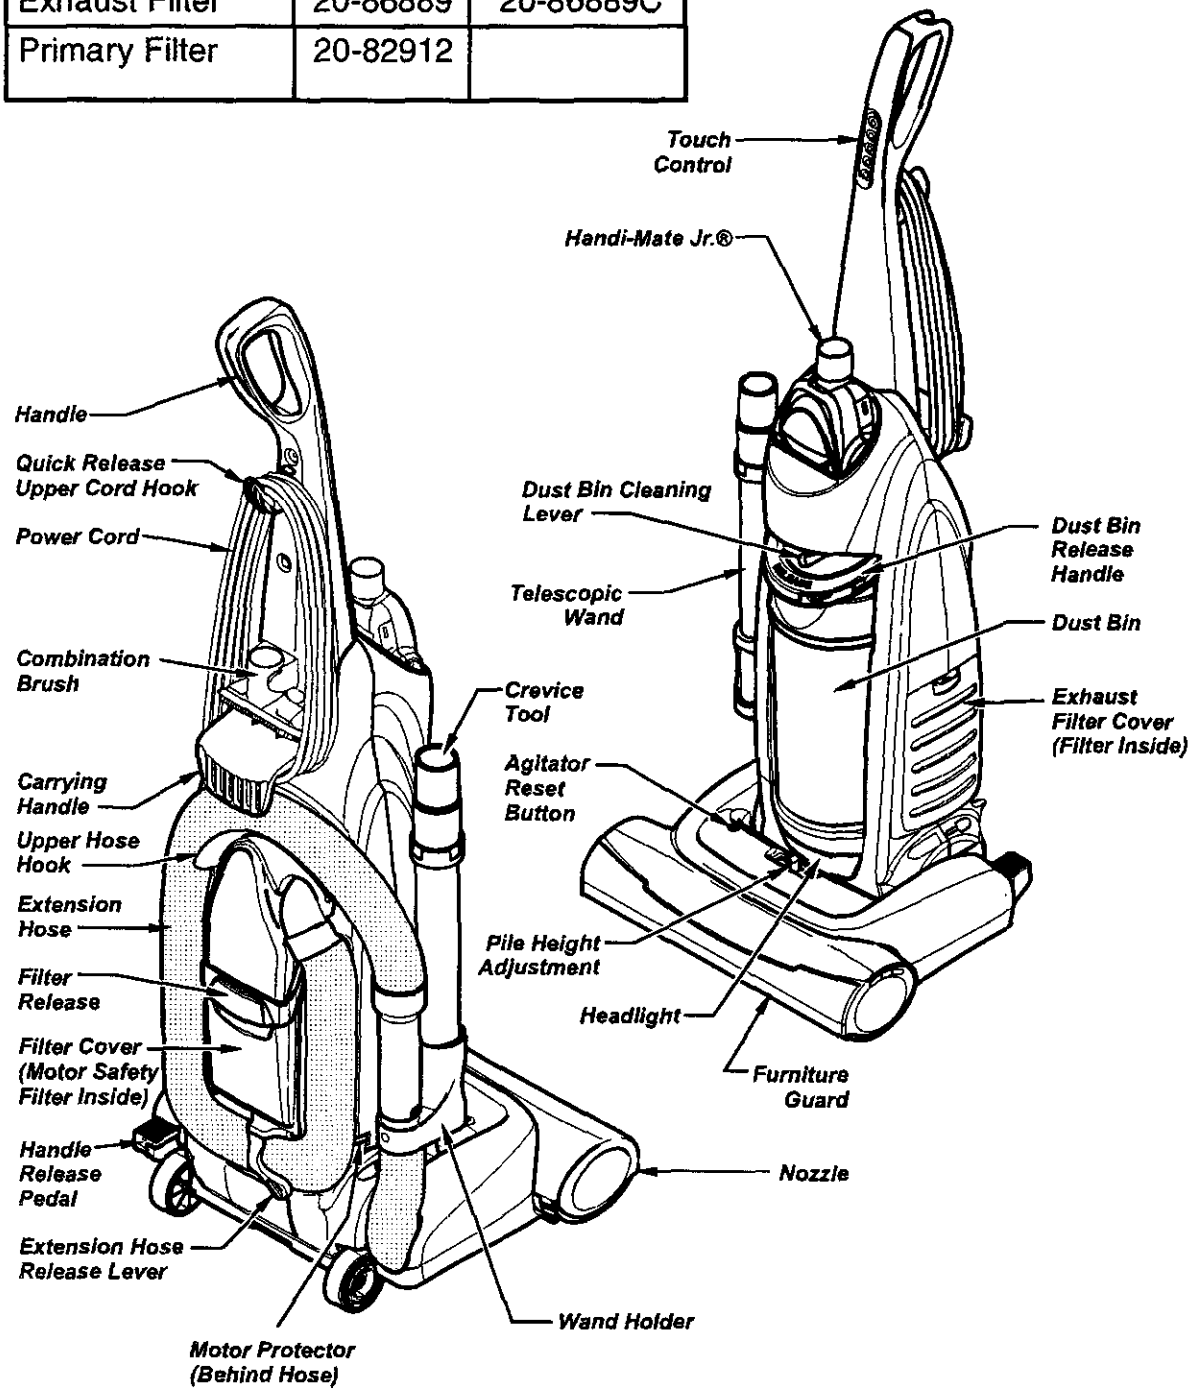

Please pay special attention to these hazard alert boxes, and follow any instructions given. **WARNING** statements alert you to such dangers as fire, electric shock, burns and personal injury. **CAUTION** statements alert you to such dangerous personal injury and/or property damage.

ASSEMBLY INSTRUCTIONS

WARNING

Electrical Shock Hazard

Do not plug into the electrical supply until the assembly is complete. Failure to do so could result in electrical shock or injury.

Before assembling the vacuum cleaner, check the **PACKING LIST** on the cover of the separate **REPAIR PARTS LIST**. Use this list to verify that you have received all the components of your new Kenmore vacuum cleaner.

HANDLE ASSEMBLY

Remove the handle screw from the body of the vacuum.

Remove the combination brush from the handle to expose the handle mounting hole.

Position the handle assembly as shown in the illustration below.

When installing the handle, firmly press the handle onto the body. Secure with handle screw provided.

Begin to tighten the screw with your fingers. It may be necessary to adjust the handle slightly.

Using a screwdriver, tighten handle screw.

Reinstall combination brush.

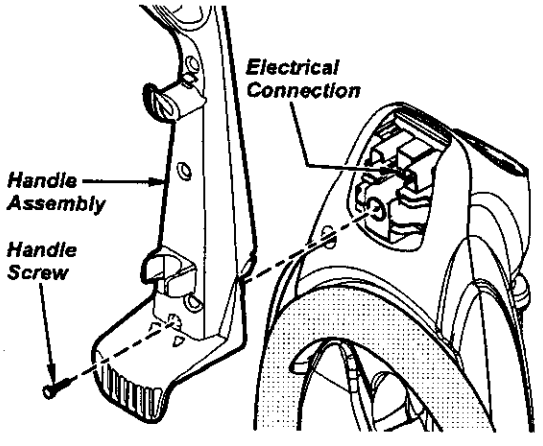

CAUTION

Do not over tighten.

Over tightening could strip the handle screw hole.

Do not operate the vacuum cleaner without the screw in place.

ENGLISH

CORD ASSEMBLY

Make sure the quick release upper cord hook is in the upright position. Remove the wire tie from the power cord.

Make sure the power cord is placed into the locking notch on the body as shown. This helps keep the power cord out from under the vacuum cleaner agitator.

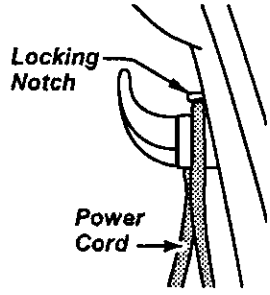

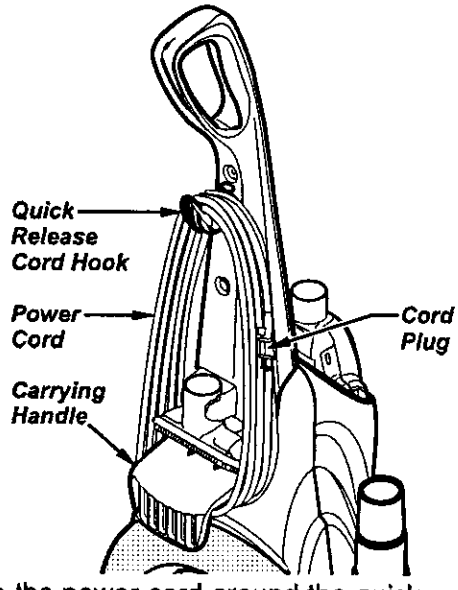

Wrap the power cord around the quick release cord hook and the carrying handle. Lock the power cord plug onto the power cord.

HANDI-MATE JR.®

For operation of Handi-Mate Jr.® see separate Owner's Manual.

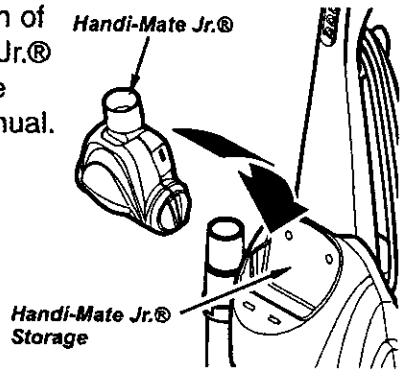

TO INSERT HANDI-MATE JR®

Place Handi-Mate Jr.® into the storage compartment.

Rotate the Handi-Mate Jr.® back until it snaps into place.

TO REMOVE HANDI-MATE JR.®

Rotate Handi-Mate Jr.® out of the storage compartment.

TELESCOPIC WAND PLACEMENT

Place the telescopic wand in the wand holder. Place the crevice tool in the top of the telescopic wand.

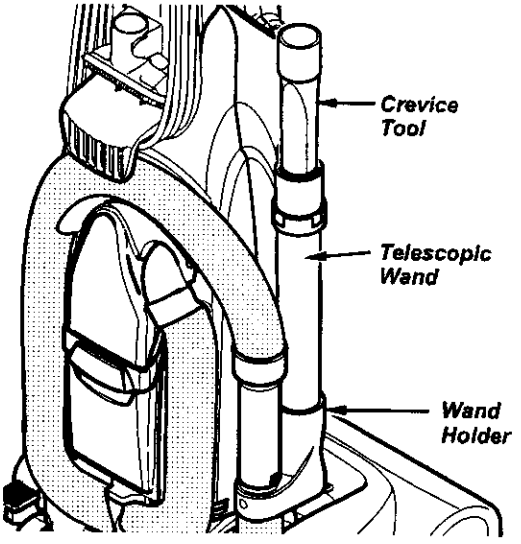

OPERATING INSTRUCTIONS

CORD RELEASE

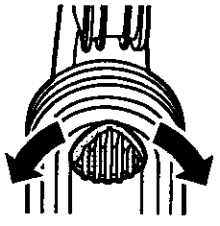

1. Turn the quick release upper cord hook to either side and down to release the power cord.

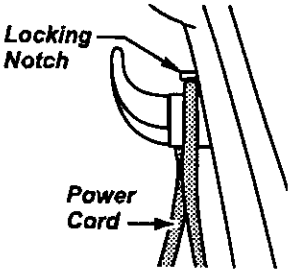

2. Detach the power cord plug from the power cord and pull the cord off the quick release upper cord hook. Be sure the power cord is still locked into the locking notch of the upper cord hook.

3. Plug the polarized power cord into a 120 Volt outlet located near the floor.

4. To replace cord, turn upper cord hook to the up position, then wrap cord.

⚠ WARNING

• To reduce the risk of electric shock, this vacuum cleaner has a polarized plug (one blade is wider than the other).
• The plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified technician to install the proper outlet. Do not change the plug in any way.

⚠ WARNING

Personal Injury and Product Damage Hazard
• DO NOT place hands or feet under the unit at any time.
• DO NOT use outlets above counters. Damage from cord to items in surrounding area could occur.

RELEASING THE HANDLE

Release the handle by pressing down on the handle release pedal with your foot and pulling back and down on the handle with your hand.

Note: The agitator does not rotate when the vacuum cleaner is in the upright position.

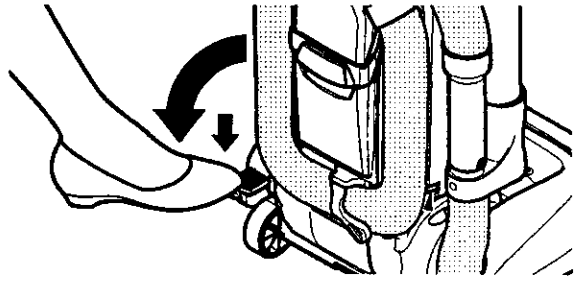

TOUCH CONTROL

OFF - Turns **OFF** the vacuum cleaner (suction) motor.

CARPET - Turns **ON** the vacuum cleaner motor to **HIGH** suction level and the agitator motor to **HIGH** speed level for cleaning of most carpets and rugs.

GENTLE - Turns **ON** the vacuum cleaner motor to **HIGH** suction level and the agitator motor to **LOW** speed level for gentle cleaning of most delicate carpets.

FLOOR - Turns **ON** the vacuum cleaner motor to **HIGH** suction level and turns **OFF** the agitator motor for cleaning of bare floors.

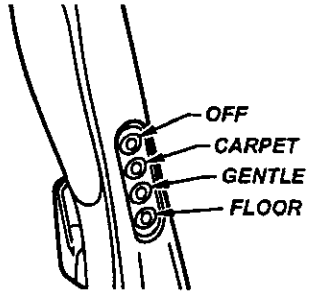

MOTOR FUNCTION		
Touch Control Button	Vacuum Cleaner (Suction) Motor	Agitator Motor
OFF	OFF	OFF
CARPET	HIGH	HIGH
GENTLE	HIGH	LOW
FLOOR	HIGH	OFF

ENGLISH

GENTLE SWEEP FUNCTION

Your Kenmore Vacuum features a two (2) speed, direct drive agitator for cleaning a variety of floor surfaces. Please review the table below before using your vacuum.

1. Do not use the CARPET setting (high speed) for cleaning berber style carpet. The high agitator speed could damage the carpet or cause excessive carpet wear.
2. Use the **GENTLE** setting (low speed) ***ONLY*** for berber or delicate pile carpeting. The agitator may slow down or stop on thick carpeting, area rugs or throw rugs. If agitator stops and does not restart, See page 12, AGITATOR MOTOR OVERLOAD PROTECTOR of the owners manual.
3. The FLOOR setting may be used for all indoor bare floors including wood, tile, linoleum, slate etc.

Touch Control Setting	Agitator Speed	Bare Floor	Commercial or Low Pile	Berber or Delicate Carpet	Plush	Shag	Area Rug
Carpet (1)	High		✔		✔	✔	✔
Gentle (2)	Low			✔			
Floor (3)	Off	✔					

PILE HEIGHT SELECTION AND SETTING

To select a pile height setting:

Turn off vacuum cleaner. Select a pile height setting by tilting the cleaner back until front wheels are lifted slightly off the floor.

Slide the adjustment lever to the correct setting.

There are four (4) pile height settings on the vacuum cleaner. Use the **LOW** setting for most low-pile carpets and bare floor cleaning (with agitator **OFF**), and the **HIGH** setting for high-pile carpets like shag carpet, scatter rugs, etc. Use the other settings as needed for carpet heights in between.

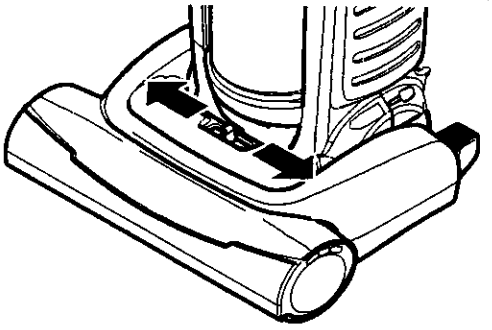

CAUTION

Do not allow vacuum cleaner to remain in one spot for any length of time when the agitator is turning. Damage to carpet may occur.

ATTACHMENTS

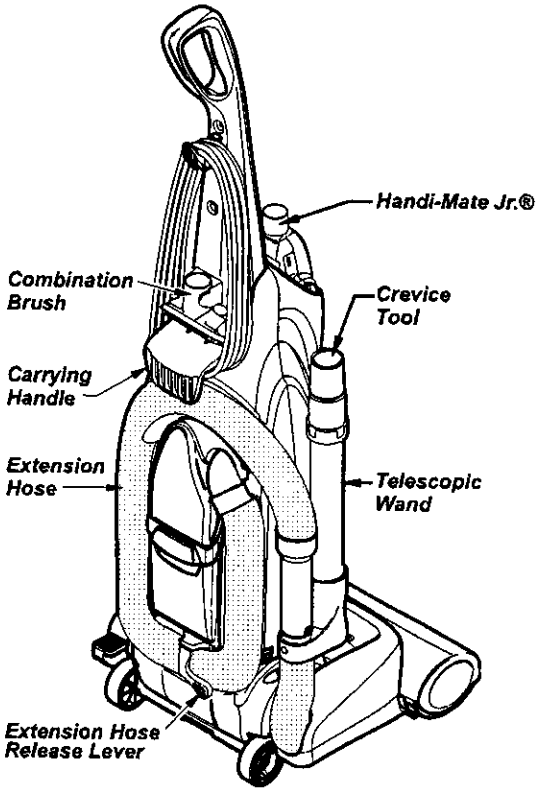

TO USE ATTACHMENTS

Remove the lower end of the extension hose from the wand holder by grasping the hose collar, twisting, and pulling straight up.

Rotate the extension hose release lever down if maximum reach is needed.

Note: The motor protector may open when using attachments or when cleaning new carpet, due to reduced airflow caused by the attachments themselves or caused by new carpet lint filling the dust bin quickly. See the **TROUBLESHOOTING** section.

WARNING

Electrical Shock And Personal Injury Hazard

Disconnect electrical supply before performing maintenance to the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

TELESCOPIC WAND WITH SUCTION CONTROL SLIDE

1. Remove the lower end of the extension hose from the wand holder by grasping the hose collar, twisting, and pulling straight up.

2. Remove the telescopic wand from the wand holder.

3. Remove the crevice tool from its storage position in the wand. Turn the locking ring to the **UNLOCK** position.

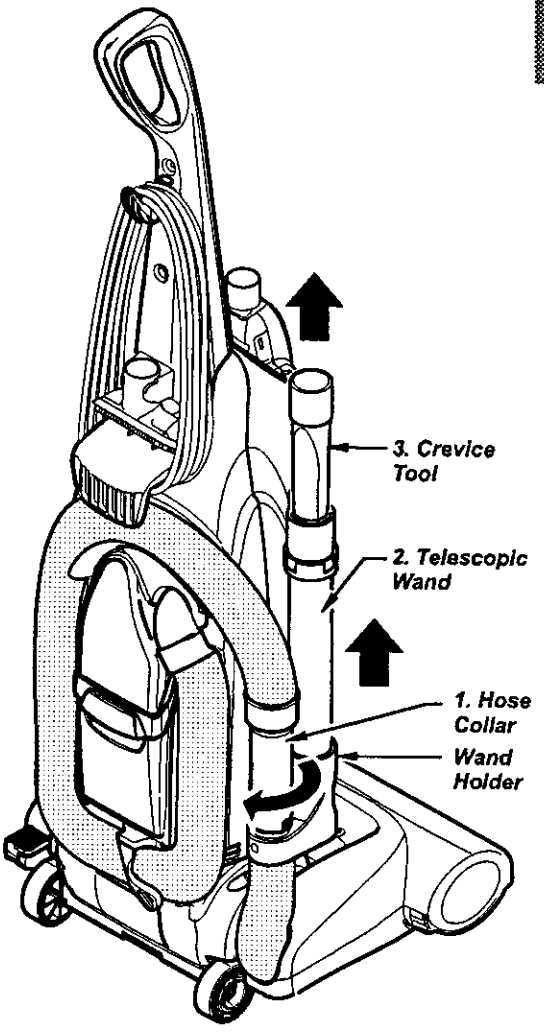

ENGLISH

Extend the wand to its full length. Turn the locking ring to the **LOCK** position. Attach the extension wand onto the open end of the hose.

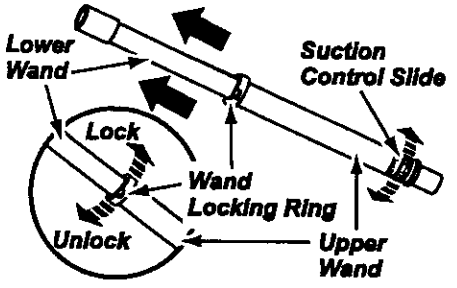

Align the tabs on the extension wand with the "J" slots in the hose. Push the wand into the hose and twist to the right to lock.

To achieve maximum reach with the attachments, add the crevice tool to the end of the wand by inserting and twisting slightly.

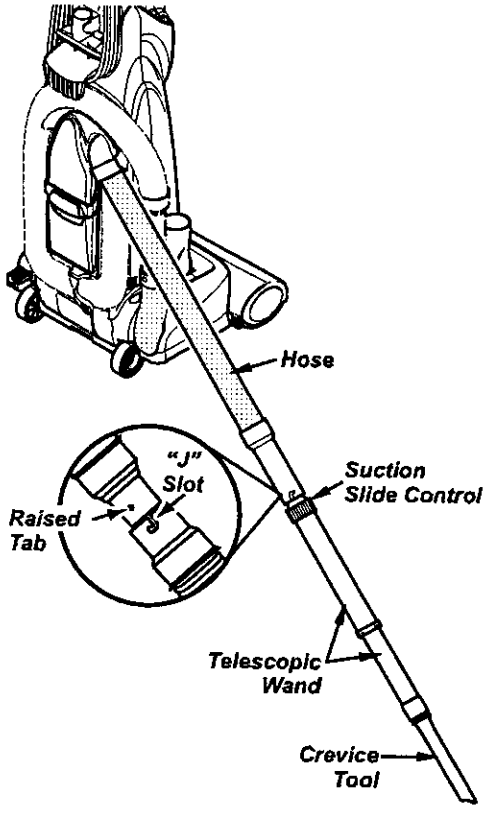

Attach combination brush directly to the wand.

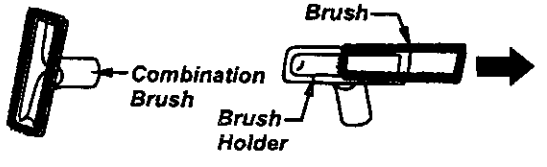

See **ATTACHMENT USE TABLE** for combination brush usage.

TO OPERATE SUCTION CONTROL SLIDE

Telescopic Wand

When using attachments for cleaning draperies, small rugs with low pile and other delicate items, twist the suction control slide to the open position. This slide is located on the telescopic wand, close to the hose.

This will reduce suction for ease of cleaning.

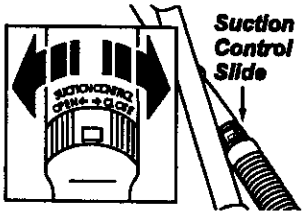

Note: Return suction control slide to the closed position for normal cleaning.

CAUTION

When using attachments, be careful not to overextend the stretch hose when reaching. Trying to reach beyond the hose stretch capability could cause the vacuum cleaner to tip over.

TO STORE ATTACHMENTS

Remove the combination brush. Snap into appropriate storage location.

Remove crevice tool from the wand by twisting. Lay aside.

Remove the telescopic wand from the hose.

Twist the wand to the left and pull from the hose end.

Unlock the wand by turning the wand locking ring to the **UNLOCK** position.

Slide the lower wand into the upper wand. Turn the wand locking ring to the **LOCK** position.

Place the crevice tool down into the compressed wand. Place the telescopic wand in the wand holder

CAUTION

DO NOT pull the vacuum cleaner around the room by the hose. Property damage or personal injury could result.

ATTACHMENT USE TABLE

ATTACHMENT	CLEANING AREA				
	Furniture*	Between Cushions*	Drapes*	Stairs	Walls
CREVICE TOOL	✔	✔		✔	
COMBINATION BRUSH	✔		✔	✔	
Handi-Mate Jr.®	✔			✔	

*Always clean attachments before using on fabrics.

✔ = Applicable

ENGLISH

VACUUMING TIPS

Carpet edges
Guide either side or the front of the nozzle along a baseboard.

Stairs
Set handle in full upright position. Agitator stops rotating. Use the crevice tool, combination brush or Handi-Mate Jr.®.

Unit Tipping
When using the attachments keep the extension hose release lever in the locked position when possible. This helps to keep the vacuum cleaner from tipping over when stretching the hose. If additional hose is needed then unlock the release lever and pull out additional hose. Use caution not to tip over vacuum cleaner.

WARNING

Personal Injury Hazard

DO NOT set the vacuum cleaner on stairs. It may fall, causing personal injury or property damage.

For best cleaning results, keep the airflow passage clear.

Unplug the vacuum cleaner from the outlet before checking.

MOTOR PROTECTION SYSTEM

Motor Protector

This vacuum cleaner has a motor protector by-pass valve which automatically opens to provide cooling air to the vacuum cleaner motor when a clog prevents the normal flow of air to the motor. If the by-pass valve opens to prevent motor overheating and possible damage to the vacuum cleaner, you will notice a change of sound as air rushes through the valve opening.

To correct problem: See the **TROUBLE-SHOOTING** section.

NOTE: The motor protector may open when using attachments or when cleaning new carpet, due to reduced airflow caused by the attachments themselves or by new carpet lint filling the dust bin quickly. See the **TROUBLESHOOTING** section.

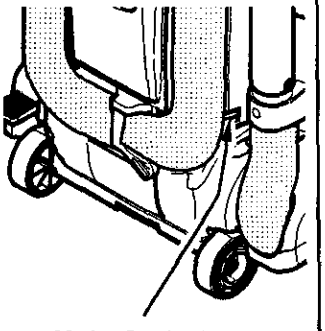

Motor Protector (Behind Hose)

Note: Do not block motor protector.

Thermal Protector

This vacuum cleaner has a thermal protector, which automatically trips to protect both the vacuum cleaner and the agitator motor from overheating. If a clog prevents the normal flow of air to the motor, the thermal protector turns the motor off automatically. This allows the motor to cool in order to prevent possible damage to the vacuum cleaner.

To correct problem: Turn the vacuum cleaner off and unplug the power cord from the outlet to allow the vacuum cleaner to cool and the thermal protector to reset. **Check for and remove clogs, if necessary. See page 19, CLOG REMOVAL section. Also check and replace any clogged filters. Wait approximately thirty (30) minutes and plug the vacuum cleaner in and turn back on to see if the motor protector has reset.**

AGITATOR MOTOR OVERLOAD PROTECTOR

The agitator motor has built-in protection against motor damage should the agitator jam. If the agitator slows down or stops, the agitator overload protector shuts off the agitator motor. The vacuum cleaner motor will continue to run.

To correct problem: Turn off and unplug vacuum cleaner, remove obstruction, then press reset button.

To reset: Push in the agitator overload protector button.

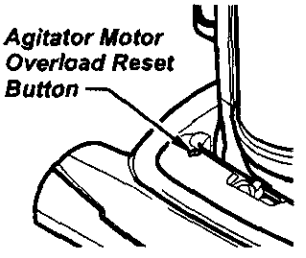

Agitator Motor Overload Reset Button

If the problem persists, have the vacuum cleaner serviced by a Sears or other qualified technician.

VACUUM CLEANER CARE

Always follow all safety precautions when performing maintenance to the vacuum cleaner.

WARNING

Electrical Shock And Personal Injury Hazard

Disconnect electrical supply before performing maintenance to the unit. Failure to do so could result in electrical shock or personal injury from vacuum cleaner suddenly starting.

VACUUM CLEANER STORAGE

Gather the cord and wrap it loosely around the upper and lower cord hooks. Lock power cord plug onto the power cord.

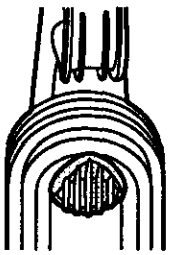

Store the vacuum cleaner in a dry, indoor area, on the floor with the handle locked in the upright position.

WARNING

Electrical Shock And Personal Injury Hazard

Wrapping the cord too tightly puts stress on the cord and can cause cord damage. A damaged cord is an electrical shock hazard and could cause personal injury or damage.

CLEANING EXTERIOR AND ATTACHMENTS

Unplug cord from wall outlet. **DO NOT** drip water on vacuum cleaner.

Clean exterior using a clean, soft cloth that has been dipped in a solution of mild liquid detergent and water, then wrung dry. Wipe dry after cleaning.

To reduce static electricity and dust build-up, wipe outer surface of vacuum cleaner and attachments.

Wash attachments in warm soapy water, rinse and air dry. **Do not clean in dishwasher.**

CAUTION

Do not use attachments if they are wet. Attachments used in dirty areas, such as under a refrigerator, should not be used on other surfaces until they are washed. They could leave marks.

DUST BIN CLEANING

WARNING

Always unplug power cord from electrical outlet before performing any service on vacuum.

TO REMOVE DUST BIN

Lift dust bin handle located at the top of the dust bin.

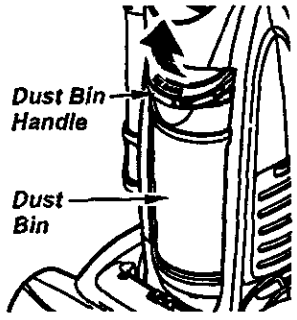

Pull the handle up and lift dust bin up and out of the vacuum cleaner.

Remove any clogs that might be located in the suction port or filter port area.

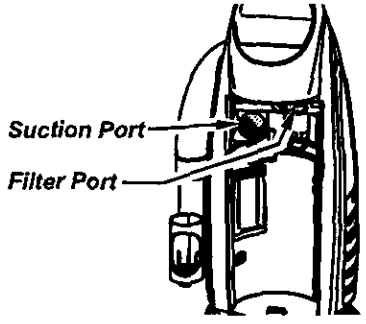

TO EMPTY DUST BIN

Before removing debris from dust bin it is a good idea to move the dust bin filter cleaning lever back and forth several times.

Moving the lever back and forth loosens the dust and debris that has attached itself to the filter element inside the dust bin.

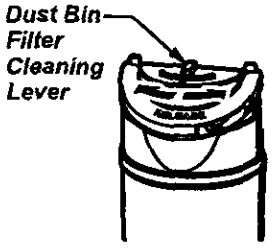

Rotate dust bin handle to the vertical position.

Hold dust bin over a trash container.

Press the dust bin door release button downward to release the door.

The door will swing open and the debris will fall into the trash container.

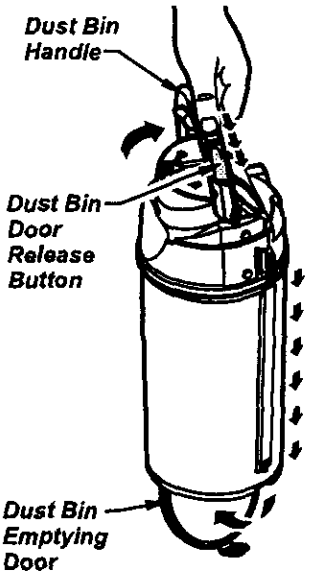

Shake the dust bin to release and debris that might hang in the filter element.

Note: See **PRIMARY FILTER REMOVAL AND CLEANING** section.

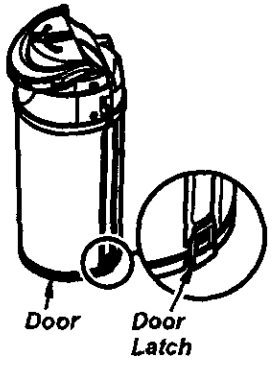

After the dust bin is empty of debris, firmly close the door. Make sure you hear a "click" sound to indicate that the door is fully latched.

TO REPLACE DUST BIN

Place dust bin back into vacuum cleaner by inserting the bottom first and tilting back with the dust bin handle raised.

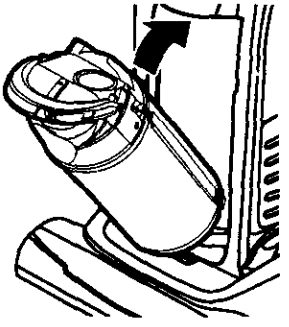

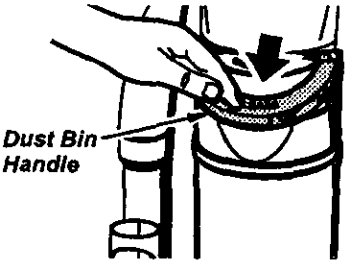

Lower the dust bin handle to lock dust bin in place.

A noticeable "click" should be heard.

PRIMARY FILTER REMOVAL AND CLEANING

WARNING

Electrical Shock And Personal Injury Hazard

Unplug power cord from electrical outlet. Do not operate the vacuum cleaner without the primary or exhaust filters. Be sure the filters are properly installed to prevent motor failure and or electrical shock.

PRIMARY FILTER

Check primary filter frequently and clean when dirty.

TO REMOVE PRIMARY FILTER

Remove the dust bin assembly as outlined in the **DUST BIN CLEANING** section.

Make sure dust bin is free of debris before removing lid and filter. Rotate dust bin lid assembly counterclockwise as indicated on the lid and lift off.

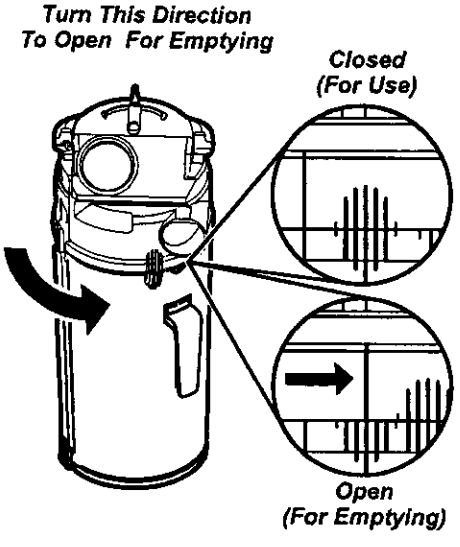

While holding dust bin lid over a trash container grasp primary filter, rotate counterclockwise and lift off.

Clean primary filter by gently tapping over a trash container. Tap on several sides to ensure best cleaning.

Remove primary filter by turning it counterclockwise and pulling out (See arrows on bottom of filter). **Rinse with water only as needed,** do not use any detergent or soap.

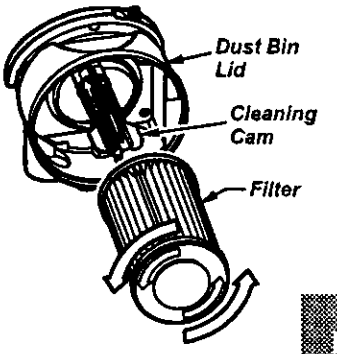

Allow the filter to dry for 24 hours before putting it back into the vacuum.

When cleaning the filter no longer restores vacuum suction to full power you need to replace the filter.

Note: See **PARTS AND FEATURES** for the filter number.

TO REPLACE PRIMARY FILTER

To replace filter, insert it over cleaning cams as far as it will go. Make sure rubber seal at top of filter is flush against filter supporter, turn filter clockwise to secure into place.

Note: Under normal use and care, your filter can be expected to last up to 5 years.

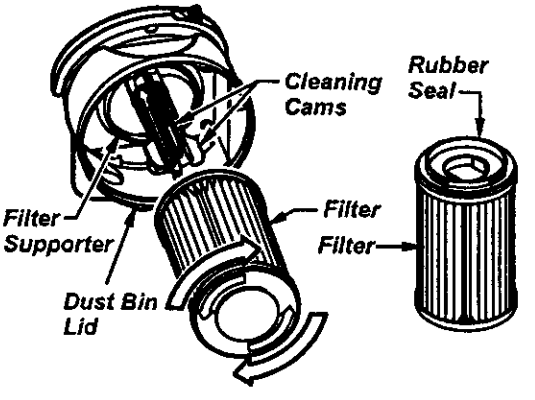

Re-assemble dust bin lid to dust bin. Insert into cleaner and secure with dust bin handle.

ENGLISH

TO REPLACE DUST BIN LID

Replace dust bin lid assembly by placing back on dust bin with marks on the lid aligned as shown under ***Open (For Emptying)*** on the back of the dust bin.

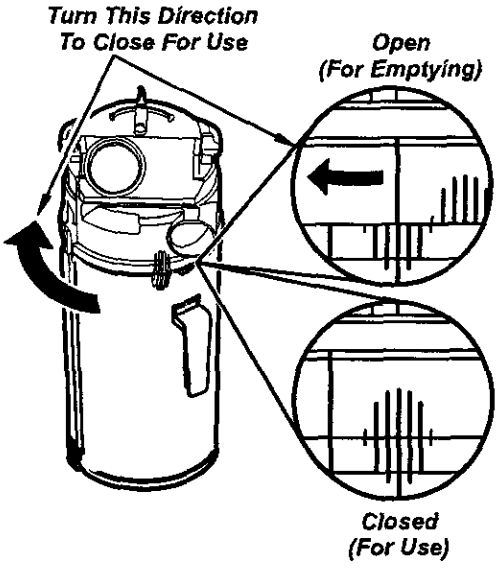

Rotate clockwise while pressing downward so marks align as shown above ***Closed (For Use).***

Insert dust bin into cleaner.

Lower the dust bin handle to lock dust bin in place.

A noticeable "click" should be heard.

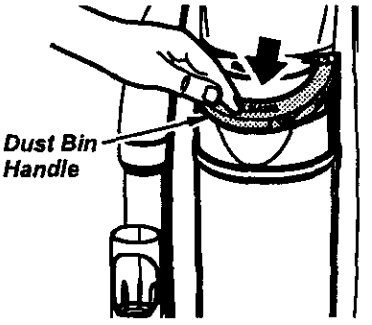

MOTOR SAFETY FILTER CLEANING

WARNING

Electrical Shock Hazard

Unplug power cord from electrical outlet. Do not operate the vacuum cleaner without the motor safety filter. Be sure the filter is dry and properly installed to prevent motor failure and/or electrical shock.

MOTOR SAFETY FILTER

Check motor safety filter frequently and clean when dirty.

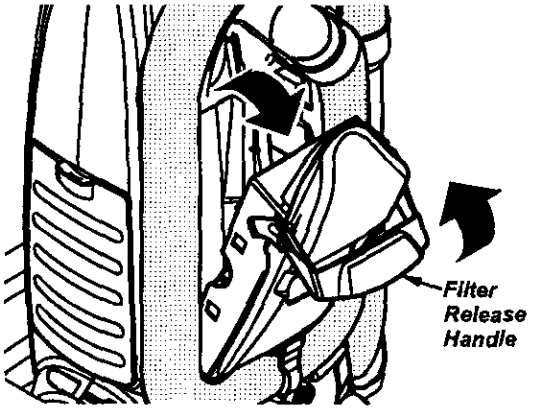

1. To remove motor safety filter lift filter release handle upward and rotate the filter cover out.

2. Remove filter by pressing on the sides of the filter frame and pulling out at the same time.

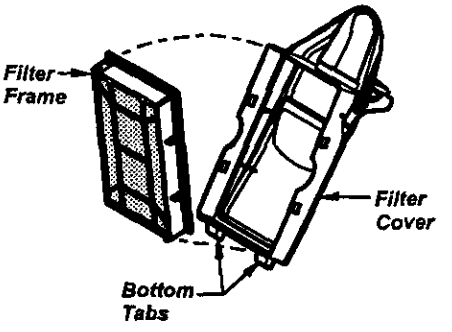

3. Clean filter if necessary by placing it under running water wait until dry before replacing.

4. When putting the filter back into the filter cover, listen for the filter assembly to snap into place.

Note: Push only on frame, not filter itself.

5. Replace cover by fitting bottom tabs into slots and rotating into compartment. Push filter release handle down until you hear a noticeable "click".

EXHAUST FILTER REPLACEMENT

The HEPA exhaust filter must be replaced when dirty. It should be replaced regularly depending on use conditions.

The filter CANNOT be washed as it will lose its dust trapping ability.

Note: See **PARTS AND FEATURES** for the exhaust filter number.

Remove exhaust filter cover by pressing the release tab on the cover and rotating

Place new filter cartridge into cover making sure that airflow arrow on side of cartridge points into cover.

The foam seal of the filter should be placed against the vacuum cleaner body.

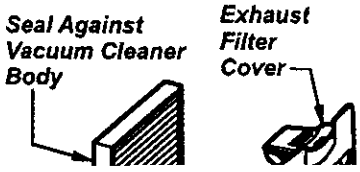

REMOCIÓN Y LIMPIEZA DEL FILTRO PRIMARIO

ADVERTENCIA

Peligro de choque eléctrico

Desenchufe el cable de poder del tomacorriente. No opere la limpiadora sin el filtro primario o el filtro de escape. Esté seguro que el filtros esté instalado propiamente para prevenir falla del motor y/o sacudida eléctrica.

FILTRO PRIMARIO

Chequee el filtro primario frecuentement y límpielo cuando esté sucio.

PARA SACAR EL FILTRO PRIMARIO

Remueva el canasto de basura y el montaje de la tapa del canasto de basura como se explica en la sección **LIMPIEZA DEL CANASTO DE BASURA**.

Esté seguro de que el canasto del polvo está libre de desecho antes de sacar la tapa y filtro.

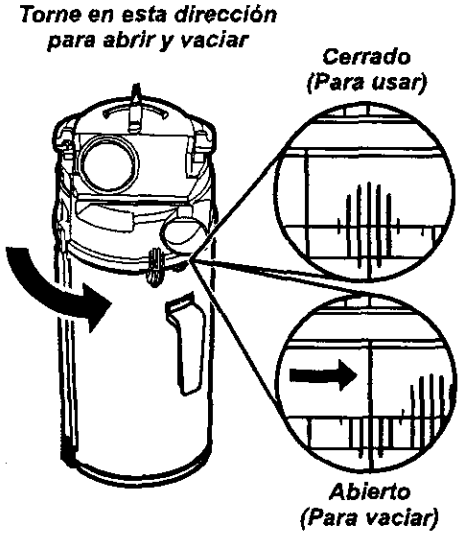

Rote el montaje de la tapa del canasto del polvo en sentido contrario a las agujas del reloj como indicado en la tapa y levántela.

Mientras sostiene la tapa del canasto del polvo sobre un recipiente de basura tome el filtro primario, rótelo en sentido contrario a las agujas del reloj y levántelo.

Limpie el filtro primario golpeándolo suavemente sobre el recipiente de basura. Golpee sobre varios lados para asegurar la mejor limpieza.

Remueva el filtro primario rotando contrario a las agujas del reloj y tirando hacia afuera (Ver flechas al fondo del filtro). Enjuague con agua solamente como sea necesario, no use ningún detergente o jabón.

Deje secar el filtro por 24 horas antes de colocarlo nuevamente en la aspiradora.

Cuando la limpieza del filtro ya no restaura la succión al vacío a su poder total, usted necesita reemplazar el filtro.

Nota: Ver **PARTES Y CARACTERÍSTICAS** para el número del filtro.

PARA REEMPLAZAR EL FILTRO PRIMARIO

Para reemplazar el filtro, insértelo sobre las levas de limpieza tan lejos como vaya. Esté seguro que el sello de goma al tope del filtro esté nivelado contra el soporte del filtro, torne el filtro como las agujas del reloj para asegurarlo en su lugar.

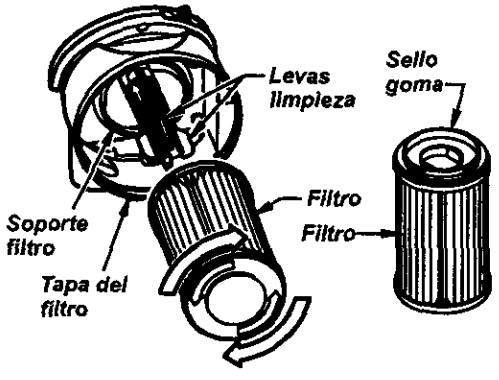

Nota: Bajo uso y cuidado normal, su filtro puede llegar a durar hasta 5 años.

Vuelva a montar la tapa del compartimiento del polvo para sacar el polvo del compartimiento. Inserte en más limpio y seguro con el cierre del compartimiento del polvo.

REMPLAZO DEL BOTE DE POLVO

Coloque la tapa del canasto de basura sobre el canasto de basura. Alinee las marcas como se muestra bajo ***Abierto (Para Vaciar).***

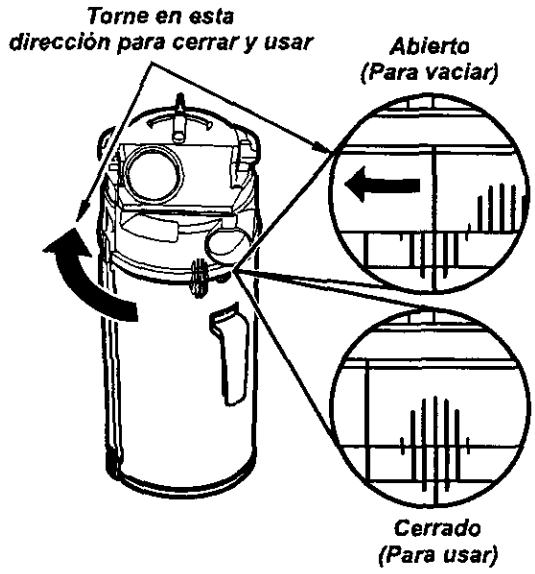

Rote la tapa en sentido de las agujas del reloj presionando hacia abajo hasta alinear las marcas como se muestra arriba de ***Cerrado (Para Usar).***

Inserte el canasto del polvo en la aspiradora.

Baje la manija del canasto del polvo para trabar el canasto del polvo en su lugar.

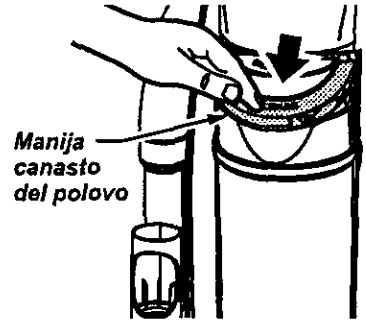

Un "clic" perceptible será escuchado.

LIMPIEZA DEL FILTRO DE SEGURIDAD DEL MOTOR

ADVERTENCIA

Peligro de choque eléctrico

Desenchufe el cable de poder del tomacorriente. No opere la limpiadora sin el filtro primario o el filtro de escape. Esté seguro que el filtros esté instalado propiamente para prevenir falla del motor y/o sacudida eléctrica.

FILTRO DE SEGURIDAD DEL MOTOR

Chequee el filtro de seguridad del motor frecuentemente y límpielo cuando esté sucio.

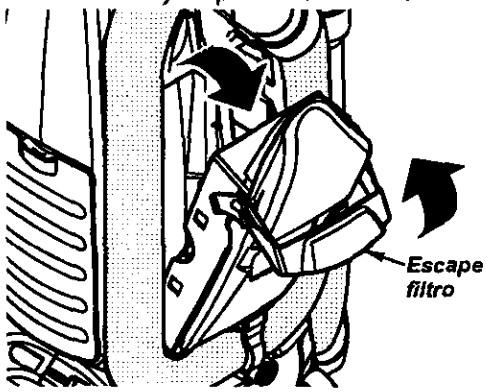

1. Para sacar el filtro de seguridad del motor suelte la manija hacia arriba y rote la cubierta del filtro.

2. Remueva el filtro apretando sobre los costados del marco del filtro y tirando hacia afuera al mismo tiempo.

3. Limpie el filtro si es necesario poniéndolo debajo de agua corriente y espere a que esté seco antes de reemplazar.

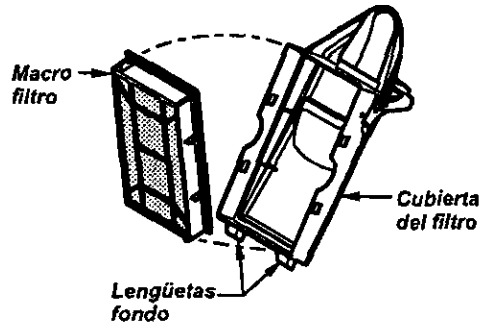

4. Cuando ponga el filtro de vuelta adentro de la cubierta del filtro, escuche que el montaje del filtro calce en su lugar.

Nota: Empuje solamente sobre el marco, no sobre el filtro mismo.

5. Reemplace la cubierta calzando lengüetas al fondo adentro de ranuras y rotando hasta que la cubierta calce en su lugar. Empuje la manija de liberación del filtro hacia abajo hasta que escuche claramente un "clic".

ESPAÑOL

FILTRO DE ESCAPE

El filtro del escape HEPA se debe reemplazar cuando este sucio. Se debe reemplazar regularmente dependiendo de las condiciones uso.

El filtro no se puede lavar pues perderiá su capacidad para atrapar polvo.

Nota: Ver **PARTES Y CARACTERÍSTICAS** para el número del filtro de escape.

Apríete hacia adentro en cada lado de la cubierta del filtro de escape y tírela hacia afuera para remover de la aspiradora.

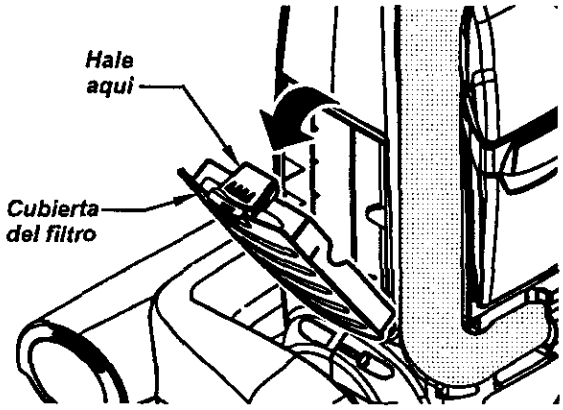

Remueva el cartucho del filtro de escape.

Ponga el nuevo cartucho adentro de la cubierta estando seguro de que la flecha de flujo de aire al costado del cartucho apunta hacia la cubierta.

El sello gris del filtro debe ser puesto contra el cuerpo de la aspiradora.

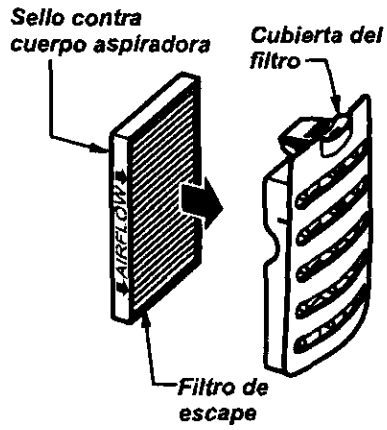

Empuje solamente sobre el marco del cartucho del filtro, no sobre el material del filtro mismo.

Reemplace la cubierta del filtro de escape poniendo las lengüetas en las hendiduras y empujando hasta que la cubierta calza en su lugar.

CAMBIO DE LA BOMBILLA

ADVERTENCIA

Peligro de choque eléctrico o lesión corporal

Desconecte la unidad antes de limpiarla o darle servicio. De lo contrario podría producirse un choque eléctrico o causar lesión corporal si la aspiradora arranca de manera imprevista.

PARA QUITAR LA BOMBILLA

1. Desconecte el cable de poder del tomacorriente.

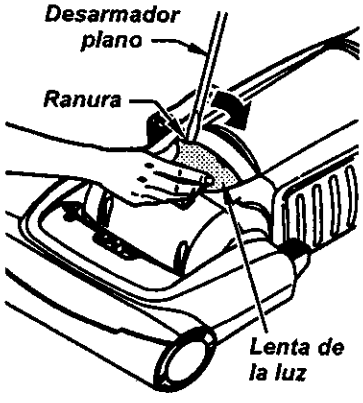

2. Baje la manija para poner la aspiradora plana.

3. Extraiga el lente de la hendidura insertando el desarmador en la rendija, empuje hacia abajo el lente y girelo con el desa mador en diracción hacia la unidad.

CUIDADO

No use una bombilla de más de 9 vatios (13 volts). Cuando se use la aspiradora por un largo periodo de tiempo, el calor de la bombilla puede calentar las partes de plastico cerca.

4. Remueva la bombilla tirando derecho hacia afuera.

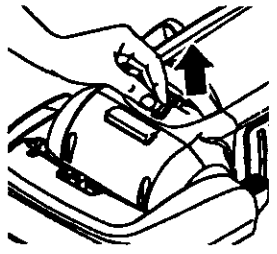

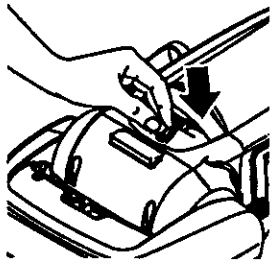

5. Para reemplazar la bombilla cuidadosamente insértela seguramente en la ranura. Reemplace la cubierta de la lente.

Nota: Mire **PIEZAS Y CARACTERISTICAS** para el numero de la bombilla.

CUIDADO

No conecte o encende la aspiradora antes de armarla completamente.

6. Substituya la cubierta de la lente insertando la parte inferior de la lente en la ranura, entonces apliqué presión en la parte superior con un destornillador. Un sonido "pop" indica que la lente está colocada correctamente en su lugar.

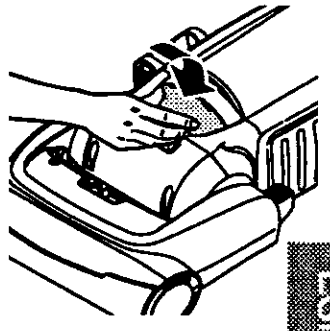

ESPAÑOL

LIMPIEZA DEL AGITADOR

Para un aspirado eficiente, el agitador deber ser mantenido libre de fibras de alfombra, hilos, o acumulación de pelo. Luego de 7 a 10 usos, desenchufe y dé vuelta a la aspiradora y revise el agitador para ver si tiene acumulación de hilos, fibras o pelo.

Use tijeras para sacar cualquier acumulación atorada alrededor del agitador.

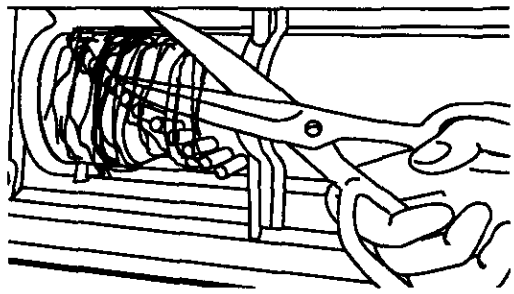

CÓMO ELIMINAR LOS RESIDUOS DE BASURA EN LOS CONDUCTOS

Proceda siempre con precauciones de seguridad antes de efectuar el mantenimiento a su aspiradora.

ADVERTENCIA

Peligro de choque eléctrico o lesión corporal

Desconecte la unidad antes de efectuar el mantenimiento a su aspiradora. De lo contrario podría producirse un choque eléctrico o causar lesión corporal si la aspiradora arranca de manera imprevista.

Si la aspiradora no parece tener suficiente succión, primero chequee si el canasto del polvo está lleno o si el filtro está tapado. Ver LIMPIEZA DEL CANASTO DEL POLVO y REEMPLAZO DEL FILTRO.

Si el canasto del polvo y áreas del filtro están libres de trabas, chequee la manguera de extensión. Rote la palanca de soltar la manguera de extensión contra las agujas del reloj para soltar la manguera de extensión.

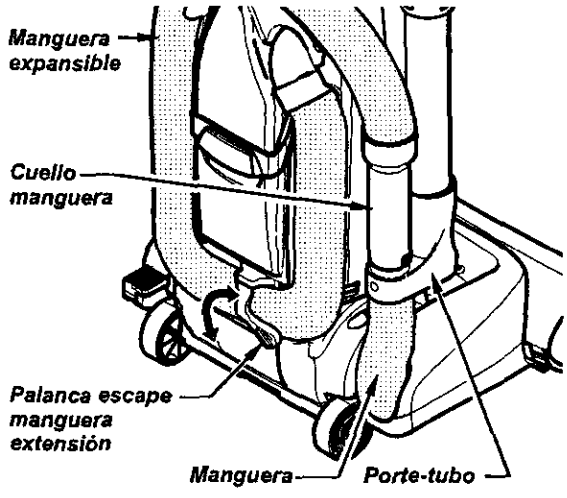

Remueva el extremo inferior de la manguera de extensión del soporte de la vara tomando del cuello de la manguera, rotando, y tirando derecho hacia arriba.

Enchufe la aspiradora y enciéndala. Estire al máximo la manguera y luego permita que se encoja hasta su tamaño normal de almacenamiento.

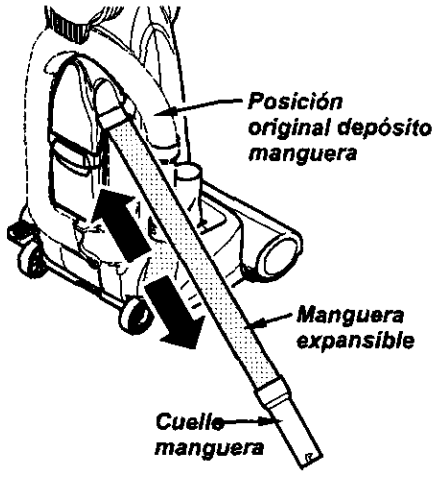

Reinserte la manguera adentro de la abertura en el cuerpo de la cual fue sacada. Apriete firmemente para asegurar la conexión.
Si el canaasto del polvo y áreas del filtro están libres de trabas, desconecte la boquilla de la manguera del soporte de la vara y chequee la boquilla por obstáculos. Gire la palanca de liberación de la manguera hacia la derecha a la posición cerrada.

ADVERTENCIA

Peligro de lesión personal

NO coloque nunca las manos ni los pies debajo de la unidad.

Limpie el agitador de acuerdo a las instruciones en la sección LIMPIEZA DEL AGITADOR.

Retorne la aspiradora a la posición vertical antes de enchufarla en un tomacoriente.

RECONOCIMIENTO DE PROBLEMAS

Revise este recuadro para encontrar soluciones a problemas que puede corregir usted mismo. Cualquier otro servicio debe ser realizado por SEARS u otro agente de servicio calificado.

ADVERTENCIA Peligro de choque eléctrico

Desconecte la aspiradora antes de efectuar el mantenimiento a su aspiridora. De lo contrario podría producirse un choque eléctrico o causar lesión corporal.

PROBLEMA	CAUSA POSIBLE	SOLUCIÓN POSIBLE
La aspiradora no enciende	1. Está desconectada. 2. Cortacircuitos botado o fusible quemado en el tablero de servicio de la residencia. 3. Protector termal activado. 4. Toma-corriente delectuoso.	1. Conecte bien, seleccione la funcion deseada en el control manual. 2. Restablezca el cortacircuitos o cambie el fusible. 3. Desconecte la aspiradora y permita que se enfrié, el protector térmico se activara por si solo. 4. Pruébelo con otro aparato / lámpara, hágalo reparar apropiadamente.
No aspira satisfactoriamente.	1. Bolsa para polvo llena o atascada. 2. Ajuste incorrecto de nivel de pelo de la alfombra. 3. Agitador desgastado. 4. Boquilla, o sujetador de la bolsa, atascada. 5. Manguera atascado. 6. Manguera rota. 7. La manguera no está bien insertada. 8. Activación del sistema de protectión del motor. 9. Filtros de seguridad.	1. Cambie la bolsa. 2. Ajuste el nivel. 3. Acuda el Centro de Servicio de Sears más cercano. 4. Revise COMÓ ELIMINAR LOS RESIDUOS DE BASURA EN LOS CONDUCTOS. 5. Limpie la manguera de obstrucciones. 6. Acuda el Centro de Servicio de Sears más cercano. 7. Inserte bien la manguera. 8. Determine si existen bloqueos. 9. Cambie el filtro de protección al motor y el filtro del escape.
La aspiradora levanta tapetes o es difícil empujar.	1. Ajuste incorrecto de nivel de pelo de la alfombra.	1. Ajuste el nivel.
La luz no funciona.	1. Bombilla undida.	1. Cambie la bombilla.
El ensamble del agitador no funciona	1. Mango esta en posición vertical. 2. Sobrecarga del agitador activada. 3. Protector térmico desactivado.	1. Mueva el mango de la posición vertical. 2. Reajuste la sobrecarga del agitador, 3. Desconecte la aspiradora y permita que se enfrié, el protector térmico se activara por si solo.
Restricción del flujo con el uso de los accesorios. Cambio de sonido.	1. El uso de los accesorios limita el flujo de aire. 2. La pelusa de una alfombra nueva obstruye el paso de aire.	1. Revise USO DE LOS ACCESORIOS 2. Revise CÓMO ELIMINAR LOS RESIDUOS DE BASURA EN LOS CONDUCTOS y limpie la manguera.
Dificultad para ajustar la altura de pelo de la alfombra.	1. La aspiradora no esta en completamente inclínela ligeramente y ajuste la altura de pelo.	1. Coloque la aspiradora en la posición vertical fija, en posición vertical.

Get it fixed, at your home or ours!

Your Home

For repair - **in your home** - of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® Anytime, day or night
(1-800-469-4663) (U.S.A. and Canada)

www.sears.com **www.sears.ca**

Our Home

For repair of carry-in products like vacuums, lawn equipment, and electronics, call or go on-line for the nearest **Sears Parts and Repair Center.**

1-800-488-1222 Anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

1-800-827-6655 (U.S.A.) **1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:
1-888-SU-HOGAR℠
(1-888-784-6427)

Au Canada pour service en français:
1-800-LE-FOYER℠
(1-800-533-6937)
www.sears.ca

SEARS

© Sears, Roebuck and Co.

® Registered Trademark / ™ Trademark / ℠ Service Mark of Sears, Roebuck and Co.
® Marca Registrada / ™ Marca de Fábrica / ℠ Marca de Servicio de Sears, Roebuck and Co.
℠ Marque de commerce / ℠ Marque déposée de Sears, Roebuck and Co.