Dirt Devil®

OWNER'S MANUAL
Operating and Servicing Instructions

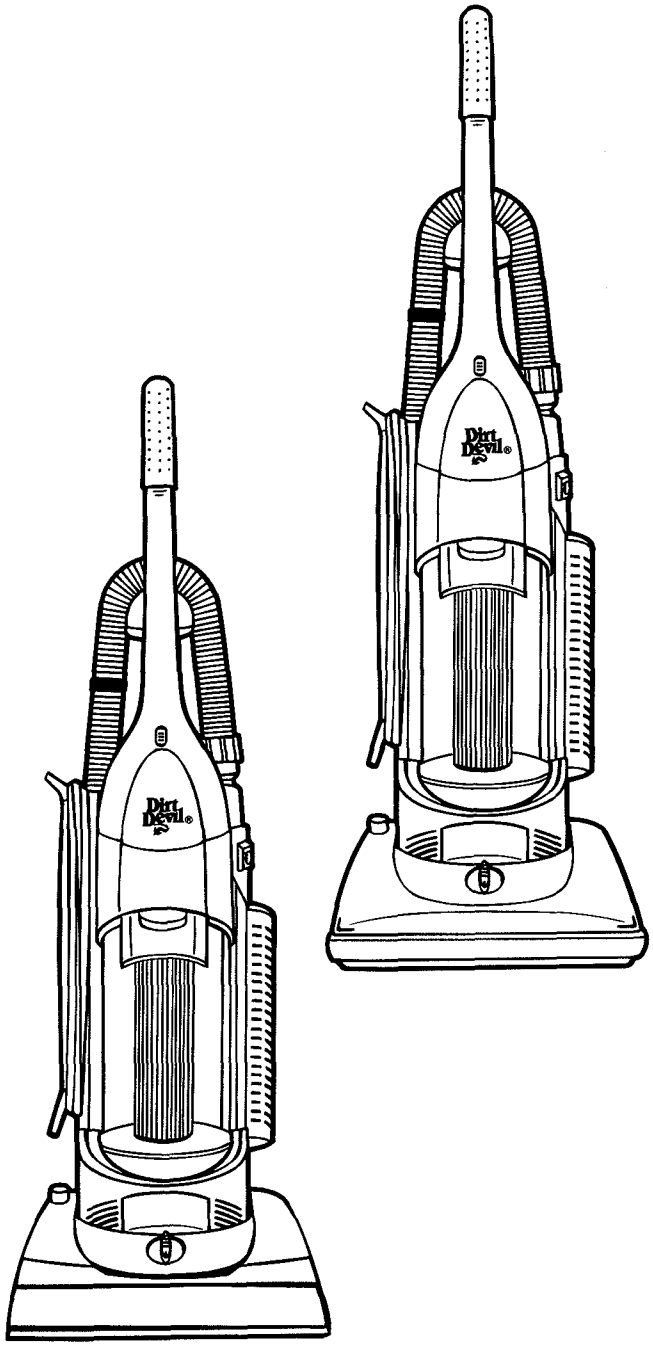

Dirt Devil®

- Please read these instructions carefully before using your Swivel Glide Vision.
- Let us help you put your cleaner together or answer any questions, call:

  1-800-321-1134 (USA)
  1-800-661-6200 (Canada)

For quick reference, please record your vacuum information below.

Model #: _____

Mfg. Code: _____

(Mfg. code located on the lower backside of cleaner)

©1998 All rights reserved #1-690221-033
11/99

Español - página E1

CONGRATULATIONS

You are now the proud owner of the Dirt Devil® Swivel Glide® Vision, with Power You Can See™! You'll never buy another bag again with the unique bagless design that includes a see-through dirt container for retrieving lost items. You'll also enjoy superior cleaning performance with 12 amps of Maximum Vacuum Power.

Allergen sufferers will benefit with the exclusive Permafilter™ with *CleanStream*™ Filtration located inside the dirt cup and HEPA exhaust filter that prevent over 99% of dust and allergens from escaping the vacuum and re-entering the room. Other features are included that make vacuuming easier such as the Swivel® Casters for easy maneuvering, and tools-on-board for above floor cleaning.

We are very proud of our products and hope that you are equally satisfied with their quality and performance.

Thank you for your support of Dirt Devil® products.
Visit our website at www.dirtdevil.com

TABLE OF CONTENTS

Feature Descriptions ..... Page 4
How To Assemble ..... Page 4
How To Operate ..... Page 5
- Hose Assembly and Tool Storage ..... Page 5
- Floor/Carpet Cleaning ..... Page 5
- Above Floor Cleaning ..... Page 5
- Hands Free Edge Cleaning ..... Page 5
- Hide-a-Hose ..... Page 6
- Carpet Settings ..... Page 6

How To Transport Cleaner ..... Page 6
Dirt Container & PermaFilter™ with CleanStream™ Filtration Removal and Replacement ..... Page 6
Filter Removal and Replacement ..... Page 7
Belt or Brush Roll Removal and Replacement ..... Page 7
Lightbulb Removal and Replacement ..... Page 8
Troubleshooting Guide ..... Page 8

LIMITED WARRANTY

To the consumer, Royal Appliance Mfg. Co. warrants this vacuum cleaner to be free of defects in material or workmanship commencing upon the date of the original purchase. Refer to your vacuum cleaner carton for the length of warranty and save your original sales receipt to validate start of warranty period.

If the vacuum cleaner should become defective within the warranty period, we will repair or replace any defective parts free of charge. The complete machine must be delivered prepaid to any ROYAL Authorized Sales & Warranty Service Station. Please include complete description of the problem, day of purchase, copy of original sales receipt and your name, address and telephone number. If you are not near a Warranty Station, call the factory for assistance at USA: 1-800-321-1134 / CANADA: 1-800-661-6200. Use only genuine Royal replacement parts.

The warranty does not include unusual wear, damage resulting from accident or unreasonable use of the vacuum cleaner. This warranty does not cover belts, brushes, bags, bulbs or fan damage. This warranty does not cover unauthorized repairs. This warranty gives you specific legal rights and you may also have other rights. (Other rights may vary from state to state in the USA).

THIS CLEANER IS INTENDED FOR HOUSEHOLD USE ONLY

IMPORTANT SAFETY INSTRUCTIONS

When you use an appliance, basic precautions should be followed, including the following:

- **READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.**
- **ALWAYS FOLLOW THESE SAFETY INSTRUCTIONS.**
- **BRING CLEANER TO UPRIGHT POSITION WHEN USING THE HOSE AND ATTACHMENTS.**
- **DO NOT LEAVE CLEANER UNATTENDED WHEN PLUGGED IN.**
- **REGULARLY CHECK THE FILTERS TO CLEAN OR REPLACE.**
- **WARNING: DO NOT USE SHARP OBJECTS TO CLEAN OUT THE HOSE SINCE THEY COULD CAUSE DAMAGE.**
- **OCCASIONALLY REMOVE BRUSH AND CLEAN DEBRIS FROM END CAPS TO KEEP BRUSH ROTATING SMOOTHLY.**

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces. Electrical shock could occur.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center for inspection. Call 1-800-321-1134 for the nearest service center.
- Do not pull or carry by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dirt container and filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Keep the vacuum cleaner on the floor. Only the hand-held vacuum cleaners may be set on furniture.
- Cleaner must be in the upright position to lift the rotating brush off the carpet when doing above floor cleaning.
- Do not use an extension cord with this vacuum cleaner.
- Store the vacuum cleaner indoors. Put the vacuum cleaner away after use to prevent tripping accidents.
- Using improper voltage may result in damage to the motor and possible injury to the user. Proper voltage is listed on the cleaner plate.

SAVE THESE INSTRUCTIONS

WARNING:

To reduce the risk of electric shock, this appliance has a polarized plug (one blade wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

This vacuum has been designed with a patented Performance Indicator Wheel (located on the handle). This indicator, along with a clog valve, prevents the motor from overheating if a clog occurs. If activated, the wheel will spin rapidly and you'll notice a decrease in the power or suction of the vacuum. If this happens, unplug the cleaner, empty the dirt container and deep clean the PermaFilter™ with *CleanStream*™ Filtration (see page 6 in the instruction manual). Also inspect the nozzle/dirt passage, clear hose inlet for blockages and check the Hepa filter (replace if necessary - page 7).
To maintain the performance of your vacuum, it is recommended that you empty the dirt container before the dirt reaches the "Max Fill" line and regularly clean the PermaFilter™ with *CleanStream*™ Filtration (located in the dirt container).

Fig. 1

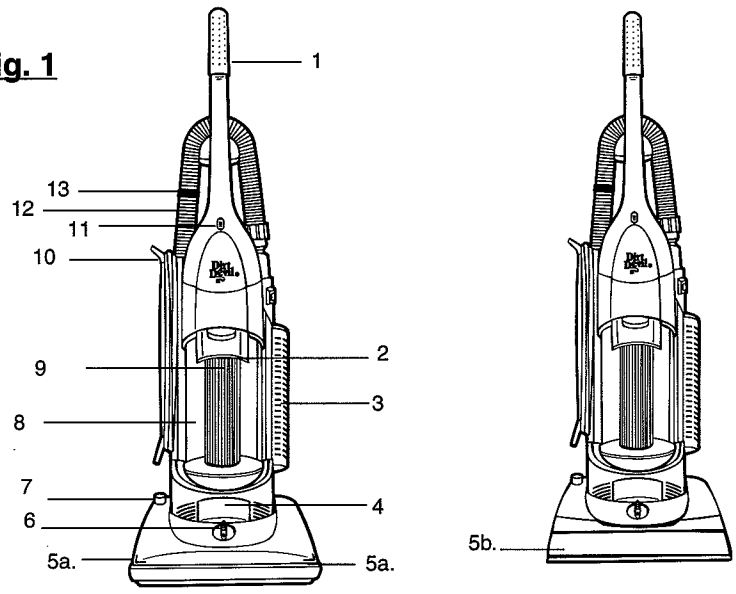

Fig. 2

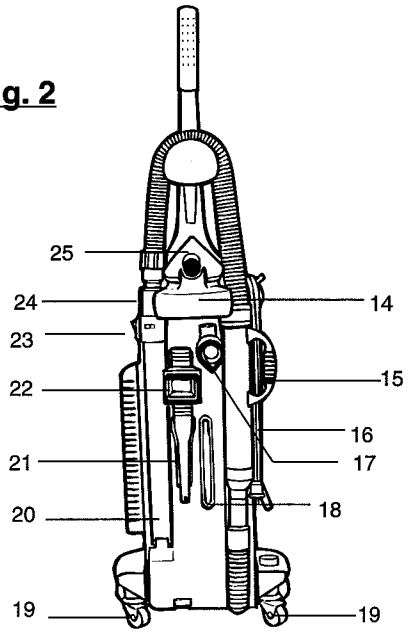

FEATURES

Fig 1

1. **Non-Slip Grip™ Handle**
2. **Dirt Container Release Lever**
3. **HEPA Filter**
4. **Headlight**

5a.*Power Edger™ slots w/Wrap Around Bumper (Optional)

5b.*ScuffGuard Bumper (Optional)

6. **Carpet Height Adjust Knob**
7. **Handle Release Pedal**
8. **Dirt Container**
9. **PermaFilter™ with *CleanStream*™ Filtration in Dirt Container**
10. **Cord Clip**
11. **Performance Indicator Wheel**
12. **Hide-a-Hose™**
13. **Hose Anchor**

Fig. 2

14. **Carrying Handle**
15. **Hide-a-Hose™ Handle**
16. **Long Power Cord**
17. ***Power Edger™ (optional w/Wrap Around Bumper)**
18. **Belt Storage**
19. **Swivel Casters**
20. **Telescopic Wand**
21. **Crevice Tool**
22. **2-in-1 Tool - Dust brush/Upholstery tool**
23. **On/Off Switch - Just above HEPA Filter**
24. **Clear Hose Inlet**
25. **Edge Wedge™ Tool (Corner and stair tool)**

NOTE: *Optional tools not included with all models

HOW TO ASSEMBLE

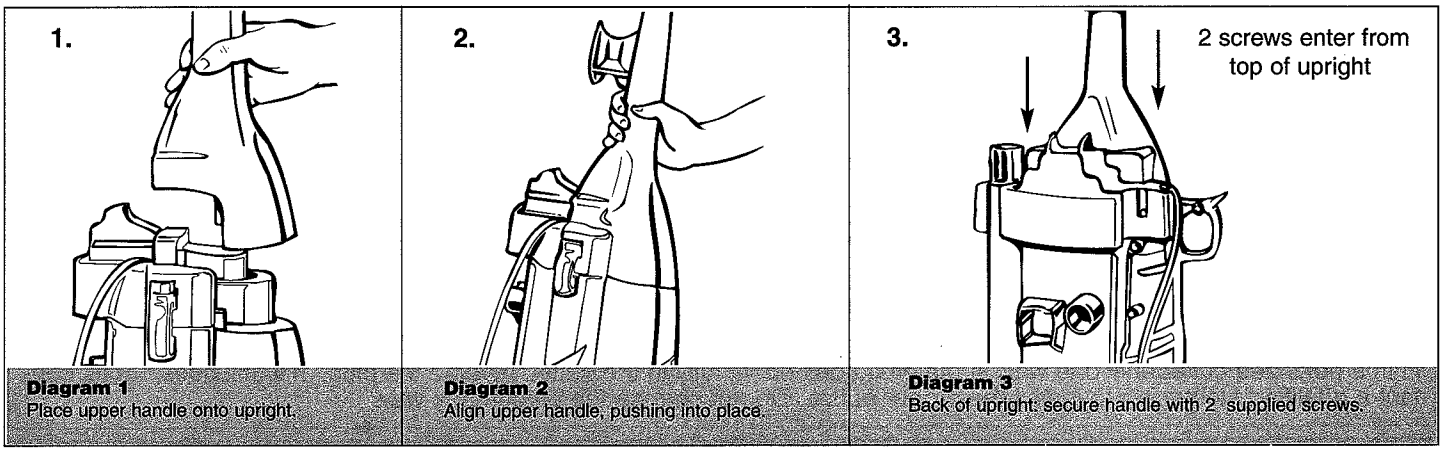

Diagram 1
Place upper handle onto upright.

Diagram 2
Align upper handle, pushing into place.

Diagram 3
Back of upright, secure handle with 2 supplied screws.

HOW TO ASSEMBLE

TOOL REQUIRED: PHILLIPS SCREWDRIVER

1. Stand unit in upright position and place upper handle onto upright. (Diagram 1).
2. Push upper handle onto upright, aligning upper handle with handle opening. (Diagram 2).
3. **TWO** screws (supplied) enter from top of upright to secure handle (Diagram 3).

HOW TO OPERATE

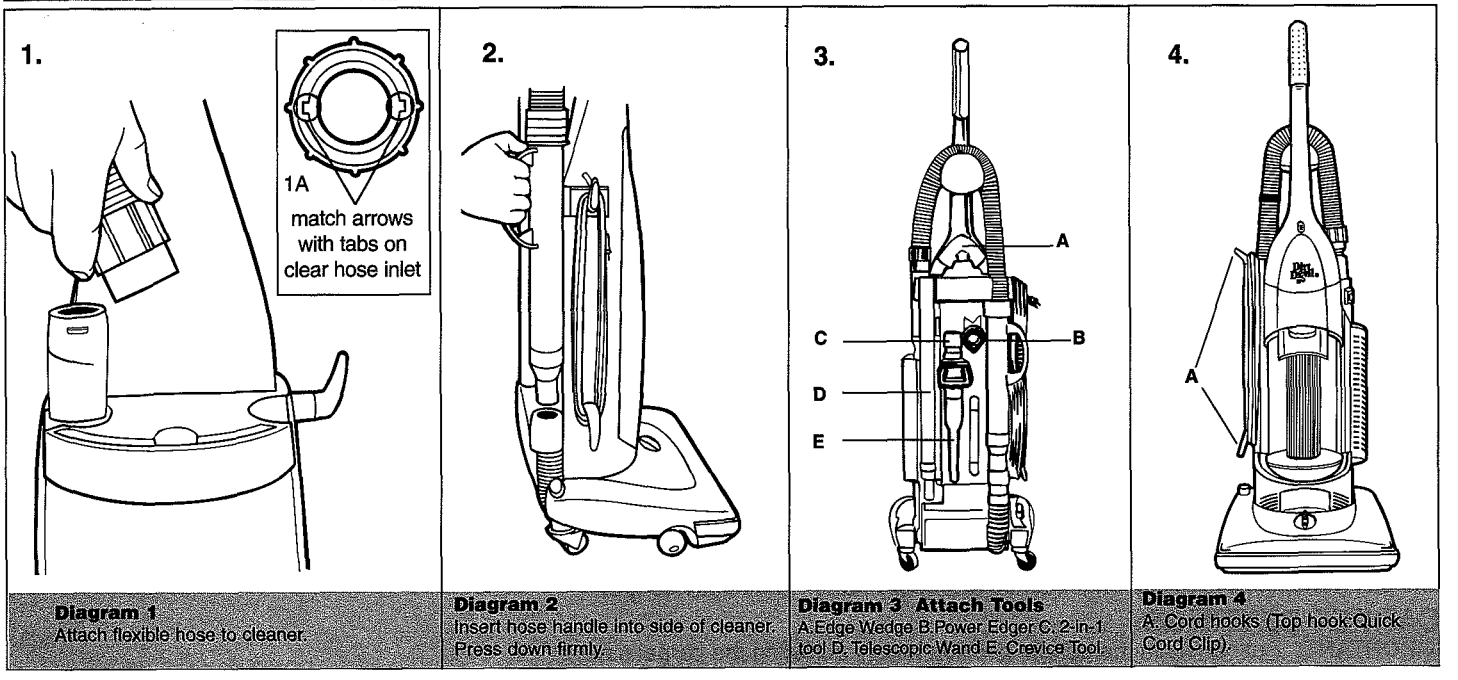

Diagram 1 Attach flexible hose to cleaner.

Diagram 2 Insert hose handle into side of cleaner. Press down firmly.

Diagram 3 Attach Tools A Edge Wedge B Power Edger C 2-in-1 tool D Telescopic Wand E Crevice Tool.

Diagram 4 A Cord hooks (Top hook Quick Cord Clip).

HOSE ASSEMBLY AND TOOL STORAGE

1. **ATTACH HOSE**: Attach the flexible hose to the cleaner (Diagram 1). Match the arrows on the hose to the tabs on the clear hose inlet (Diagram1A). Push down firmly on the cuff and turn clockwise. Insert the hose handle into the side of the cleaner. Press down firmly to secure (Diagram 2).
2. **ATTACH TOOLS**: (Diagram 3) (A) Slide Edge Wedge™ onto the base of upper handle with bristles facing in. (B) Push Power Edger™ (Optional) onto upper back panel with bristles facing out. (C) Slide 2-in-1 tool onto upper back panel with bristles facing out. (D) Slide the Telescopic wand, small end down, onto the lower back panel. (E) Slip crevice tool onto lower back panel.
3. **CORD STORAGE:** For tidy cord storage, wrap cord around hooks on side of cleaner with quick cord release (Diagram 4) (A).

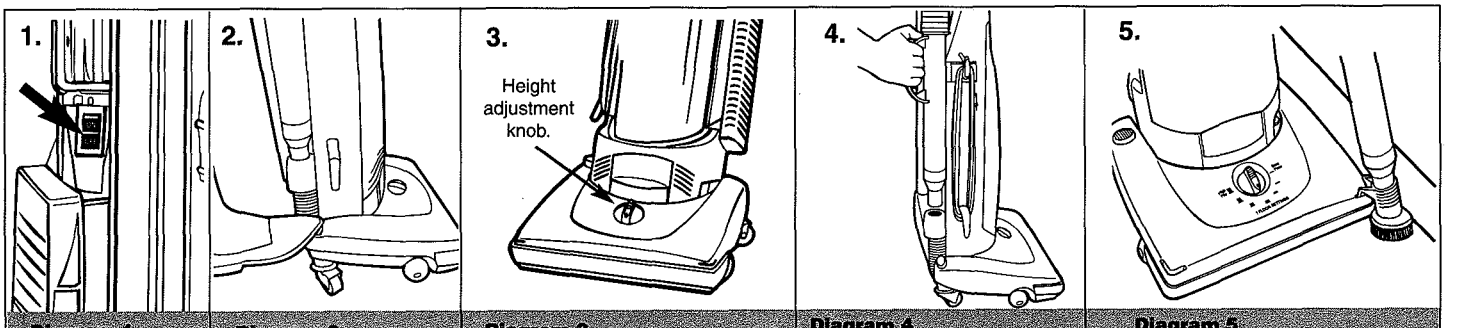

Diagram 1 On/Off switch.

Diagram 2 Handle release pedal.

Diagram 3 Height adjustment knob.

Diagram 4 Lift and remove hose at an angle for above the floor cleaning.

Diagram 5 Power Edger™ Cleaning.

HOW TO OPERATE 1. Plug cord into electrical outlet. 2. Turn cleaner "on". Switch located on left side of cleaner directly above HEPA filter (Diagram 1).

FLOOR/CARPET CLEANING

1. Handle should be in the upright position before adjusting the carpet setting (Diagram 2). Turn height adjustment knob to match the surface being cleaned (Diagram 3). Once height is selected the nozzle will go to the correct position.

NOTE: *Rotating brush could cause area rug fringe to become tangled within cleaner. Use caution when vacuuming throw rugs with fringe.*

ABOVE FLOOR CLEANING

Cleaner must be in the upright position to lift the rotating brush off the carpet when cleaning above the floor.

1. Put cleaner in its upright position.
2. Remove the hose from the side of the cleaner using the handle (Diagram 4).

CAUTION: *Brush agitator continues to rotate while hose is removed or in use and at all times while cleaner is on. Keep hair, loose clothing, fingers, and all parts of body away from brush area while cleaner is on.*

3. Choose any of the handy accessories or use the hose alone. Simply push the attachment firmly onto the end of the wand or hose handle. To remove tool, twist and pull apart gently.
4. If additional length is needed use the Hide-a-Hose™ or telescopic wand (See page 6).

***FOR HANDS FREE EDGE CLEANING:** Remove Power Edger™ from upper back panel. Insert Power Edger™ into desired power edger slot. Remove hose end from side of unit and hose caddy. Slide hose end onto Power Edger™. Glide the upright against walls and base-boards for superior edge cleaning (Diagram 5).

**Not available on all models.*

HOW TO OPERATE cont.

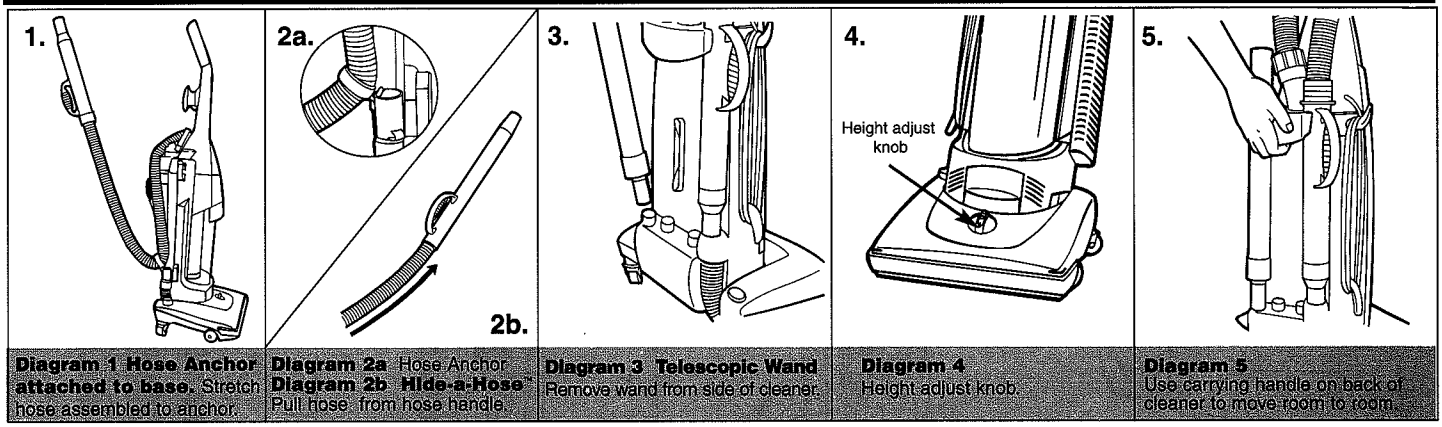

Diagram 1 Hose Anchor attached to base. Stretch hose assembled to anchor.

Diagram 2a Hose Anchor **Diagram 2b Hide-a-Hose** Pull hose from hose handle.

Diagram 3 Telescopic Wand Remove wand from side of cleaner.

Diagram 4 Height adjust knob.

Diagram 5 Use carrying handle on back of cleaner to move room to room.

HIDE-A-HOSE™ AND HOSE ANCHOR: The Hose Anchor is used to prevent the vacuum from tipping while using the above floor cleaning attachments. Remove the Hide-a-Hose from side of the cleaner using the handle. Lay hose over the back of cleaner (Diagram 1) and secure hose anchor ring, (Diagram 2a) located around hose to base. Pull hose from hose handle for additional length (Diagram 2b).

TELESCOPIC WAND: Remove wand from side of cleaner by pulling out at the top to unsnap and pull up (Diagram 3). Twist and pull wand apart for extra length, as described on wand. Twist again to lock.

CARPET SETTINGS

IMPORTANT: Put handle in the upright position before adjusting the carpet setting.
Turn knob to adjust height of nozzle to match the surface being cleaned (Diagram 4). If cleaner is difficult to push, adjust to a higher carpet setting.

HOW TO TRANSPORT CLEANER

Use the carrying handle on the back of the cleaner to move cleaner from room to room (Diagram 5). **NOTE:** Do not push cleaner forward while leaning on back casters. Do not pull cleaner on back casters.

DIRT CONTAINER & PERMA FILTER™ WITH *CLEANSTREAM™* FILTRATION: REMOVAL & REPLACEMENT

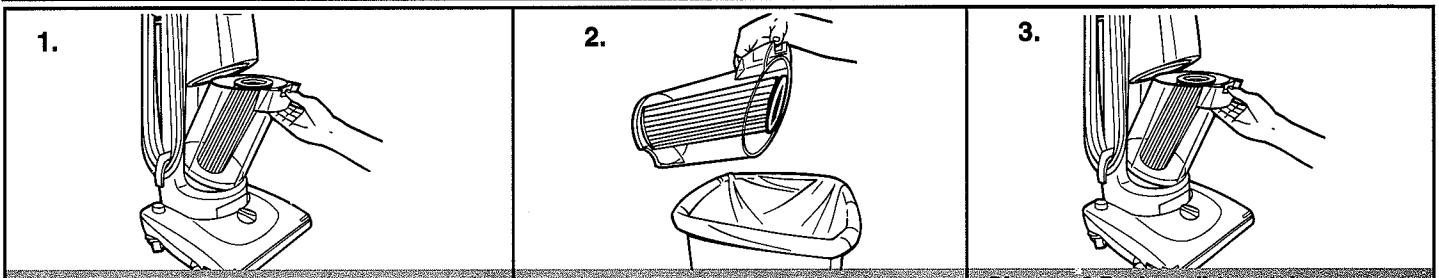

Diagram 1 Release dirt container Depress latch to remove dirt container.

Diagram 2 Empty dirt container Filter does not have to be removed to empty dirt container.

Diagram 3 Replace dirt container The filter must be in dirt container before replacing dirt container.

CLEANING DIRT CONTAINER & PERMAFILTER™ WITH *CLEANSTREAM™* FILTRATION: For additional filtration, a removable filter is located inside the dirt container. **The filter does not need to be replaced but should be cleaned regularly for maximum performance.**

WARNING: TO REDUCE THE RISK OF INJURY FROM MOVING PARTS - UNPLUG BEFORE SERVICING.

Empty & Clean DIRT CONTAINER:

1. Depress latch to remove dirt container from cleaner (Diagram 1). Pull dirt container out to empty (Diagram 2).
2. Remove and clean the PermaFilter™ with *CleanStream™* Filtration (see instructions below).
3. Use a sponge and lukewarm water to wipe dirt container compartment clean.
4. **Replace Dirt Container:** Set aligning tab on bottom of dirt container into rectangular slot on the cleaner, and push to snap into place (Diagram 3). If dirt container does not snap into place, check to make sure the filter is secured properly.

CLEAN THE PERMAFILTER™ WITH *CLEANSTREAM™* FILTRATION (internal) located in dirt container:

1. Remove dirt container. Hold dirt container, grasp inside ring at top of filter and firmly pull the filter up and out (Pg 8 - Diagram 4).
2. **Regular Maintenance*:** Each time the Dirt Container is emptied, the filter should be cleaned. Gently tap the filter firmly against the inside of a trash can until dirt stops falling from the filter. (Filter will be discolored after use, this will not affect the filter's performance.) Do not brush the filter.
3. **Deep Cleaning*:** If the Performance Indicator Wheel on the front of the handle is spinning rapidly you should notice a decrease in the vacuum's power or suction. If this happens, inspect the cleaner for clogs, empty the dirt cup and remove all dust and debris from the filter. Once cleaned the vacuum will immediately be ready for use.
4. **Replace the PermaFilter™ with *CleanStream™* Filtration:** Align angle of filter with angle of dirt container (gasket facing up). Push down on filter to snap into place and prevent dirt leakage. Return dirt cup to cleaner.

* The cleaning instructions may vary depending on the dirt conditions. In some cases, more or less cleaning of the PermaFilter™ with *CleanStream™* Filtration may be required.

FILTER REMOVAL & REPLACEMENT

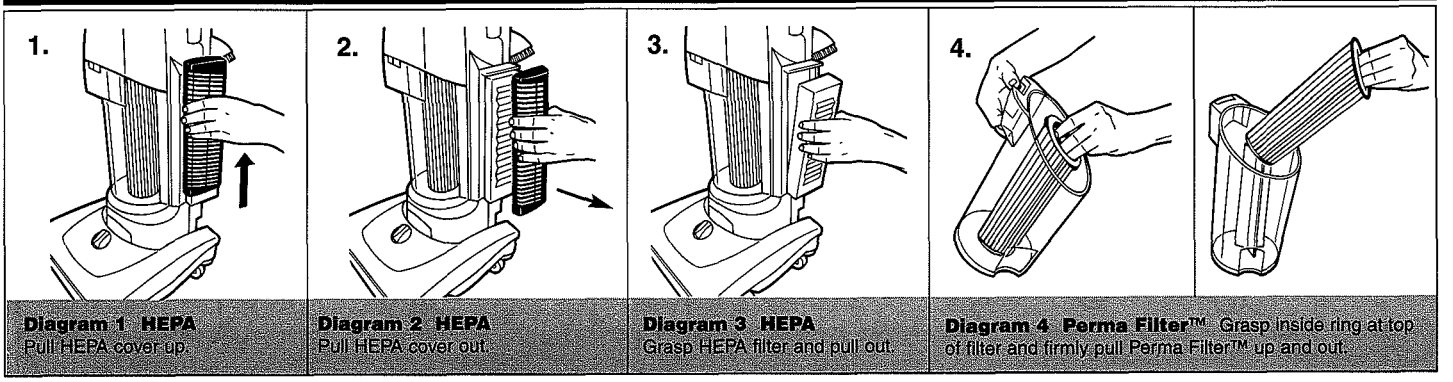

Diagram 1 HEPA Pull HEPA cover up.

Diagram 2 HEPA Pull HEPA cover out.

Diagram 3 HEPA Grasp HEPA filter and pull out.

Diagram 4 Perma Filter™ Grasp inside ring at top of filter and firmly pull Perma Filter™ up and out.

FILTER REMOVAL & REPLACEMENT *Unplug cleaner before changing filter.*

This upright contains two filters: HEPA filter (side of cleaner) and Perma Filter™ (in dirt container) which combined prevent dust and allergens from escaping the vacuum and re-entering the air.

HEPA FILTER (external) - Part# 3-690320-001 located on side of cleaner.
The HEPA Filter should be replaced annually. Write date of filter replacement on label.

1. Slide filter cover upward and pull out (Diagrams 1 & 2).
2. Grasp HEPA filter Cartridge and pull out (Diagram 3). **IMPORTANT: Do NOT clean with water.**
3. For HEPA filter replacements call 1-800-321-1134 (USA).
4. **To Replace:** Insert HEPA filter into housing (Gasket on inside). Align tabs on filter cover with slots on housing. Slide cover down to fit into place.

PERMAFILTER™ WITH *CLEANSTREAM™* FILTRATION (internal) - located in dirt container. The filter should not need to be replaced but should be cleaned every time the dirt container is emptied to maximize performance of the vacuum (see page 6: Cleaning the PermaFilter™ with *CleanStream™* Filtration) (Diagram 4).

BELT OR BRUSH REMOVAL & REPLACEMENT

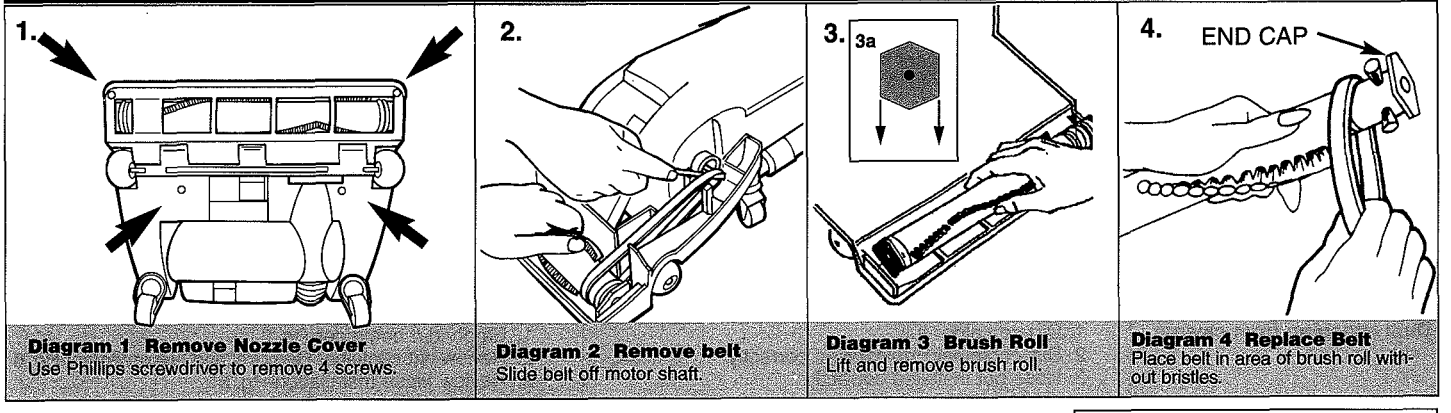

Diagram 1 Remove Nozzle Cover Use Phillips screwdriver to remove 4 screws.

Diagram 2 Remove belt Slide belt off motor shaft.

Diagram 3 Brush Roll Lift and remove brush roll.

Diagram 4 Replace Belt Place belt in area of brush roll without bristles.

BELT OR BRUSH REMOVAL & REPLACEMENT

BELT STYLE: 4&5

TOOL REQUIRED: PHILLIPS SCREWDRIVER
WARNING: TO REDUCE THE RISK OF INJURY FROM MOVING PARTS - UNPLUG CLEANER BEFORE CHANGING BELT OR BRUSH ROLL.

TO REMOVE BELT Flip cleaner to expose nozzle base. Base should lay flat and face up. To remove nozzle cover, use Phillips screwdriver to remove the four screws. Arrows (Diagram 1) show location of screws. Flip cleaner back over and lift nozzle cover off. Slide belt off motor shaft (Diagram 2). Lift and remove brush roll (Diagram 3). Dispose of old belt.

TO REPLACE BELT

1. Place belt on motor shaft, then slip brush roll through belt. Place belt in area of brush roll without bristles (Diagram 4).
2. With belt in place, pull and slide brush roll into nozzle (Diagram 3) making sure that the brush roll end caps are in the correct orientation (Diagram 3a inset).
   IMPORTANT: Rotate brush roll manually to make sure belt is not twisted.
3. Reattach nozzle cover. Secure by replacing the screws under the nozzle base.

BELT STORAGE

Stretch belt around hooks on back panel of upright. (See pg 4, figure 2 for belt storage location)

LIGHTBULB REMOVAL & REPLACEMENT

1.

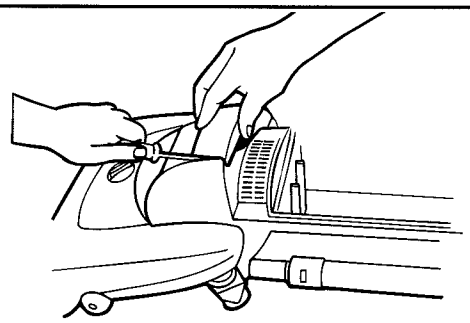

Diagram 1 Pop Headlight Lens
Insert flat head screwdriver into side slot and pry outward.

2.

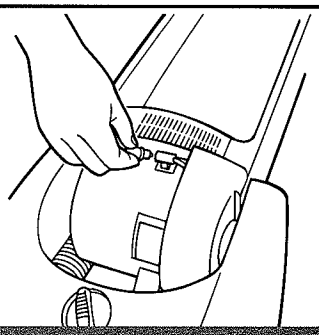

Diagram 2 Remove/Replace Bulb
Pull bulb out of socket to remove. Push bulb into socket to replace.

LIGHTBULB REMOVAL & REPLACEMENT

TOOL REQUIRED: FLATHEAD SCREWDRIVER

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK - UNPLUG CLEANER BEFORE REMOVING OR REPLACING LIGHTBULB.

This cleaner uses a common automotive lamp #906, 13.0 volts. For bulb replacement call 1-800-321-1134 or your local auto parts store.

1. Lean cleaner handle back. Insert end of standard (flat head) screwdriver into side slot and pry outward to pop headlight lens out (Diagram 1).
2. Pull bulb out of socket to remove. Push bulb into socket to replace (Diagram 2).
3. Snap headlight lens panel back into place.

TROUBLE SHOOTING GUIDE

WARNING: TO REDUCE RISK OF PERSONAL INJURY - UNPLUG CLEANER BEFORE SERVICING

Problem	Possible Reasons	Possible Solutions
Cleaner won't run	1. Power cord not firmly plugged into outlet. 2. Blown fuse or tripped breaker. 3. Needs service.	1. Plug unit in firmly. 2. Check fuse or breaker. Replace fuse/reset breaker. 3. Take to service center or call 1-800-321-1134.
Cleaner won't pick-up or low suction. Performance Indicator Wheel Is Spinning	1. Dirt container not installed correctly. 2. Dirt container full. 3. Clogged filter. 4. Nozzle/dirt passage clogged. 5. Clear hose inlet clogged. 6. Brush roll worn. 7. Broken or worn belt. 8. Carpet height setting is incorrect. 9. Clog valve activated.	1. Review dirt container Removal and Replacement-Pg 6 2. Empty dirt container-Pg. 6 3. Remove filter and clean-Pg. 7 4. Remove base nozzle cover; remove obstruction OR Remove hose; remove obstruction 5. Remove hose and clean inlet. 6. Replace brush roll-Pg. 7 7. Replace belt-Pg. 7 8. Set carpet height adjustment to appropriate setting for carpet being cleaned-Pg. 6 9. Clean filters and clear blockages-Pg. 6
Dust escaping from cleaner	1. Dirt container full. 2. Dirt container not installed correctly. 3. Hose not installed correctly.	1. Empty dirt container-Pg. 6 2. Review dirt container Removal and Replacement-Pg. 6 3. Review Hose Installation-Pg. 5
Cleaner tools won't pick up. Performance Indicator Wheel Is Spinning	1. Hose clogged. 2. Hose inlet clogged. 3. Dirt container full. 4. Filter clogged.	1. Remove hose and tools; remove obstruction-Pg. 5 2. Remove hose and clean inlet. 3. Empty dirt container-Pg. 6 4. Clean filter-Pg-7
Headlight not working	1. Bulb burnt out. 2. Loose electrical wires.	1. Replace bulb-Pg. 8 2. Call 1-800-321-1134 for nearest authorized Royal Dealer.
Cleaner is difficult to push	1. Carpet height setting is incorrect.	1. Set carpet height adjustment to appropriate setting for carpet being cleaned-Pg. 6

ANY OTHER SERVICING SHOULD BE DONE BY AN AUTHORIZED SERVICE REPRESENTATIVE

CUSTOMER SERVICE (1-800-321-1134)

In the event that further assistance is required, see your Yellow Pages for an authorized Royal Dealer. Costs of any transportation to and from any place of repair are to be paid by the owner. The service parts used in this unit are easily replaced and readily available from an authorized Royal Dealer or retailer. Always identify your cleaner by the model number when requesting information or ordering replacement parts. (The model number appears on the back of the cleaner.)

Dirt Devil®

MANUAL DEL USUARIO

Instrucciones para el funcionamiento y el servicio

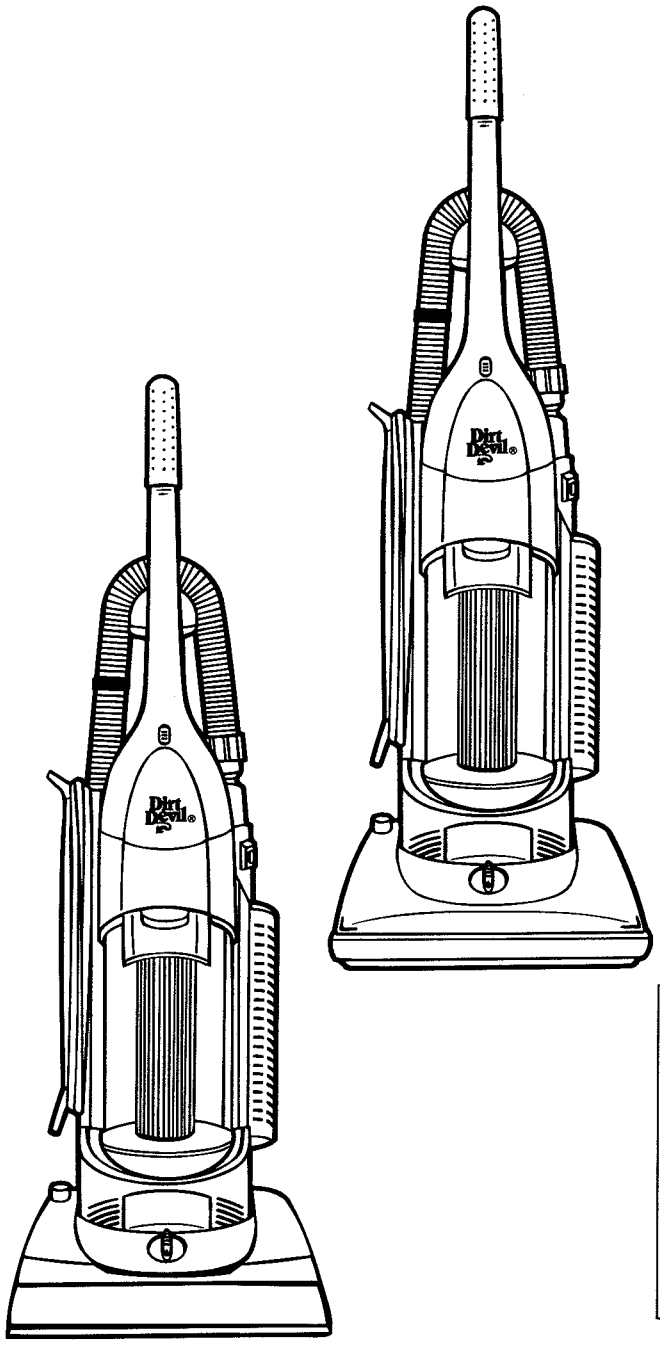

Dirt Devil®

- Por favor lea bien estas instrucciones antes de usar su aspiradora Swivel Glide Vision.
- Déjenos ayudarle a ensamblar su aspiradora o a contestarle cualquier duda, llame al:

  1-800-321-1134 (EE.UU.)
  1-800-661-6200 (Canadá)

Para tener los datos a la mano, por favor llene la información sobre su aspiradora a continuación.

Modelo #: _____

Código del Fabricante: _____

(El código del fabricante se localiza en la parte inferior, atrás de la aspiradora)

© 1998 Derechos reservados # 1-690221-033

11/99

FELICITACIONES

Ahora usted es el feliz propietario de la aspiradora Dirt Devil Swivel Glide Vision, con el poder para ver ¡Power You Can See™! Usted nunca más comprará otra bolsa gracias al diseño sin bolsa que incluye un receptáculo para polvo transparente que le permite ver los objetos perdidos. También disfrutará de un desempeño de limpieza superior con 12 amps de Máxima Potencia de Aspiración.

Los que padecen alergias se beneficiarán con el filtro exclusivo PermaFilter™ que tiene el sistema de Filtración CleanStream™ ubicado dentro del receptáculo para polvo y el filtro HEPA en el escape evitan que más del 99% del polvo y agentes alergénicos escapen de la aspiradora y regresen al ambiente del cuarto. Cuenta con otras caracteristícas que facilitan la limpieza como las Ruedas Giratorias que permiten una maniobra sencilla y los accesorios portátiles para la limpieza arriba del piso.

Estamos muy orgullosos de nuestros productos y esperamos que quede absolutamente satisfecho de la calidad y del desempeño.

Le agradecemos su preferencia por los productos Dirt Devil®.

Visite nuestro sitio de la web en www.dirtdevil.com

INDICE

Piezas . . . . . .Página 4
Como Ensamblar . . . . . .Página 4
Como Operar . . . . . .Página 5
- Montaje de manguera y almacenamiento de accesorios . . .Página 5
- Limpieza del piso/alfombra . . . . . .Página 5
- Limpieza por encima del piso . . . . . .Página 5
- Limpieza de bordes a manos libres . . . . . .Página 5
- Hide-a-Hose . . . . . .Página 6
- Graduación de alfombra . . . . . .Página 6

Como transportar la aspiradora . . . . . .Página 6
Quitado y Reemplazo del Recipiente para Polvo y del PermaFilter™ con sistema de filtración *CleanStream*™ . . . . . .Página 6
Remoción y reemplazo de los filtros . . . . . .Página 7
Remoción y reemplazo de la banda o del cepillo rotatorio . . . .Página 7
Remoción y reemplazo del foco . . . . . .Página 8
Guía para la detección y solución de problemas . . . . . .Página 8

GARANTIA LIMITADA

Para el consumidor, Royal Appliance Mfg. Co. garantiza esta aspiradora contra defectos de materia prima o de mano de obra, a partir de la fecha de la compra original. Vea en la caja del empaque la duración de la garantía y guarde su recibo de compra original para validar el inicio del período de garantía.

Si la aspiradora se descompone dentro del período de la garantía, repararemos o reemplazaremos las partes defectuosas sin cargo alguno. Se debe enviar todo el aparato con porte pagado con anticipación a cualquier Estación de Servicio de Ventas y Garantía autorizada por Royal. Por favor incluya la descripción completa del problema, el día de compra, copia del recibo original de compra y su nombre, dirección y número telefónico. Si no se encuentra cerca de una Estación de Garantía, llame a la fábrica para que le asistan en EE.UU.: 1-800-321-1134 / CANADA: 1-800-661-6200. Use únicamente piezas de repuesto genuinas de Royal.

La garantía no incluye el desgaste inusual, los daños que resulten de accidentes o del uso no razonable de la aspiradora. Esta garantía no cubre el daño a las bandas, cepillos, bolsas, focos ni al ventilador. Esta garantía no cubre reparaciones no autorizadas. Esta garantía le otorga derechos específicos legales y puede tener también otros derechos. (Otros derechos pueden variar de estado a estado en los EE.UU.)

ESTA ASPIRADORA ES SOLO PARA USO DOMESTICO

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

Cuando se use un aparato eléctrico, deben tomarse ciertas precauciones básicas de seguridad, incluyendo las siguientes:

- **LEA TODAS LAS INSTRUCCIONES ANTES DE USAR EL APARATO.**
- **SIEMPRE SIGA ESTAS INSTRUCCIONES DE SEGURIDAD.**
- **PONGA LA ASPIRADORA EN POSICION VERTICAL CUANDO USE LA MANGUERA Y LOS ACCESORIOS.**
- **NO DEJE LA ASPIRADORA DESATENDIDA CUANDO ESTE CONECTADA.**
- **REVISE REGULARMENTE LOS FILTROS PARA SACUDIRLOS O REEMPLAZARLOS.**
- **ADVERTENCIA: NO USE OBJETOS AFILADOS PARA SACAR OBJETOS DE LA MANGUERA YA QUE PODRIAN DAÑARLA.**
- **OCASIONALMENTE QUITE EL CEPILLO Y LIMPIE LAS TAPAS DE LOS EXTREMOS PARA PERMITIR QUE EL CEPILLO GIRE UNIFORMEMENTE.**

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR EL APARATO.

ADVERTENCIA: PARA EVITAR PELIGRO DE INCENDIO, DESCARGAS ELECTRICAS O LESIONES:

- No deje la aspiradora conectada. Desconéctela del tomacorriente cuando no la use y antes de darle servicio.
- No la use a la intemperie ni en superficies húmedas, ya que podría ocasionar una descarga eléctrica.
- No permita que jueguen con ella. Se necesita supervisión cuando la usa un niño o cuando se usa donde hay niños.
- Usela sólo de la manera descrita en este manual. Utilice sólo los accesorios recomendados por el fabricante.
- No use la aspiradora si la clavija o el cordón están dañados. Si la aspiradora no funciona como debiera o se ha caido, dañado o se dejo a la intemperie, o se cayó al agua, llévela a un centro de servicio para que la revisen. Llame al 1-800-321-1134 para localizar el centro de servicio más cercano.
- No la jale ni la cargue del cordón, ni use el cordón como mango, ni cierre la puerta sobre el cordón, ni pase el cordón alrededor de bordes o esquinas filosas. No ruede la aspiradora sobre el cordón. Mantenga el cordón alejado de superficies calientes.
- No desconecte la aspiradora jalando el cordón. Para desconectarla, hágalo tomando del enchufe, no del cordón.
- No toque el enchufe ni la aspiradora con las manos mojadas.
- No coloque objetos en las aberturas. No la utilice con las aberturas obstruidas; manténgalas libres de polvo, pelusa, cabellos o cualquier cosa que reduzca el paso de aire.
- Mantenga el cabello, la ropa suelta, los dedos y todas las partes del cuerpo lejos de las aberturas y las partes móviles.
- No aspire nada que esté quemándose o que esté desprendiendo humo como podrían ser cigarrillos, cerillos o cenizas calientes.
- No la use sin la bolsa para polvo ni/o sin los filtros en su lugar.
- Apague todos los controles antes de desconectarla.
- Tenga mucho cuidado cuando aspire escaleras.
- No la utilice para aspirar líquidos inflamables o combustibles como por ejemplo gasolina ni la use en áreas donde éstos puedan encontrarse presentes.
- Mantenga la aspiradora en el piso. Solamente las aspiradoras de mano se pueden usar en los muebles.
- La aspiradora debe estar en posición vertical para levantar el cepillo rotatorio de la alfombra cuando se aspire arriba del piso.
- No use extensión de cordón con esta aspiradora.
- Guarde la aspiradora en interiores. Coloque la aspiradora en su lugar para evitar tropezones.
- El utilizar un voltaje incorrecto puede dañar el motor y causar lesiones al usuario. El voltaje apropiado está inscrito en la placa de la aspiradora.

GUARDE ESTAS INSTRUCCIONES

ADVERTENCIA:

Para reducir el riesgo de descargas eléctricas, esta aspiradora tiene un enchufe polarizado (una paletilla más ancha que la otra). Este enchufe entrará en un tomacorriente polarizado, sólo de una manera. Si el enchufe no entra completamente en el tomacorriente, inviértalo. Si aún así no entra, consulte a un electricista calificado para instalar el tomacorriente apropiado. No cambie el enchufe de ninguna manera.

Esta aspiradora ha sido diseñada con una Rueda Indicadora de Desempeño patentada (ubicada en el mango). Este indicador junto con la válvula de taponamiento, evita que el motor se sobrecaliente si ocurriera un taponamiento. De activarse, la rueda girará y usted notará una disminución en la potencia o en la succión de la aspiradora. Si así ocurre, desenchufe la aspiradora, vacíe el receptáculo para polvo y limpie a fondo el PermaFilter™ con sistema de Filtración *CleanStream*™ (vea la página 6 en el manual de instrucciones). También inspeccione la boquilla o el conducto del polvo, limpie la entrada de la manguera para que no haya obstrucciones y revise el filtro Hepa (cámbielo de ser necesario – página 7).

Para mantener el funcionamiento de su aspiradora, se recomienda que vacíe el receptáculo para polvo antes de que el mismo llegue a la línea de "Max Fill" y limpie con regularidad el PermaFilter™ con sistema de Filtración *CleanStream*™ (ubicado en el receptáculo para polvo).

Fig. 1

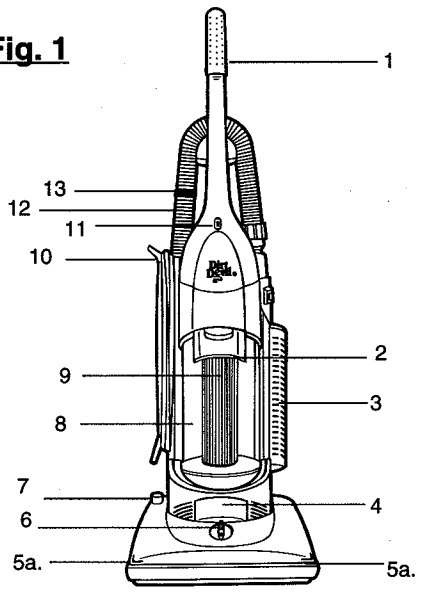

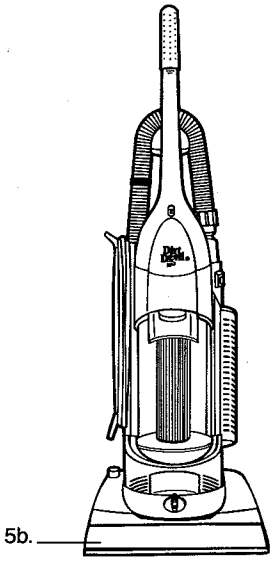

Fig. 2

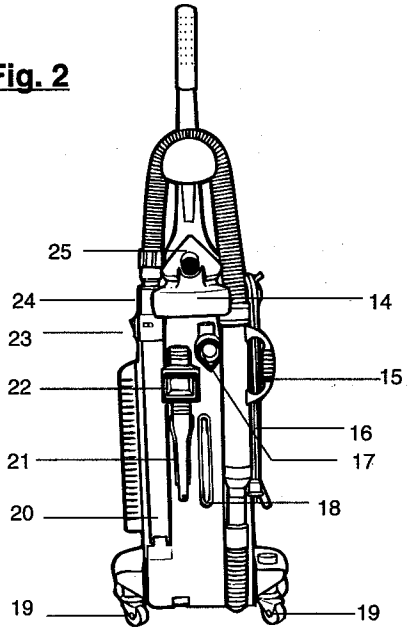

PIEZAS

Fig 1

1. **Mango que no se resbala Non-Slip Grip™**
2. **Palanca de liberación del recipiente para polvo**
3. **Filtro HEPA**
4. **Lámpara frontal**

5a *Ranuras Power Edger™ con Tope Envolvente (Opcional)

5b *Tope Scuff Guard™ (Opcional)

6. **Botón de graduación de espesor de alfombra**
7. **Pedal liberador del mango**
8. **Recipiente para polvo**
9. **PermaFilter™ con Sistema de Filtración CleanStream™ en Recipiente para Polvo**
10. **Sujetador de Cordón**
11. **Rueda Indicadora de Desempeño**
12. **Accesorio Hide-a-Hose™**
13. **Anclaje de Manguera**

Fig. 2

14. **Mango transportador**
15. **Mango Hide-a-Hose™**
16. **Cordón eléctrico largo**
17. ***Power Edger™ (con Tope Envolvente Opcional)**
18. **Alojamiento para banda**
19. **Ruedas giratorias**
20. **Extensión telescópica**
21. **Accesorio para áreas difíciles**
22. **Accesorio 2 en 1 - cepillo para polvo/para tapiz**
23. **Interruptor de Encendido(On)/Apagado™Off) - arriba del filtro HEPA**
24. **Entrada transparente para manguera**
25. **Accesorio Edge Wedge™ (accesorio para esquinas y escaleras)**

NOTA: *"Los accesorios opcionales no vienen incluidos en todos los modelos"

COMO ENSAMBLAR

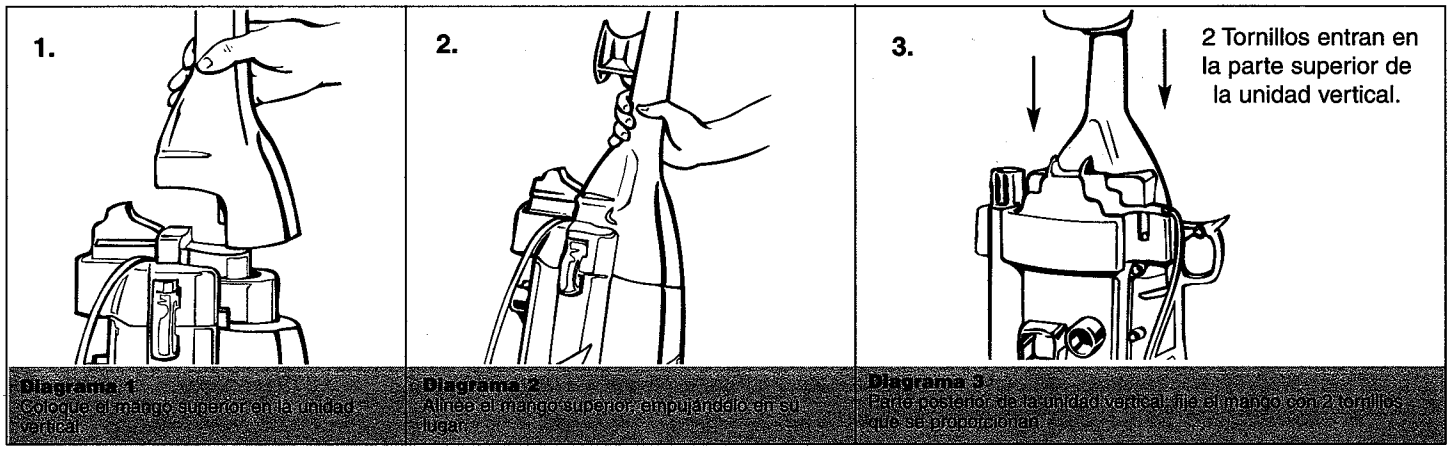

COMO ENSAMBLAR

HERRAMIENTA REQUERIDA: DESTORNILLADOR DE CRUZ

1. Coloque la unidad en posición vertical y coloque el mango en la parte superior de la unidad vertical. (Diagrama 1).
2. Oprima el mango sobre la parte superior, alinee el mango superior con la apertura del mango. (Diagrama 2).
3. **DOS** tornillos (que se proveen) entran en la parte superior de la unidad vertical para fijar el mango (Diagrama 3).

COMO OPERAR

Diagrama 1
Fije la manguera flexible a la aspiradora.

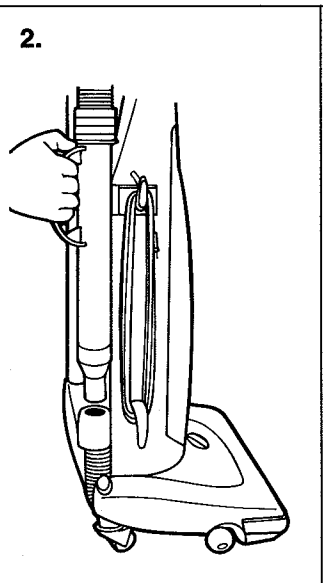

Diagrama 2
Inserte el muñón en el costado de la aspiradora. Oprima firmemente hacia abajo.

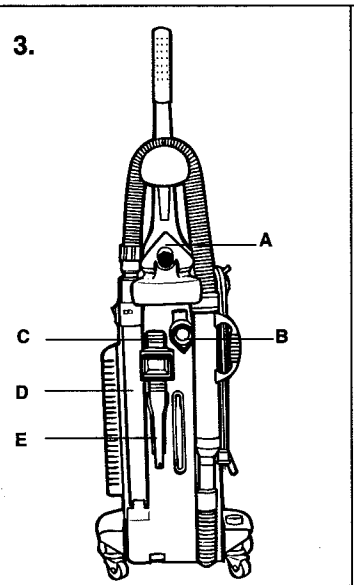

Diagrama 3 Accesorios
A. Edge Wedge B. Power Edger C. Accesorio 2 en 1 D. Extensión Telescópica E. Accesorio para áreas difíciles.

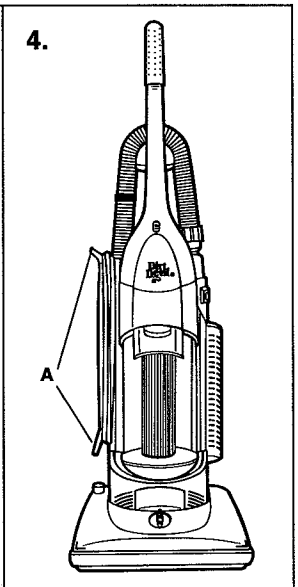

Diagrama 4
A. Ganchos para el cordón (Gancho de arriba: Gancho liberador rápido de cordón).

MONTAJE DE MANGUERA Y ALMACENAMIENTO DE ACCESORIOS

1. **FIJE LA MANGUERA**: Fije la manguera flexible a la aspiradora (Diagrama 1). Haga coincidir las flechas de la manguera con las lengüetas en la entrada transparente para la manguera (Diagrama 1A). Presione firmemente en el muñón y gire en el sentido de las manecillas del reloj. Inserte el muñón en el costado de la aspiradora. Presione firmemente para asegurarla en su lugar (Diagrama 2).
2. **FIJE LOS ACCESORIOS:** (Diagrama 3) (A) Deslice el Edge Wedge™ en la base del mango superior con las cerdas hacia adentro. (B) Presione el Power Edger™ (Opcional) en el panel trasero inferior con las cerdas hacia afuera. (C). Deslice el accesorio 2 en 1 en el panel trasero superior con las cerdas hacia afuera. (D) Deslice la extensión telescópica, con el extremo pequeño hacia abajo, en el panel trasero inferior. (E) Deslice el accesorio para áreas difíciles en el panel trasero inferior.
3. **ALMACENAMIENTO DEL CORDON:** Para guardar ordenadamente, enrolle el cordón alrededor del gancho a un costado de la aspiradora con el liberador rápido de cordón (Diagrama 4) (A).

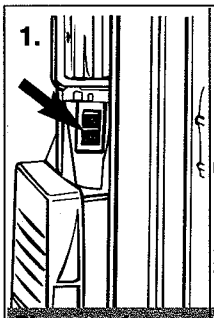

Diagrama 1
Interruptor encendido (on)/apagado(off).

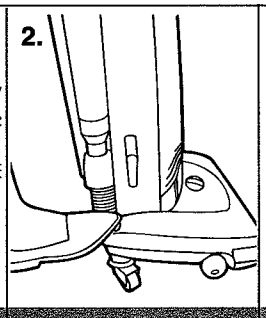

Diagrama 2
Pedal liberador del mango.

Diagrama 3
Botón de graduación de espesor de alfombra.

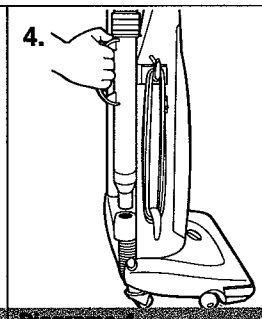

Diagrama 4
Levante y quite la manguera en un ángulo para la limpieza encima del piso.

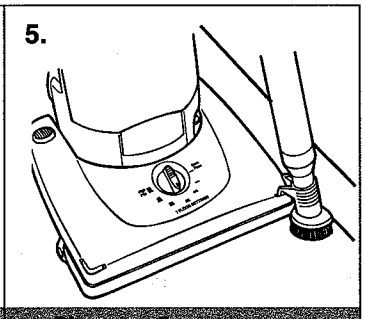

Diagrama 5
Limpieza con el Power Edger™

COMO OPERAR 1. Enchufe el cordón a un tomacorriente. 2. Encienda la aspiradora por medio del interruptor ubicado en la parte izquierda de la aspiradora, justo arriba del filtro HEPA (Diagrama 1).

LIMPIEZA DEL PISO/ALFOMBRA

1. El mango debe estar en posición vertical antes de ajustar el espesor de alfombra (Diagrama 2). Gire el botón para ajustar la altura para que coincida con la superficie que se va a limpiar (Diagrama 3). Una vez que la altura haya sido ajustada, la boquilla irá a la posición correcta.

NOTA: *El cepillo en rotación podría hacer que los flecos de la alfombra se enredaran dentro de la aspiradora. Sea precavido cuando aspire alfombras con flecos.*

LIMPIEZA POR ENCIMA DEL PISO

La aspiradora debe estar en posición vertical para levantar el cepillo giratorio de la alfombra cuando se limpie por encima del piso.

FÉLICITATIONS !

Vous êtes désormais le fier propriétaire d'un Dirt Devil Swivel Glide Vision avec le dispositif Power You Can See™! Vous n'achèterez plus jamais un autre sac poussière avec cette conception sans sac unique qui inclut un vide-poussière transparent permettant de récupérer les objets perdus. Vous apprécierez également une puissance de nettoyage supérieure avec 12 ampères de puissance d'aspiration maximum.

Les personnes sujettes à des allergies apprécieront l'exclusif PermaFilter™ avec le système de filtration CleanStream™, situé dans le vide-poussière, et l'exclusif filtre d'évacuation HEPA qui permet de retenir plus de 99% des poussières et des allergènes dans le vide-poussière et les empêche de se disperser à nouveau dans l'air. Parmi les autres caractéristiques qui facilitent l'aspiration: les roulettes orientables pour faciliter les manoeuvres et les outils incorporés pour nettoyer au-dessus du sol.

Nous sommes extrêmement fiers de nos produits et espérons que, tout comme nous, vous êtes satisfaits de leur qualité et de leur performance.

Merci pour votre support des produits Dirt Devil.

Visitez notre site web au www.dirtdevil.com.

TABLE DES MATIÈRES

Pièces . . . . . Page 4
Assemblage . . . . . Page 4
Utilisation de l'aspirateur . . . . . Page 5
- Assemblage du tuyau et rangement des outils . . . . . Page 5
- Nettoyage des planchers et tapis . . . . . Page 5
- Nettoyage au-dessus du plancher . . . . . Page 5
- Nettoyage des bords sans les mains . . . . . Page 5
- Cache-tuyau . . . . . Page 6
- Réglages pour les tapis . . . . . Page 6

Transport de l'aspirateur . . . . . Page 6
Vide-poussière et PermaFilter™ avec la filtration CleanStream™ . . . Page 6
Retrait et remplacement des filtres . . . . . Page 7
Retrait et remplacement de la courroie ou du rouleau de brosse . . Page 7
Retrait et remplacement de l'ampoule . . . . . Page 8
Guide de dépannage . . . . . Page 8

GARANTIE LIMITÉE

Royal Appliance Mfg. Co. garantit au consommateur que cet aspirateur est exempt de tout vice de matériau ou de fabrication à compter de la date d'achat originale. Consultez le carton d'emballage de l'aspirateur pour déterminer la durée de la garantie et conservez l'original de votre reçu d'achat pour justifier la date d'entrée en vigueur de la garantie.

Si l'aspirateur fait défaut durant la période couverte par la garantie, nous réparerons ou remplacerons toutes pièces défectueuses gratuitement. L'aspirateur au complet doit être livré, port payé, à n'importe quel point de vente et de service ROYAL agréé. Veuillez inclure une description détaillée du problème, la date d'achat, une copie du reçu d'achat original, ainsi que vos noms, adresse et numéro de téléphone. S'il n'y a pas de point de vente dans votre région, appelez l'usine, au 1-800-321-1134 aux ÉTATS-UNIS et au 1-800-661-6200 au CANADA. N'utilisez que des pièces de rechange Royal authentiques.

La garantie ne couvre pas l'usure inhabituelle, ni les détériorations dues à un accident ou à un usage abusif de l'aspirateur. Elle ne couvre pas non plus les courroies, les brosses, les sacs, les ampoules ou le ventilateur. Cette garantie ne couvre pas les réparations non autorisées. Cette garantie vous confère des droits juridiques précis, mais vous pouvez également disposer d'autres droits (ces derniers variant d'un État à l'autre au sein des États-Unis).

Dirt Devil®

MANUEL DU PROPRIÉTAIRE

Notice d'utilisation et d'entretien

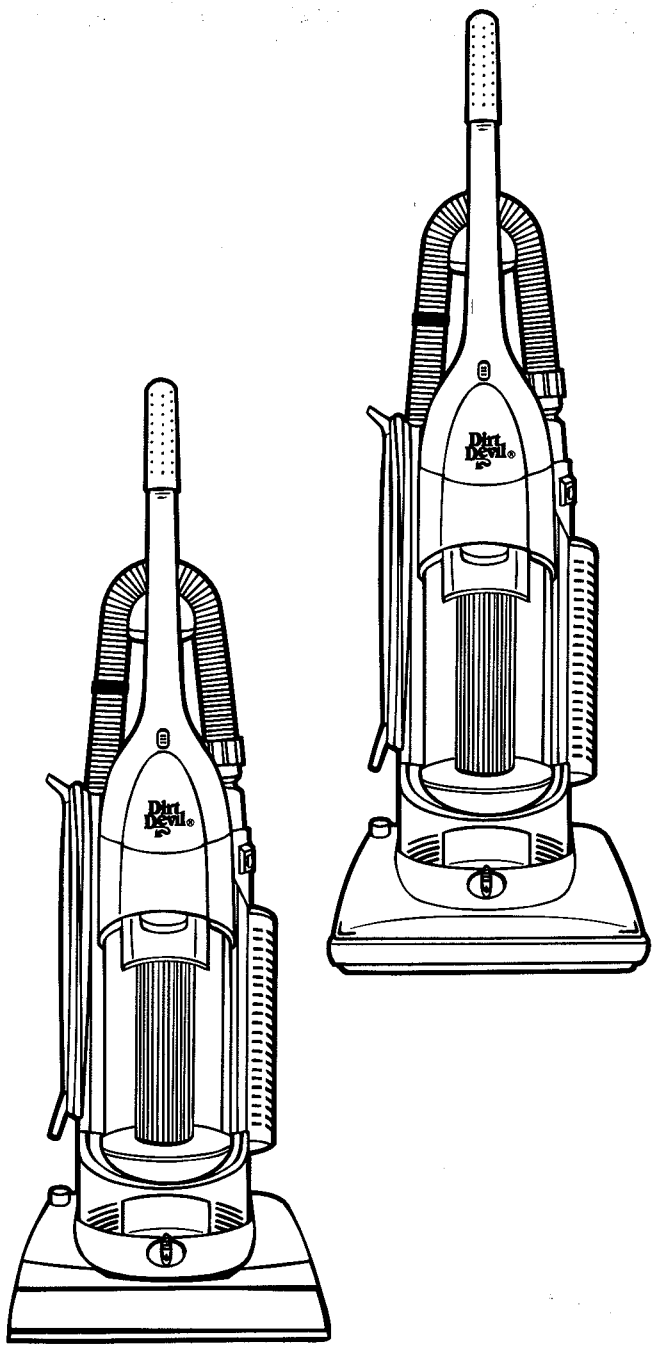

Dirt Devil®

- Veuillez lire ces instructions avec soin avant d'utiliser votre Swivel Glide Vision.
- Permettez-nous de vous aider à assembler votre aspirateur ou de répondre à vos questions en appelant le :

  1-800-321-1134 (É.U.)
  1-800-661-6200 (Canada)

Consignez les renseignements concernant votre aspirateur ci-dessous pour pouvoir les retrouver rapidement.

N° de modèle : _____

Code de fab. : _____

(Le code de fabrication se trouve sur le côté inférieur arrière de l'aspirateur.)

©1998 Tous droits réservés N° 1-690221-033
11/99

Español - página E1