RICCAR®

Immaculate & Impeccable

Owner's Manual

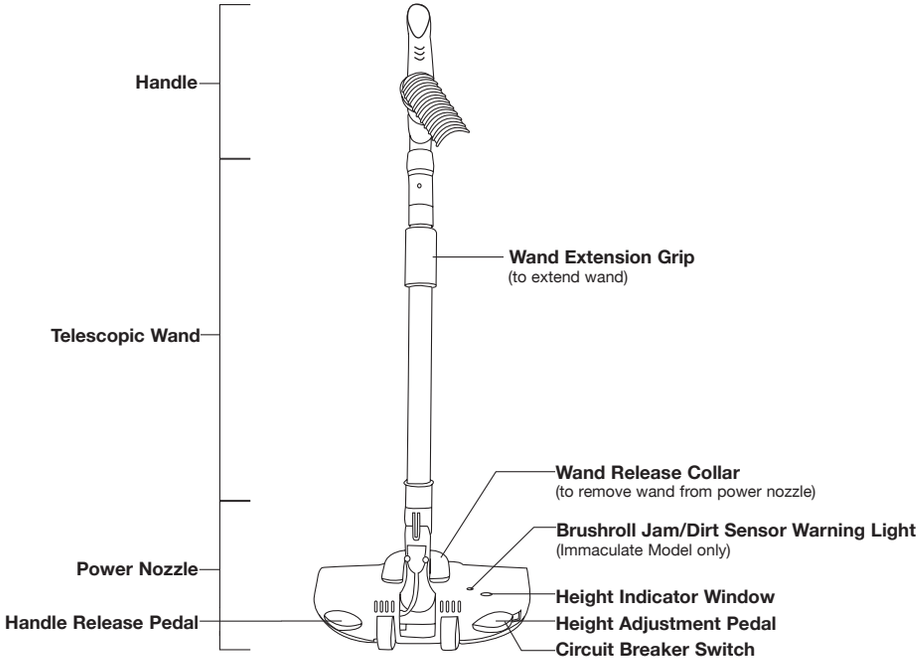

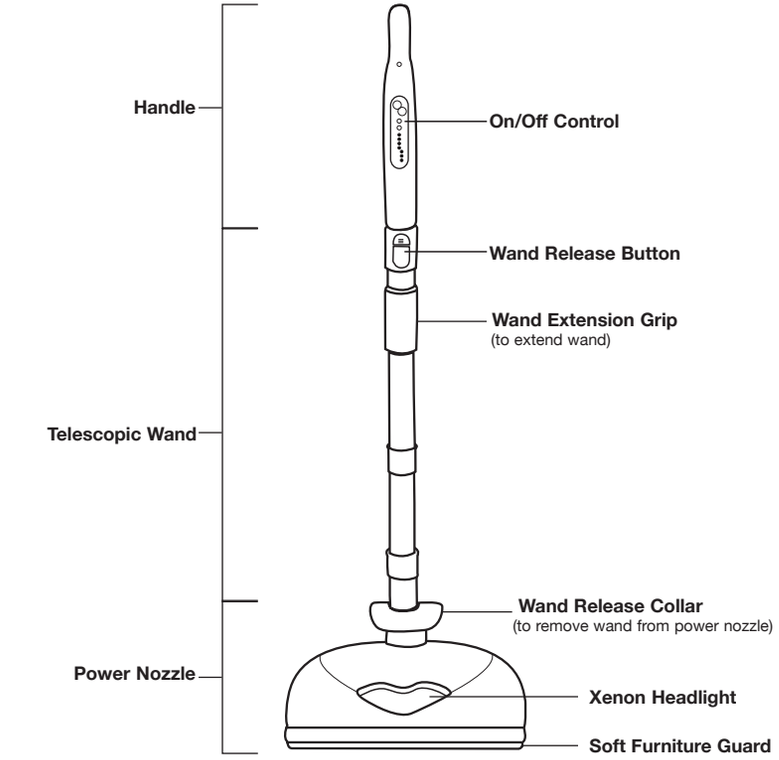

Using the Power Nozzle
After turning on the canister, lower the wand by pressing the left pedal on the back side of the power nozzle.

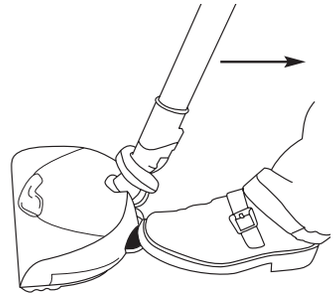

Turning On the Power Nozzle
The power nozzle on/off button is located on the handle. Simply press the Power Brush button to turn on the canister and engage the power nozzle.

Removing and Inserting the Wand
Removing the wand from the power nozzle allows you to use cleaning tools for baseboard or ceiling cleaning. To do this, first turn the power nozzle and canister off. Then, press the wand release collar pictured below and pull the wand out.

To reinsert the wand into the power nozzle, simply press the wand back into the neck of the power nozzle. The wand will then “click” into place.

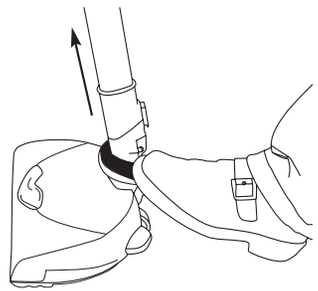

Carpet Height Adjustment
Your power nozzle has six different settings to clean a variety of carpet types and floor surfaces. To adjust the carpet height setting of the power nozzle, press the right pedal located on the back of the power nozzle. Each press of this pedal will adjust the height to the next carpet height position.

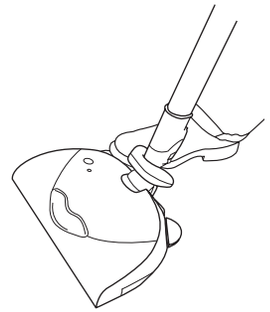

To determine which setting you are currently on, look through the height indicator window on the top of the unit. You will see one of the six settings detailed below:

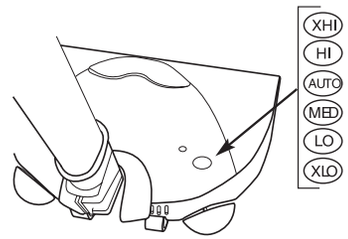

Setting:	Intended Use:
1. XHI	Very plush carpet
2. HI	Plush carpet
3. Auto	General carpet thickness or bare floors
4. MED	Medium pile carpet
5. LO	Low pile carpet
6. XLO	Indoor/outdoor carpet

Carpet Height Adjustment Tips: When using the power nozzle, start on the “Auto” setting. If pushing the power nozzle feels difficult, then adjust to a higher setting. If the power nozzle feels very easy to push, you may want to lower the power nozzle for more effective cleaning. The “Auto” setting is the recommended setting for hard floor surfaces (i.e. tile, vinyl, wood).

Warning Light/Dirt Sensor
Your power nozzle is equipped with a circuit breaker safety system that protects it from a jammed situation. Common items that cause jammed brushrolls include socks, excessive threads, corners of area rugs, etc. The warning indicator light on top of the unit will change from green to red should this condition occur.

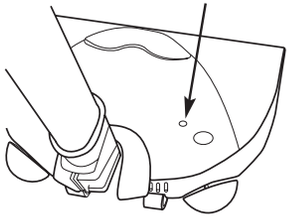

Dirt Sensor - Immaculate Model Only
The warning light will change to orange if the dirt sensor detects dirt in the carpet and will change to green when the carpet is clean.

If the circuit breaker trips:
- Turn off the vacuum cleaner and power nozzle then unplug the power cord.
- Remove the object preventing the brushroll from turning.
- Locate the circuit breaker switch on the back of the power nozzle and press it to reset the breaker. When the unit is turned back on, the warning light should be green.

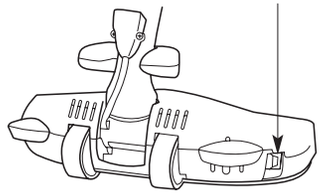

If the breaker trips again, repeat these steps again to correct the problem. If this does not correct the problem, contact your authorized Riccar Vacuum retailer for further assistance.

Removing the Brushroll
IMPORTANT: Before performing any maintenance on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.

Your brushroll may need to be removed at times to cut threads that have become tangled around the brushroll or to replace the belt (see “Replacing the Power Nozzle Belt”).

To remove the brushroll, turn the unit over and take off the metal bottom plate by first removing the two bottom plate screws located by the rear wheels.

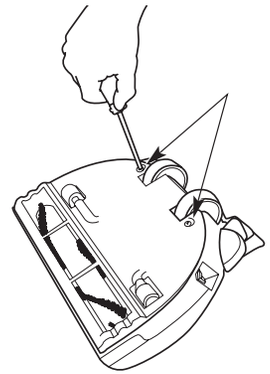

Remove the belt cover guard and pull the brushroll out.

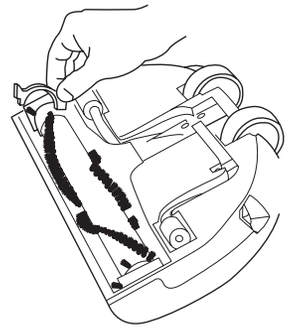

To reinstall the brushroll, reinsert the brushroll back into the unit (make sure the belt is attached properly). Next, insert the belt cover guard. Then, place the metal bottom plate back onto the unit (insert the front end of the bottom plate first). Re-insert the two bottom plate screws and secure.

Replacing the Power Nozzle Belt
IMPORTANT: Before performing any maintenance work on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.

To replace the power nozzle belt, you must first remove the brushroll (see “Removing the Brushroll”). Then locate and discard broken belt.

To install new belt, locate the power nozzle motor pulley and loop the belt around it.

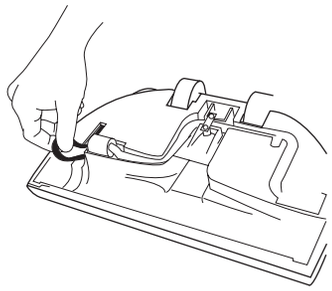

Place the other end of the belt around the brushroll making sure the belt is seated in the “belt groove” of the brushroll.

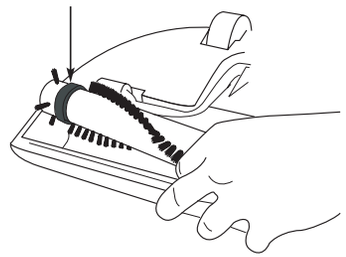

Replacing the Power Nozzle Belt Cont.
Insert the brushroll back into the brushroll tray and place the belt guard back into position. Place the metal bottom plate onto the unit (insert the front end of the bottom plate first). Re-insert the two bottom screws and secure.

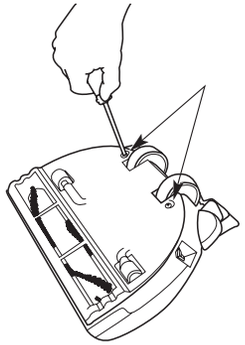

Replacing the Bulb
IMPORTANT: Before performing any maintenance work on the power nozzle, always unplug the vacuum cleaner and disconnect the wand.

Turn the power nozzle over and remove the bottom plate by first removing the two bottom plate screws located by the rear wheels.

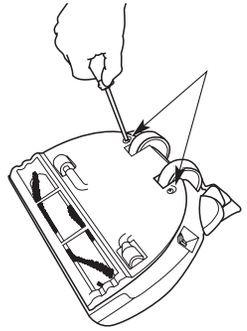

Remove the two top cover screws.

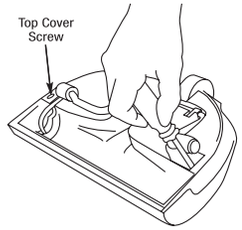

Turn the power nozzle back over, push the neck flat, and remove the top cover.

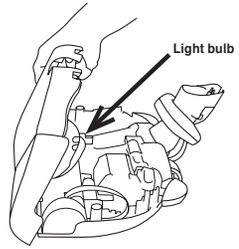

Simply pull the bulb out (no twisting) and reinsert a factory-authorized bulb. Place the top cover back on the unit, turn the machine over and re-insert the two top cover screws. Reinstall the bottom plate.

Please check each item below if you have trouble with your vacuum.
Unplug the vacuum from the power supply before servicing.

Problem	Check Point	Possible Solution
Suction power is weak.	Vacuum bag	If vacuum bag is full, replace it.
	Wand or hose	If clogged or blocked, remove the object.
The vacuum does not work.	Is the hose adapter inserted into the suction opening of the vacuum completely?	Insert it completely.
	When the vacuum bag is full or any of the accessories are blocked, the over-heating protection for the motor is activated.	Turn the vacuum off and unplug the vacuum. Check the vacuum bag and accessories and remove any blockages. The vacuum can be turned on again after approximately 20 minutes.
Power cord does not rewind.	Power cord	Pull the power cord out a little and press the cord rewind button again.
Power cord won't pull out of the vacuum.	Power cord	Do not pull it out by force. Rewind it a little by pressing the cord rewind button and try pulling it out again.

Owner's Information (keep this for your records)

The model and serial number of this product may be found on the back side of the unit. You should note the model and serial number of your unit in the spaces provided below, and retain this book as a permanent record of your purchase.

Date of purchase _____

Serial number _____

Model number _____

Purchased from:

Store name _____

Address _____

City, State, Zip _____

Telephone _____

For Best Performance:

- Keep your canister clean and in good operating condition.
- Change vacuum bags once a month or when the bags are 2/3 full to maximize cleaning performance.
- Always use genuine vacuum bags and replacement parts. Use of other products may result in poor cleaning performance, potential vacuum cleaner damage and may void vacuum warranty. Genuine products are designed for maximum cleaning performance.
- Have your canister checked periodically by your Authorized Riccar Vacuum Retailer.
- Use only Authorized Riccar Vacuum Retailers for parts or service.
- Store your canister carefully in a dry area.
- For optimum cleaning performance and safety, follow your owner's manual instructions.

Warranty

What is Covered:
This warranty covers any defects in material and workmanship in your new Riccar vacuum and applies exclusively to the original purchaser.

How Long Coverage Lasts:
Warranty coverage for the Riccar Impeccable and Immaculate canisters lasts five years. Household models used commercially are only warranted for 90 days.

What is Not Covered:
- Damage to the vacuum which occurs from neglect, abuse, alterations, accident, misuse or improper maintenance.
- Normal replacement items: filters, brushstrips, lightbulbs and disposable bags.

What Riccar Vacuums Will Do:
This warranty provides, at no cost to you, all labor and parts to place this vacuum in correct operating condition during the warranted period.

How to Get Service:
Warranty service can only be obtained by presenting the vacuum to an Authorized Riccar Vacuum Retailer. A proof-of-purchase and product serial number will be required before service is rendered. To locate your nearest Riccar Vacuum Retailer, please call 1-888-6-RICCAR or visit www.Riccar.com.

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY AND ALL OTHER WARRANTIES WHETHER WRITTEN, ORAL, EXPRESSED OR IMPLIED, (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE). THIS WARRANTY DISCLAIMS LIABILITY FOR INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

How State Law Applies:
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RICCAR®

www.riccar.com

©2010 Tacony Corporation