S24L(영-TACONY)-8.262004.8.289:55AM페이지1

Simplicity®

(The chances are you're never going to read me)

Owner's Manual

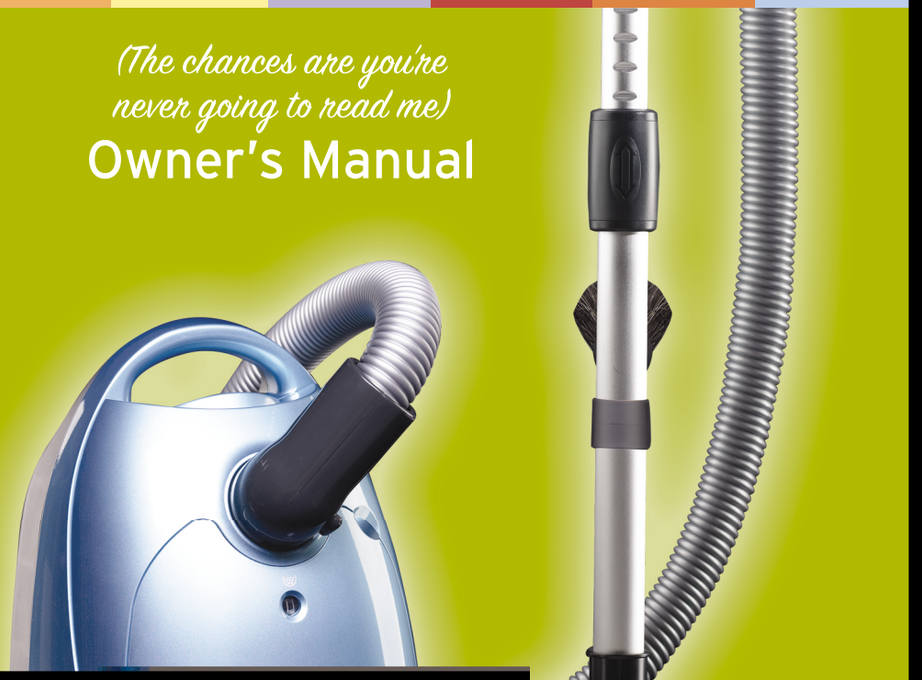

Model S24

TROUBLESHOOTING GUIDE

■ Please check each item below if you have trouble with your vacuum.
Before checking, ensure that the vacuum is unplugged from the power supply.

Problem	Check Point	Note
• Suction power is weak.	• Vacuum bag • Wand or hose	• If vacuum bag is full, replace it. • If clogged or blocked, remove the object.
• The vacuum does not work.	• Is the hose adapter inserted into the suction opening of the vacuum completely? • When the vacuum bag is full or blocked or any of the accessories are blocked, the over-heating protection for the motor is activated.	• Insert it completely. • Switch off and unplug the vacuum and check the vacuum bag and accessories and remove any blockages. The vacuum can be switched on again after approximately 20 minutes.
• Power cord does not rewind.	• Power cord	• Pull the power cord out a little and press the cord rewind button again.
• Power cord won't pull out of the vacuum.	• Power cord	• Do not pull it by force. Rewind it a little by pressing the cord rewind button and try pulling it out again.

SPECIFICATIONS

Model	S24
Rating	120V/60Hz
Amps	9.5A / 12A (with Power Nozzle)
Weight	15.5 Pounds
Dimension (L X W X H)	19" x 12.5" x 9.3"
Cord Length	18 feet

• Specifications can be changed for improvement without notice.
For assistance please visit www.Simplicityvac.com or call 1-888-9-Simply.