WindTunnel™ 2

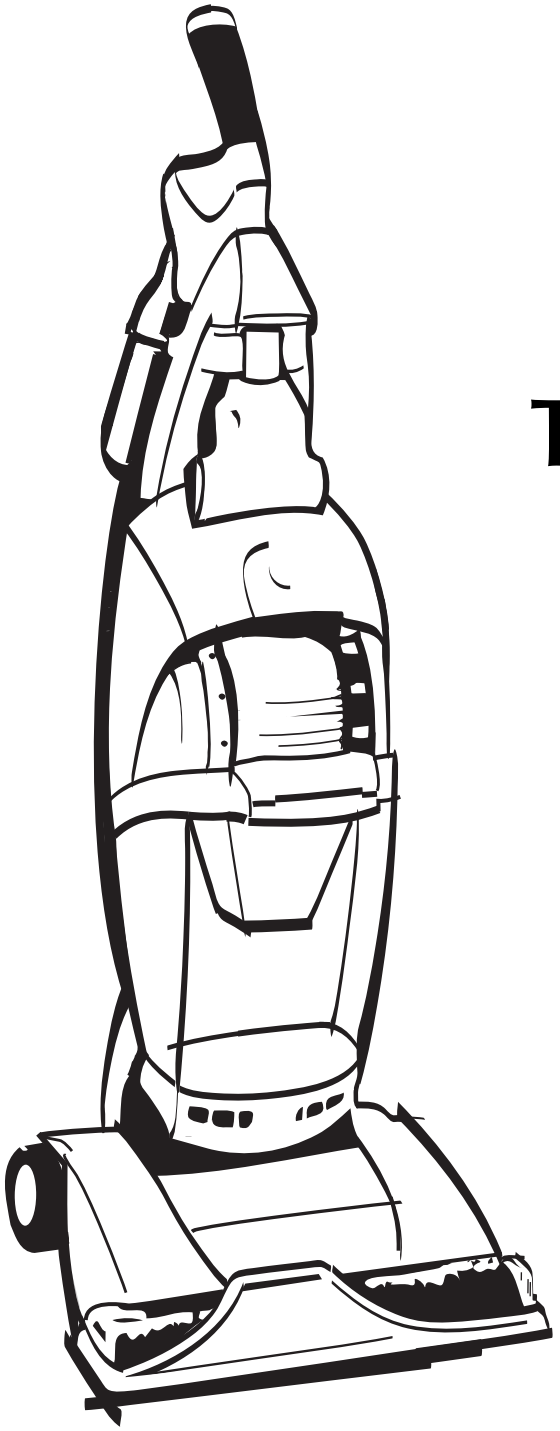

Owner's Manual

English ➜ pages 3-20

ESPAÑOL ➜ pág 20-31

Thank You for choosing HOOVER®!

www.hoover.com

HOOVER SALES & SERVICE CENTERS

ALABAMA
Pinebrook Shpg. Ctr.
3980B Airport Blvd.
Mobile, AL 36608
(251) 341-0304
(251) 341-0395 fax

ARIZONA
3434 West Bell Rd.
Phoeniz, AZ 85053
(602) 439-2751
(602) 564-0938 fax

4881 E. Speedway Blvd.
Tucson, AZ 85712
(520) 795-5612
(520) 322-6016 fax

Mesa Shores Shpg Ctr.
2136 East Baseline Rd.
Suite B-1
Mesa, AZ 85204
(480) 633-0622
(480) 633-0626 fax

CALIFORNIA
Sycamore Plaza
1047 N. State College Blvd.
Anaheim, CA 92806
(714) 635-5710
(714) 635-8432 fax

Burlingame Plaza Shpg. Ctr.
1803A El Camino Real
Burlingame, CA 94010
(650) 652-7810
(650) 652-7811 fax

1660 Contra Costa Blvd.
Suite C
Pleasant Hill, CA 94523
(925) 674-1206
(925) 674-1304 fax

West Gate Shpg. Ctr.
17498 Hawthorne Blvd.
Torrance, CA 90504
(310) 921-6523
(310) 921-6533 fax

1834 Fulton Ave.
Sacramento, CA 95825
(916) 481-4860
(916) 481-1528 fax

3628 Geary Blvd.
San Franciso, CA 94118
(415) 668-5101
(415) 668-5976 fax

Greenhouse Market Place
699 Lewelling Blvd, Ste182
San Leandro, CA 94579
(510) 346-2400
(510) 346-2402 fax

6487 N. Blackstone Ave.
Fresno, CA 93710
(559) 449-8258
(559) 449-0302 fax

230 S. Lake Ave., #2
Pasadena, CA 91101
(626) 229-0636
(626) 229-0638 fax

19030 Ventura Blvd.
Tarzana, CA 91356
(818) 345-7637/7827
(818) 609-1246 fax

1287 Morena Blvd.
San Diego, CA 92110
(619) 276-9560
(619) 276-4359 fax

COLORADO
Academy Pl. Shpg. Ctr.
5142 N. Academy Blvd.
Colorado Springs, CO 80918
(719) 260-9988
(719) 260-8353 fax

Monaco Village Shpg. Ctr.
2200 S. Monaco Pkwy.
Denver, CO 80222
(303) 757-4904
(303) 757-2723 fax

FLORIDA
303 E. Altamonte Dr, Ste 1100
Altamonte Springs, FL 32701
(407) 831-1444
(407) 831-5444 fax

102 S. Flamingo Rd.
Pembroke Pines, FL 33027
(954) 432-0031
(954) 432-6350 fax

GEORGIA
3655 Roswell Rd. NE, Ste 126
Buckhead, GA 30342
(404) 814-1574
(404) 814-1035 fax

1064 Old Peachtree Rd.
Ste 102
Lawrenceville, GA 30043
(678) 442-9907
(678) 442-9947 fax

2960 Shallowford Rd. #200
Marietta, GA 30066
(678) 560-0066
(678) 560-0068 fax

10779 Alpharetta Hwy.
Suite 170
Roswell, GA 30076
(770) 649-0425
(770) 649-0704 fax

IDAHO
520 S. Meridan Rd, Ste. 150
Meridian, ID 83642
(208) 855-4775
(208) 855-4776 fax

ILLINOIS
Winston Plaza Shpg. Ctr.
1372 Winston Plaza
Melrose Park, IL 60160
(708) 344-3800
(708) 344-3853 fax

Yorkshire Plaza
4328 East New York Street
Aurora, IL 60504
(630) 499-5728
(630) 499-5816 fax

IOWA
3001-100th St.
Urbandale, IA 50322
(515) 331-0550
(515) 331-0545 fax

KENTUCKY
4131 Shelbyville Rd.
Louisville, KY 40207
(502) 895-4775
(502) 895-9874 fax

MARYLAND
Belair Beltway Plaza
7632 Belair Rd.
Baltimore, MD 21236
(410) 668-8100
(410) 668-9228 fax

The Festival at
Muddy Branch
305 Muddy Branch Rd.
Gaithersburg, MD 20878
(301) 948-0864
(301) 948-0866 fax

MICHIGAN
Evergreen Plaza Shpg. Ctr.
19799 West 12 Mile Rd.
Southfield, MI 48076
(248) 552-6253
(248) 552-6256 fax

MINNESOTA
Knollwood Village Shpg. Ctr.
8922 Highway 7
St. Louis Park, MN 55426
(952) 935-0091
(952) 935-0462 fax

Falcon Crossing Shpg. Ctr.
1539 W. Larpenteur Ave.
St. Paul, MN 55113
(651) 644-8684
(651) 644-6621 fax

MISSOURI
201 East Gregory
Kansas City, MO 64114
(816) 333-7440
(816) 333-3184 fax

18931 Valley View Pkwy.
Ste F
Independence, MO 64055
(816) 795-5303
(816) 795-5759 fax

NEBRASKA
Plaza II Shpg. Ctr.
2449 S. 120th Street
Omaha, NE 68144
(402) 330-2290
(402) 330-7675 fax

NEVADA
Eastern Beltway Shpg. Ctr.
2050 East Serence Ave.
Suite 620-3
Las Vegas, NV 89123
(702) 614-0777
(702) 614-0787 fax

7920 W. Tropical Parkway
Suite 110
Las Vegas, NV 89149
(702) 645-4320
(702) 645-7518 fax

NEW MEXICO
Fiesta Crossings
4770 Montgomery VC NE
Suite A-103
Albuquerque, NM 87109
(505) 883-0800
(505) 883-4970 fax

NEW YORK
Sheridan Centre
3312 Sheridan Drive
Amherst, NY 14226
(716) 831-0153
(716) 833-2423 fax

Kohl's Shopping Plaza
3523A Hempstead Turnpike
Levittown, NY 11756
(516) 520-1233
(516) 520-1293 fax

1577 Ridge Rd. West
Rochester, NY 14615
(585) 865-7190
(585) 865-7214 fax

Northern Lights Shpg. Ctr.
320 Northern Lights Plaza
No. Syracuse, NY 13212
(315) 454-4682
(315) 454-4782 fax

NORTH CAROLINA
Four Seasons Plaza
6449 Albemarle Rd.
Charlotte, NC 28212
(704) 568-0371
(704) 568-4283 fax

OHIO
4032 Belden Village St.
Canton, OH 44718
(330) 491-0086
(330) 491-0140 fax

Cross Pointe Shpg. Ctr. 109
101 E. Alex-Bell Rd
Centerville, OH 45459
(937) 291-3560
(937) 291-0076 fax

Civic Center Plaza
2256 Waycross Rd.
Forest Park, OH 45240
(513) 522-7575
(513) 522-7580 fax

Shoppes of Kenwood II
7714 B Montgomery Rd.
Cincinnati, OH 45236
(513) 791-7930
(513) 791-7934 fax

5160 Great Northern Plaza
North Olmsted, OH 44070
(440) 734-2755
(440) 734-2799 fax

Cranston Center
5831 Sawmill Rd.
Columbus, OH 43017
(614) 760-9399
(614) 760-9331 fax

104 Boardman-Poland Rd.
Youngstown, OH 44512
(330) 758-1828
(330) 758-1332 fax

3109 West Market Street
Fairlawn, OH 44333
(330) 864-6700
(330) 864-6702 fax

OKLAHOMA
3710 NW 50th St.
Oklahoma City, OK 73112
(405) 947-4436
(405) 947-0886 fax

OREGON
4130 SW Lombard Ave.
Ste 110
Beaverton, OR 97005
(503) 574-2696
(503) 574-2762 fax

PENNSYLVANIA
Great Southern Shpg. Ctr.
1155 Washington Pike
Bridgeville, PA 15017
(412) 221-4568
(412) 221-0145 fax

Lincoln Court Shpg. Ctr.
245 Lancaster Pike
Frazer, PA 19355
(610) 651-0570
(610) 651-0572 fax

TENNESSEE
2200 N. Germantown Pky.
Ste. 7
Cordova, TN 38016
(901) 266-0333
(901) 266-0811 fax

Market Place Shpg. Ctr.
9309A Kingston Pike
Knoxville, TN 37922
(865) 690-0785
(865) 694-9985 fax

The Maples Shpg. Ctr.
1010 Murfreesboro Rd.
Suite 126
Franklin, TN 37064
(615) 599-2949
(615) 599-9663 fax

TEXAS
13536 Preston Rd, Ste 100
Dallas, TX 75240
(972) 503-9494
(972) 503-9496 fax

S. Frisco Village Shpg Ctr
2930 Preston Rd.
Frisco, TX 75034
(469) 633-0555
(469) 633-0745 fax

Westhill Village Shpg. Ctr.
7613 Westheimer
Houston, TX 77063
(713) 334-0199
(713) 334-1341 fax

N. Towne Plaza Shpg. Ctr.
6900 San Pedro, Suite 137
San Antonio, TX 78216
(210) 829-1906
(210) 805-0612 fax

19507 I-45, Suite #900
Cypresswood Ct.
Spring, TX 77388
(281) 288-5803
(281) 288-5876 fax

1823 West Bay Area Blvd.
Webster, TX 77598
(281) 338-2830
(281) 338-2835 fax

1491 Lee Trevino, Ste D
El Paso, TX 79936
(915) 598-8633
(915) 598-8610

UTAH
6935 Park Centre Drive
Salt Lake City, UT 84121
(801) 304-0516
(801) 304-0546 fax

VIRGINIA
Tuckernuck Sq. Shpg. Ctr.
9018 W. Broad Street
Richmond, VA 23294
(804) 747-8249
(804) 747-3395 fax

WASHINGTON
837 NE Northgate Way
Seattle, WA 98125
(206) 367-4425
(206) 367-0632 fax

North 2911 Monroe
Spokane, WA 99205
(509) 328-9514
(509) 328-9562 fax

WEST VIRGINIA
35 Riverwalk Plaza
S. Charleston, WV 25303
(304) 744-4748
(304) 744-4779 fax

WISCONSIN
Stein Mart Plaza
2791 South Oneida St.
Ashwaubenon, WI 54304
(920) 494-9441
(920) 494-5059 fax

Midvale Plaza
505 S. Midvale Blvd.
Madison, WI 53711
(608) 238-3470
(608) 238-0120 fax

10244 W. National Ave.
West Allis, WI 53227
(414) 327-7430
(414) 327-9875 fax

Lakeside Marketplace
11211 120th Ave.
Suite D-067
Pleasant Prairie, WI
53142
(262) 857-3176
(262) 857-6815 fax

CANADA
Hoover Canada
9012 L'Acadie Blvd.
Montreal, Quebec
H4N 2Y8
(514) 384-8030
(514) 384-5940 fax

Hoover Canada
4151 North Service Rd.
Burlington, Ontario
L7R 4A8
(905) 335-3311
(905) 335-3320 fax

1/06

Important Safeguards

When using an electrical appliance, always follow basic precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING APPLIANCE.

WARNING: **To reduce the risk of fire, electric shock, or injury:**

- Do not use outdoors or on wet surfaces.
- Close supervision is necessary when any appliance is used by or near children. Do not allow vacuum cleaner to be used as a toy or to run unattended at any time.
- Keep hair, loose clothing, fingers, feet and all parts of body away from openings, rotating agitators and other moving parts. Do not operate cleaner in bare feet or when wearing open toe shoes or sandals.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids such as gasoline or fine wood sandings or use in areas where they may be present.
- Avoid picking up hard, sharp objects with the cleaner. They may damage the cleaner.
- Always turn off this appliance before connecting or disconnecting hose.
- Unplug cleaner before connecting the powered pet hair cleaning tool.
- Do not use without dirt cup or filters in place. Empty cup frequently when picking up very fine materials such as powder.
- Use extra care when cleaning on stairs.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Always disconnect cord from electrical outlet before servicing the cleaner.
- Turn cleaner off and unplug when not in use.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord. Never handle plug or appliance with wet hands.
- The use of an extension cord is not recommended.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a Hoover Sales and Service Center or Authorized Hoover Warranty Service Dealer.
- Use vacuum cleaner only for its intended use as described in the instructions.
- Use only attachments recommended by Hoover; others may cause hazards.

Save these instructions

c UL us LISTED

© 2006 The Hoover Company
www.hoover.com

Owner's Manual
English ➜ pages 3-20
ESPAÑOL ➜ pág 22-34

Contents

Important safeguards 3
Unpacking 4
Carton contents 4
Cleaner description. 6
Using the cleaner 7
  Transporting. 7
  Embedded DirtFinder™ feature (some models) 8
  Cleaning rugs. 8
  Using tools 9-10
  Powered pet hair cleaning tool. 14-16
  Cleaning stairs 10
Maintenance. 10
  Emptying dirt cup 10-11
  Filters 11
  Replacing headlight 12
  Lubrication 17
  Clearing blockages 16
  Agitator brush roll. 12-13
  Agitator brush roll belt. 13
  Replacing powered pet hair cleaning tool brush roll . 14-15
  Replacing powered pet hair cleaning tool belt. 15
  Thermal protector 15
  Service. 17
Troubleshooting 18
Warranty 19
Parts & accessories mail reorder form 29

Unpacking your cleaner

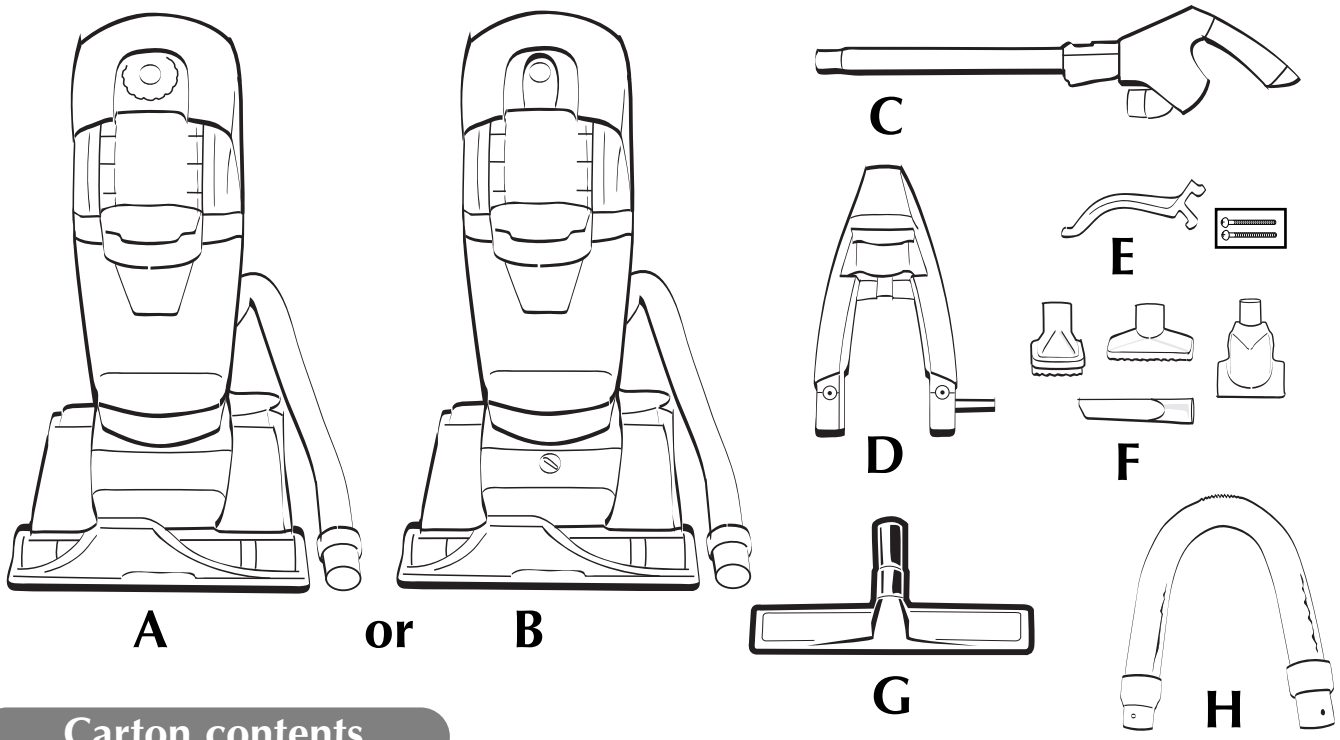

Carton contents

A. or B. Cleaner body and Hose
C. Telescoping handle/wand
D. Tag Along™ grip
E. Hose clip and (2) Tag Along™ handle screws
F. Tools
G. Floor brush*
H. Extra Reach™ hose*

*Available on some models.

Attach Tag Along™ grip

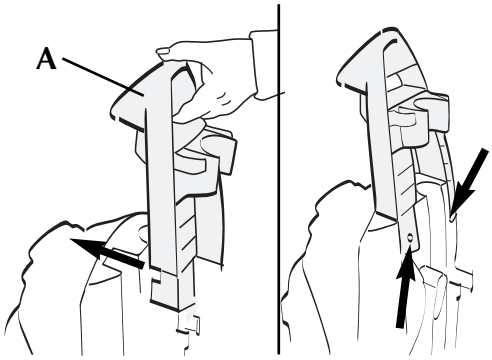

1 Slide the Tag Along™ grip (A) onto the back of the cleaner.

Push screws into holes on back of handle.

Using a Phillips screwdriver, tighten screws securely.

Attach hose clip

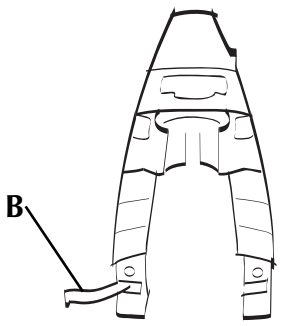

2 With back of upper handle facing you, insert hose clip (B) into slot on left.

Position handle

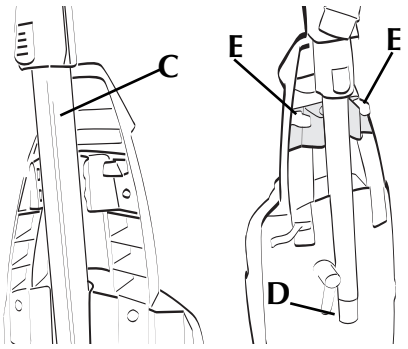

3 The telescoping handle/wand (C) needs to be positioned and secured in place. Align the telescoping handle/wand with the recesses on the upper handle. Push the wand all the way down into the cup (D) until the handle/wand release latches (E) snap into position.

Remove telescoping handle/wand

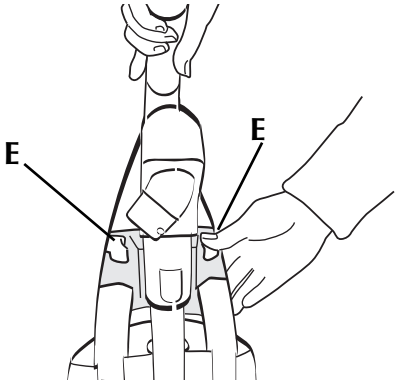

4 To **remove** the telescoping handle/wand for **tool use**, push down either release latch (E) and pull upwards to remove.

Attach hose

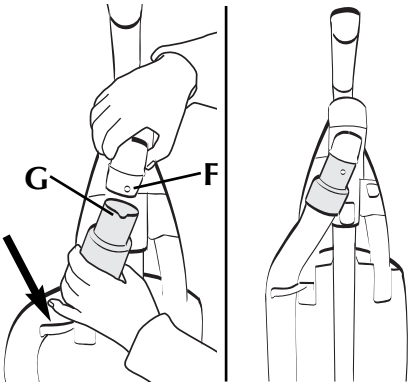

5 Stretch hose and guide into hose clip. Align button on hose end (F) with hole on hose connector (G). Slide hose end over connector until the button "pops up" into place. To remove hose from hose connector, press button and pull hose end to release.
The hose connector swivels 360° for convenience.

Position tools

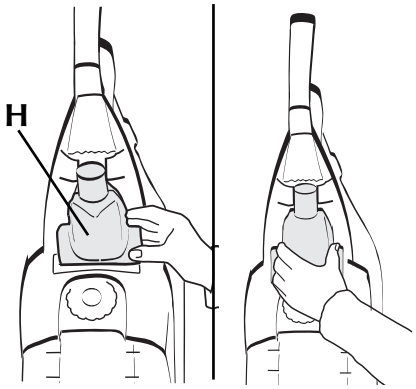

6 The powered pet hair cleaning tool (H) is stored on the front of the cleaner. Place bottom of tool into recessed area first, pivot tool up and snap in place.

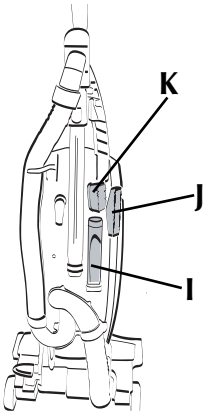

7 Snap crevice tool (I), dusting brush (J) and furniture nozzle (K) into storage areas on back of cleaner.

(Cont'd) →

Cleaner description

Features

8 Use the following to identify the parts and features of your cleaner. **Your model will resemble one of the two illustrations shown below.**

1. Soft grip handle/wand assembly
2. Tag Along™ grip
3. Powered pet hair cleaning tool
4. POWER button
5. Carry handle
6. Lifetime HEPA filter
7. Dirt cup
8. Headlight
9. Edge groomers
10. Furniture guard
11. Embedded DirtFinder™ (some models)
12. Surface Command™ control dial (some models)
13. Surface Selector (some models)
14. Hose connector
15. Hose
16. Telescoping handle/wand
17. Hose clip
18. Dusting brush
19. Furniture nozzle
20. Crevice tool
21. Cord hooks
22. Handle release pedal
23. Soft wheels

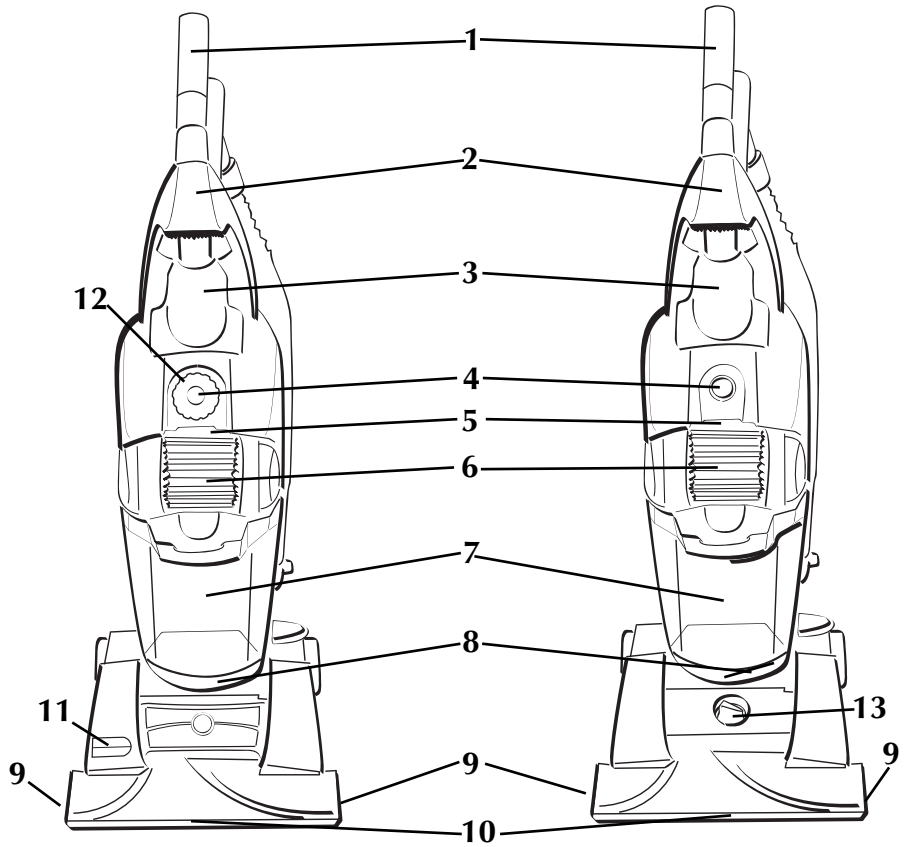

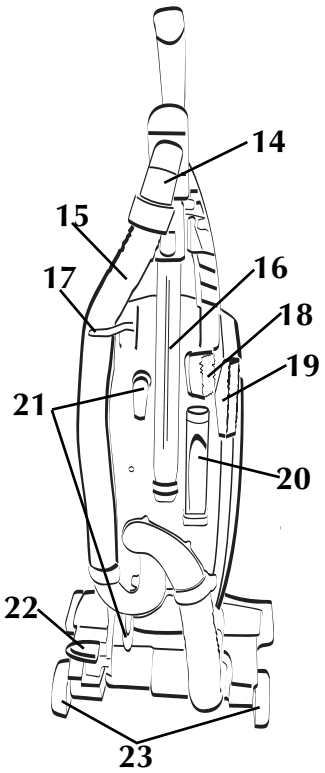

Operate cleaner only at voltage specified on data plate on the back of the cleaner.

This cleaner is intended for household use.

Polarized plug

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Using the cleaner

DO NOT USE CLEANER OUTDOORS OR ON DAMP OR WET SURFACES.

POWER button

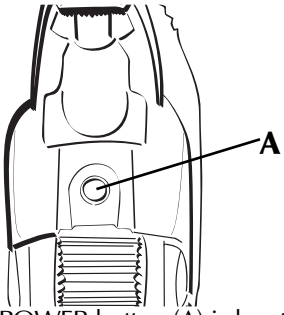

9 The POWER button (A) is located at the top of the cleaner body.

Plug cord into electrical outlet.

To turn cleaner **ON**, press button once.

To turn cleaner **OFF**, press button again.

NOTE: THE CLEANER IS SHIPPED WITH THE CONTROL DIAL IN HARD FLOOR POSITION. *BEFORE YOU BEGIN TO CLEAN CARPETS,* ROTATE THE CONTROL DIAL FROM HARD FLOOR TO A CARPET SETTING.

Surface Command™ control dial (some models)

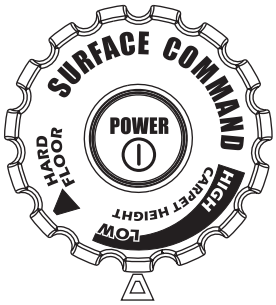

10 The Surface Command™ control dial (some models) is an automatic height adjustment that allows you to choose a cleaning mode for carpet height or hard surface floors.

For maximum cleaning performance, the following carpet height settings are recommended:

Lowest setting: for all types of carpet,

Note: If the cleaner is difficult to push, turn dial to the next higher setting.

Higher settings: for very deep pile carpet where easier pushing effort is desired, while maintaining good cleaning performance.

HARD FLOOR The agitator is **OFF**; the nozzle is set at **LOW**.

Surface Selector (some models)

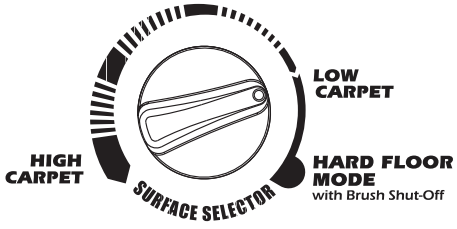

11 The Surface Selector (some models) has three carpet height settings and a hard floor setting. The Surface Selector turns to allow you to choose a cleaning mode for carpet height or hard surface floors.

For maximum cleaning performance, the following carpet height settings are recommended:

Lowest setting: for all types of carpet,

Note: If the cleaner is difficult to push, turn dial to the next higher setting.

Higher settings: for very deep pile carpet where easier pushing effort is desired, while maintaining good cleaning performance.

HARD FLOOR MODE (with agitator brush roll shut off) the nozzle is set at **LOW**.

Automatic agitator brush roll shut-off

12 The agitator brush roll will turn off when the handle is in the upright, storage position.

Agitator brush roll control

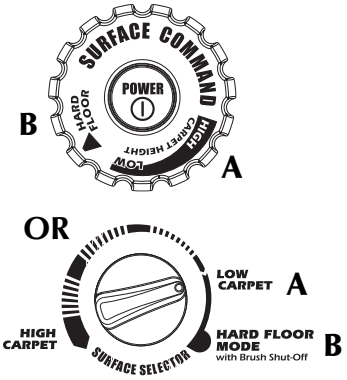

13 Rotate control dial to "Carpet" settings (A) to turn agitator brush roll ON for cleaning carpet or rugs.

Rotate control dial to "Hard Floor" (B) to turn agitator brush roll OFF when cleaning hard floors.

Transporting cleaner

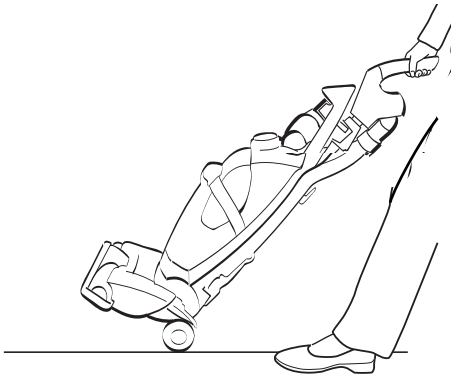

14 To move your cleaner from room to room, put handle in upright position, tilt cleaner back on rear wheels and push forward.

(Cont'd) →

Carrying cleaner

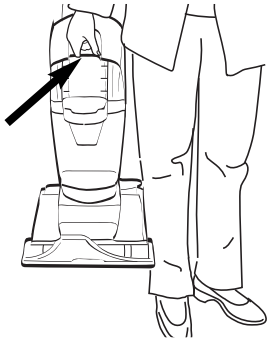

15 The cleaner can be carried by placing hand under the carrying handle and lifting.

Handle positions

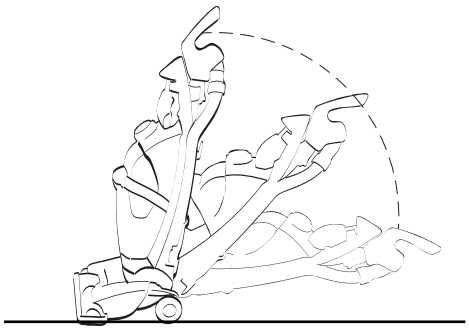

16 The handle of your cleaner has three positions: **upright** for storage and for when using cleaning tools; **operating** position for general operation on carpets and floors; **low** for reaching under low furniture. Step on handle release pedal (E), then pull handle back to lower handle.

Embedded DirtFINDER™ feature (some models)

17 With red and green lights, the DirtFINDER™ system alerts the user to areas of carpet that may need more cleaning attention. It is able to sense when embedded dirt is removed.

The **clean light** (**green) will remain on** throughout cleaning **except** when the detector senses that a **larger amount of dirt** is being picked up; then the **dirty light** (**red)** will come on.

When the **dirty light** is on, you should **take additional cleaning strokes** in the area until it changes to **clean**.

Cleaning lightweight flexible rugs

18 Stand on one end of rug and move cleaner toward other end. Before reaching edge, push down on handle. This will lift up the nozzle and will prevent the rug from clinging to the cleaner. Continue to lift up nozzle so that when you have reached the edge, it is completely off the rug. Move cleaner back to start again, lower nozzle, and use only forward strokes.

Edge cleaning

19 Special edge groomers are provided on both sides of the front of the cleaner to remove dirt in carpet near baseboards and furniture.

Guide either side parallel to the edge of carpet or furniture.

Using the tools

Tools allow for cleaning surfaces above the floor and for reaching hard to clean areas. The cleaner is ready for tool use when the handle is in the upright position.

Note: When handle is in upright position, agitator brush roll is automatically OFF.

Select proper tool

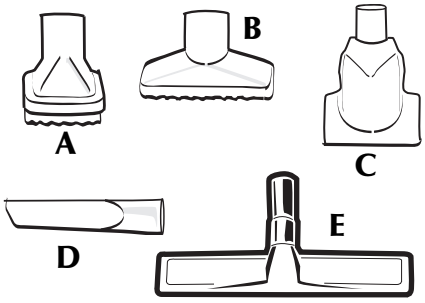

20 Select the proper tool for the cleaning task.

A. Dusting brush use for carved furniture, table tops, books, lamps, lighting fixtures, venetian blinds, baseboards, shutters, and registers.

B. Furniture nozzle use for upholstered furniture, draperies, mattresses, clothing, automobile interiors, and carpeted stairs.

C. Powered pet hair cleaning tool use for upholstered furniture, carpeted stairs and hard to reach places.

D. Crevice tool use in tight spaces, corners and along edges in such places as dresser drawers, upholstered furniture, stairs, and baseboards.

E. Soft Touch™ floor brush (some models) use on hard surface floors.

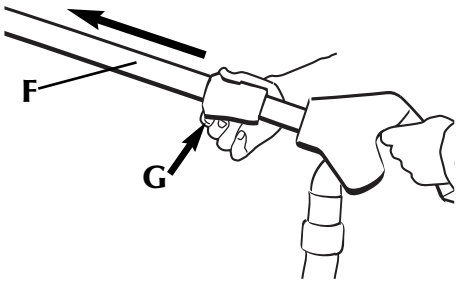

21 **F. Telescoping handle/wand** can be extended by depressing the button (G) and pulling wand outward. Release button to lock into position. Shorten the telescoping handle/wand by depressing the button and pulling wand back.

Attach tools

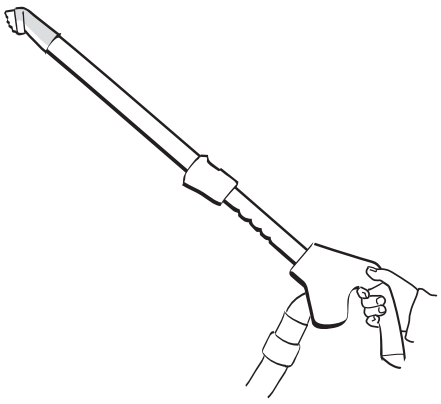

22 All tools attach in the same manner.

Tools may be attached to the telescoping handle/wand **or** directly to the hose (see Fig. 23).

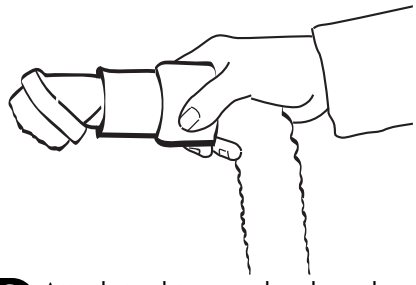

23 Attach tool to wand or hose by pushing it firmly onto the end of the wand or hose. Twist tool slightly to tighten or loosen the connection.

For optimum performance of the **powered pet hair cleaning tool**, attach it directly to the hose.

The hose can be removed from the handle grip by depressing the button and pulling away from the wand. (Fig. 5)

TagAlong™ grip

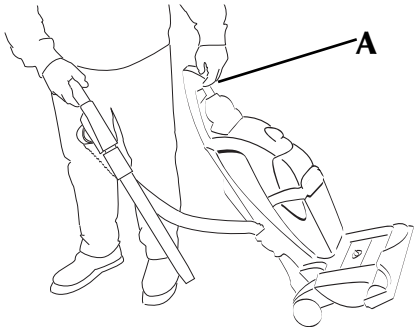

24 When using cleaning tools, the cleaner can go with you. Place hand under the Tag Along™ grip (A), tilt cleaner back on rear wheels and pull.

(Cont'd) →

How to clean tools

To clean the hose and the powered hand tool, wipe off dirt with a cloth dampened in a mild detergent. Rinse with a damp cloth. Do not submerge powered pet hair cleaning tool in water.

Cleaning tools may be washed in warm water with a detergent. Rinse and air dry before using.

Extra Reach™ hose (some models)

Some models include an Extra Reach™ hose to provide you with a 20 foot reach (when connected to the regular hose), to allow easier cleaning of stairs and hard to reach high places.

Press POWER button to turn cleaner **OFF**. Remove regular hose from handle/wand. (Fig. 5)

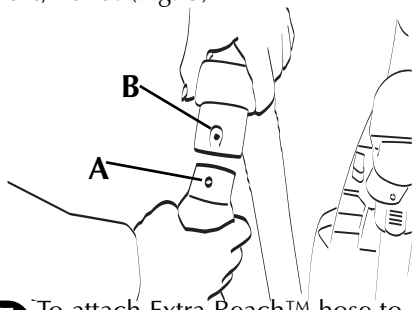

25 To attach Extra Reach™ hose to regular hose, align button (A) on Extra Reach™ hose end with hole (B) on regular hose end. The button will "pop up" when the hose ends are secured in place.

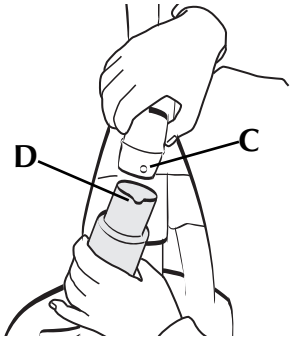

26 Next, attach opposite end of extra reach hose to hose connector on handle/wand. Align the button (C) on hose connector with hole (D) on end of Extra Reach™ hose. Slide the Extra Reach™ hose end onto the hose connector until the button "pops up" in place.

To remove hose from hose connector, press button on hose connector and pull hose end to release.
The hose connector swivels 360° for convenience.

Soft Touch™ floor brush (some models)

27 Hard surface flooring may be cleaned using the Soft Touch™ floor brush. Attach the floor brush to the end of the telescoping handle/wand. Extend the telescoping wand to reach the floor.

Stair cleaning

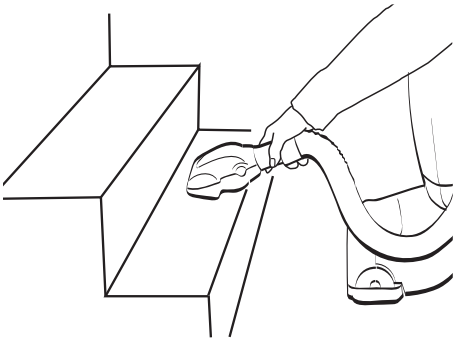

28 Use the hose and the powered pet hair cleaning tool for stair cleaning.

Always place the cleaner at the bottom of the stairs. Clean from bottom to top.

CAUTION: To avoid personal injury, and to prevent the cleaner from falling, use extra care if the cleaner is placed on stairs.

NOTE: Maximum performance of the powered hand tool will be achieved if the powered pet hair cleaning tool is used on the end of the hose without the telescoping wand.

Maintenance

Familiarize yourself with these home maintenance tasks as proper use and care of your cleaner will ensure continued cleaning effectiveness.

Dirt cup

When to empty

It is recommended that the dirt cup be emptied after every use or before the dirt reaches the top of the dirt cup.

How to empty

Disconnect cleaner from electrical outlet. Do not use cleaner without dirt cup or filters in place.

Place the cleaner in the upright position before removing dirt cup.

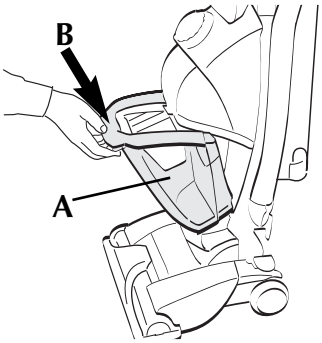

29 **To remove cup (A),** press latch (B) to release. Pivot cup outward.

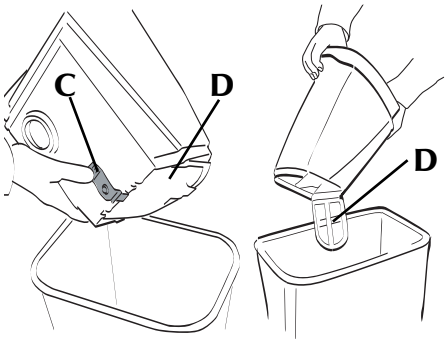

30 Depress button (C) on back of dirt cup to release door (D). Empty dirt cup into trash receptacle. Close door firmly to latch.

The dirt cup may also be emptied by lifting off the lid and emptying into a trash receptacle. Replace lid before returning dirt cup to position.

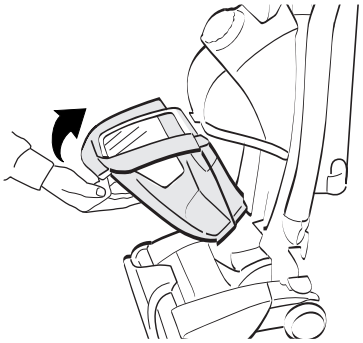

31 To replace dirt cup, place bottom of dirt cup in first. Pivot cup into cleaner body.

Cleaning the filters

HEPA filter

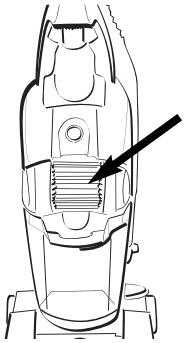

32 Your cleaner is equipped with a self-cleaning HEPA filter. **This filter is NOT removable.**

If you notice that the filter is rotating slower than normal or not rotating, refer to the Troubleshooting section. If you feel that this filter needs replacement, take your cleaner to an Authorized Hoover Sales and Service Center.

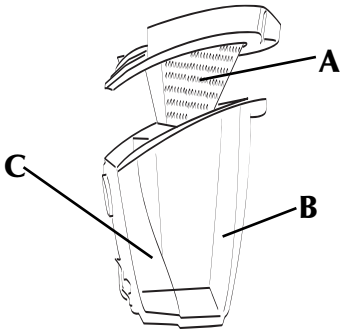

33 While the cleaner is in operation, the pre-filter screen (A) will stop larger debris from entering the HEPA filter chamber. This larger debris will be seen collecting in the larger chamber of the dirt cup (B). The HEPA filter will collect fine particles that have passed through the pre-filter screen. The HEPA filter cleans itself while rotating, depositing fine debris in the smaller chamber of the dirt cup (C).

The cleaner will continue to perform at maximum cleaning levels if the pre-filter screen is cleaned each time the dirt cup is emptied (see Fig. 34).

Pre-filter screen

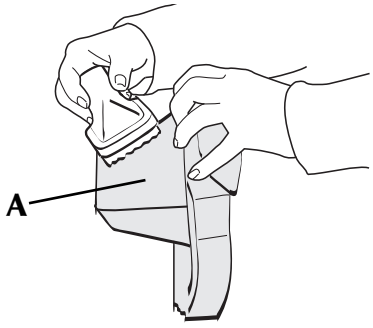

34 **Disconnect cleaner from electrical outlet. Do not use cleaner without dirt cup or filters in place.**

The pre-filter screen (A), located inside the dirt cup lid, is removable and can be cleaned using the cleaner's dusting brush or washed in cold water and a mild detergent. Rinse and let filter air dry completely before repositioning.

To remove this filter, remove the dirt cup and the dirt cup lid. Brush or wash, air dry and replace the dirt cup lid.

(Cont'd) →

Final filter

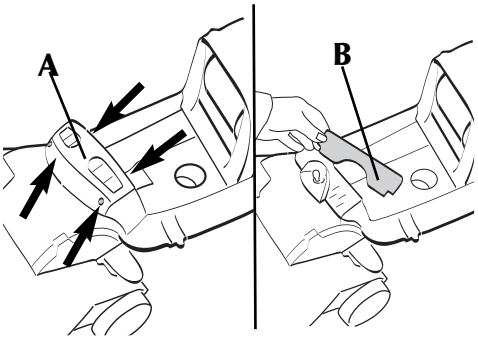

35 **Disconnect cleaner from electrical outlet. Do not use cleaner without dirt cup or filters in place.**

The final filter assists in returning clean air to the room.

Remove dirt cup (Fig. 29).

Press on handle release pedal and lower the nozzle so it is flat. Using a Phillips screwdriver, remove the four screws as shown and lift off headlight lens (A). Lift out filter (B) and replace.

Replace lens and screws.

Should you want to replace this filter, ask for **HOOVER part no. 38769032**.

Headlight

Headlight replacement

What to buy

This cleaner uses a T3 1/4 wedge base bulb, **HOOVER part no. 27313107**.

Remove lens

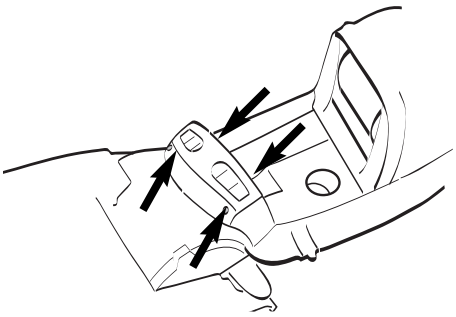

Disconnect cleaner from electrical outlet.

36 Press on handle release pedal and lower the nozzle so it is flat.

Using a Phillips screwdriver, remove the four screws as shown and lift off lens.

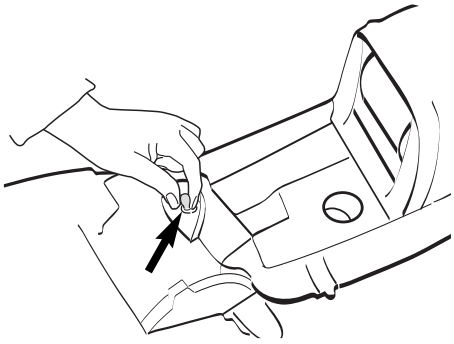

37 Pull old bulb straight out of socket. Push new bulb straight into socket until locked in place. **Do not twist bulb.**

Excessive force is not required.

Replace lens

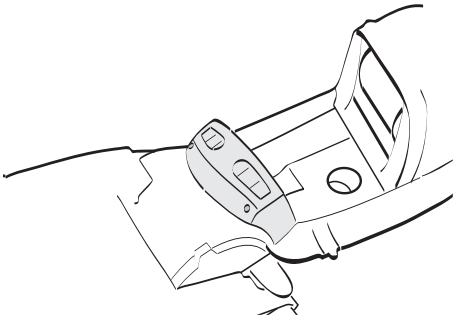

38 Reposition lens and secure with the four screws.

Agitator brush roll

Check agitator brush roll

When agitator brush roll brushes are worn, the agitator brush roll should be replaced.

To check condition of brushes, **turn cleaner OFF and disconnect from electrical outlet.**

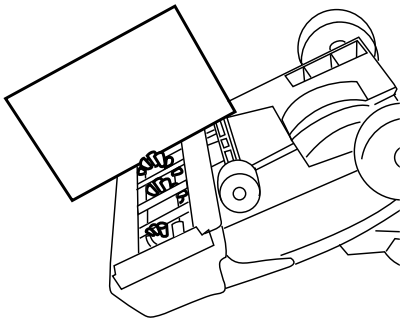

39 Move edge of a card across bottom plate while turning agitator brush roll. To maintain cleaning effectiveness, replace agitator brush roll if brushes do not touch card.

What to buy

When purchasing a new agitator brush roll, ask for **HOOVER part no. 48414140**.

How to replace

Turn cleaner ON and rotate mode control dial to HARD FLOOR. Turn cleaner OFF and disconnect from electrical outlet. Place handle in upright position and turn cleaner over so bottom side is up.

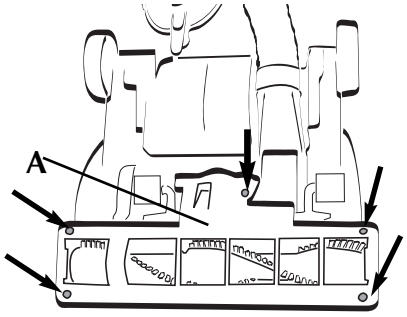

40 Remove the five screws as shown with a Phillips screwdriver. Lift off bottom plate (A).

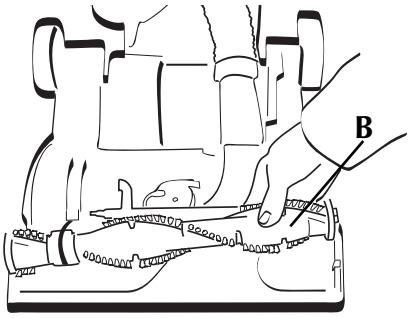

41 Pull up on agitator brush roll (B) to remove from brush roll cavity.

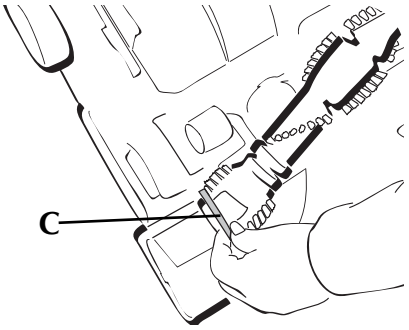

42 Holding agitator brush roll with one hand, slide belt (C) off the agitator.

NOTE: Hold on to the belt with one hand. Do not allow the belt to fall back into the cavity on bottom of cleaner.

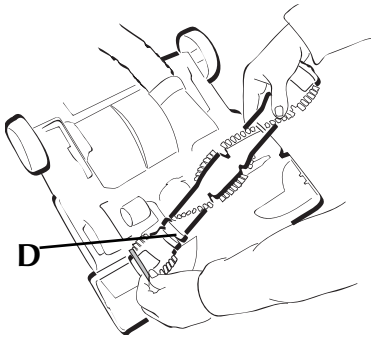

43 Hold new agitator brush roll in one hand; the belt in the other. Slide the belt onto the agitator brush roll, positioning the belt in the belt guide (D) on the agitator brush roll.

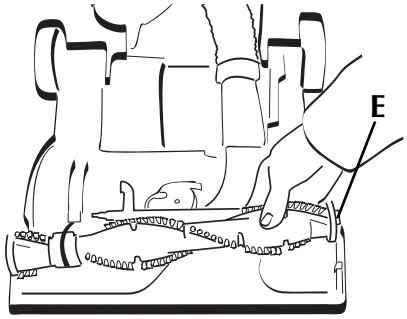

44 Grasp agitator brush roll firmly and fit it into position by first sliding end opposite the belt into the rectangular slot (E) on side of the cleaner.

Pull other side of agitator brush roll into place.

Turn agitator brush roll making sure belt is not pinched between agitator brush roll and agitator brush roll shield.

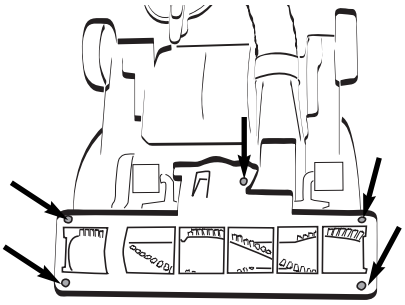

45 Reposition bottom plate and five screws. Tighten screws securely.

Agitator brush roll belt

The agitator brush roll belt is designed to last the lifetime of the cleaner. It typically should not need replacement. **If you feel the agitator brush roll belt needs to be checked or replaced, take your cleaner to an Authorized Hoover Sales and Service Center. Do not attempt to remove the agitator brush roll belt.**

(Cont'd) →

Powered pet hair cleaning tool

Agitator brush roll

When agitator brush roll brushes on the powered pet hair cleaning tool are worn, the agitator brush roll should be replaced. Ask for **HOOVER part No. 48414088.**

How to replace

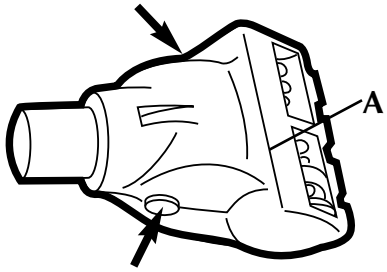

46 1. Remove tool from hose and turn it so bottom faces up. Press the latches on either side of tool and remove bottom plate (A).

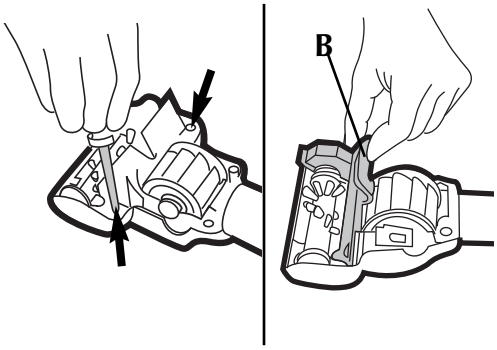

47 2. Unscrew the two Phillips screws and remove belt guard (B).

48 3. Remove agitator brush roll including end plates (C) and discard.

4. Inspect belt to ensure that it is in good condition. If belt is cracked, gouged or broken, replace it (see following section).

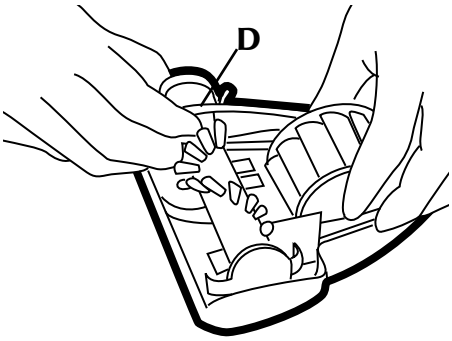

49 5. Insert agitator brush roll through belt and position belt over gear teeth (D) on agitator brush roll.

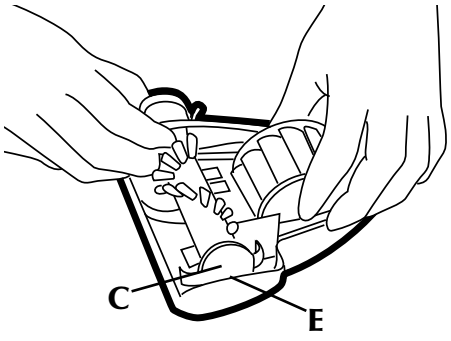

50 6. With curved ends down, slide end plates (C) of agitator brush roll into slots (E) on tool.

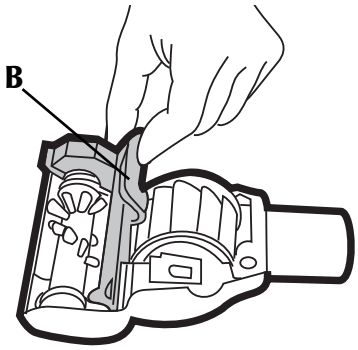

51 7. Replace belt guard (B) making sure not to pinch brush bristles in guard. Turn agitator brush roll, to make sure it rotates freely.

Replace and tighten screws.

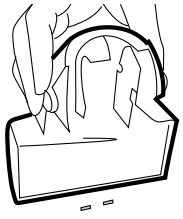

52 8. To replace bottom plate (A), insert the four tabs on edge of bottom plate into slots on front of tool.

Pivot bottom plate down and snap closed.

Belt replacement

Inspect the belt

The powered pet hair cleaning tool belt is designed to last a long time and is not normally replaced. However, if the belt is cracked, gouged or broken, it should be replaced.

Replace belt

When replacing belt, ask for **HOOVER part No. 38528037.**

1. Remove bottom plate, belt guard and agitator brush roll as described in Figs. 46 through 48.

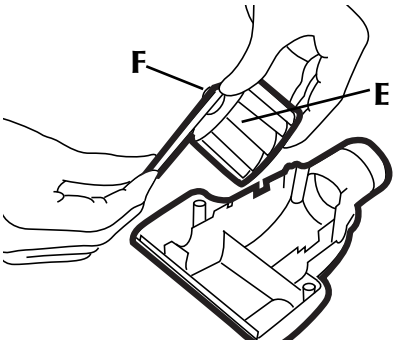

2. Grasp turbine (E) and pull firmly to remove.

3. Remove belt from turbine pulley (F). Replace with new belt.

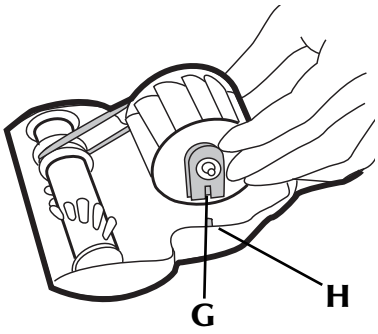

Thermal protector

An internal thermal protector has been designed into your cleaner to protect it from overheating.

When the thermal protector activates, the cleaner will stop running. If this happens, proceed as follows:

1. **Turn the cleaner OFF and disconnect it from the electrical outlet.**

2. Check secondary and final filters for dirt accumulation.

3. Refer to "Clearing blockages" section.

4. **When cleaner is unplugged and the motor cools for 30 minutes**, the thermal protector automatically resets and cleaning may continue.

If the thermal protector continues to activate after following the above steps, your cleaner may need servicing (see "Service" section.

Agitator brush roll stall protection

If the agitator brush roll stalls due to a debris such as hair, strings, etc., the cleaner will automatically stop running.

Disconnect cleaner from the electrical outlet.

Turn the cleaner over and remove any debris that may have accumulated on the agitator brush roll. Plug the cleaner back in and press the ON/OFF button once to turn cleaner on.

(Cont'd) →

HOOVER and are registered trademarks

HOOVER y son marcas registradas

R2 6-06 U8341-/8347-/8351-/8361-/8371-900 Printed in Mexico/Impreso en Mexico 56511-C48