OWNER'S MANUAL

Operating and Servicing Instructions

Español - página E1

hoover.com

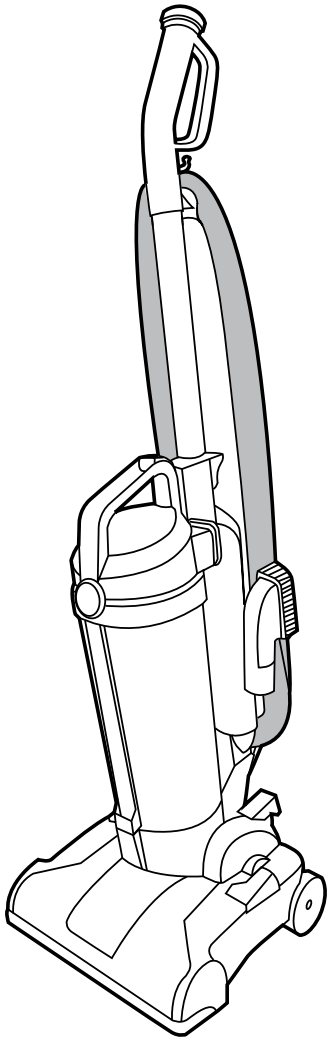

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE.

Questions or concerns? For assistance, please call Customer Service at 1-800-944-9200
Mon-Fri 8am-7pm EST. **PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.**

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.
IF USED COMMERCIALLY WARRANTY IS VOID.

©2011 Techtronic Floor Care Technology Limited. All rights reserved. #960009657 ID101237-R1

Thank you for choosing a HOOVER® product.

Please enter the complete model and Manufacturing Code in the spaces provided.

MODEL _____

MFG. CODE _____

Hint: Attach your sales receipt to this owner's manual. Verification of date of purchase may be required for warranty service of your HOOVER® product.

Be sure to register your product online at Hoover.com or call 1-800-944-9200 to register by phone.

MANUFACTURING CODE

(Label located on bottom of cleaner)

CONTENTS

Important Safeguards **3**

Cleaner Asembly **5**

Carton Contents 5

How To Use **6**

Cleaner Descriptions 6

Cord Release 6

On/Off Pedal 6

Handle Release 7

Floor/Carpet Cleaning 7

Suction Only Mode 7

Carry Handle 7

Cleaning Tools 8

Maintenance **9**

Dirt Cup 9

Filters 10

Umbrella Tube 10

Belt And Brushroll 11

Troubleshooting **12**

Service **13**

Warranty **14**

If you need assistance:

Visit our website at hoover.com. Follow the authorized dealer locator link to find the Hoover® authorized dealer nearest you or call 1-800-944-9200 for an automated referral of Hoover® authorized dealer locations (U.S. only) or to speak with a customer service representative; Mon- Fri 8am- 7pm EST.

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

IMPORTANT SAFETY INSTRUCTIONS
SAVE THESE INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Fully assemble before operating.
- Operate vacuum only at voltage specified on data label on bottom of cleaner.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments and products.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters and/or dirt cup in place.
- **WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. ***WASH HANDS AFTER HANDLING.***

CAUTION:
TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store appropriately indoors and in a dry place. Do not expose machine to freezing temperatures.
- Do not use sharp objects to clean out hose as they can cause damage.
- With brushroll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.

WARNING:

- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

1. CLEANER ASSEMBLY

CARTON CONTENTS

1.1 Remove all parts from carton and identify each item shown. Make sure all parts are located before disposing of packing.

A. Handle/Wand
B. Crevice Tool (Attached to wand)
C. Cleaner Body
D. Dirt Cup
E. Dusting Brush

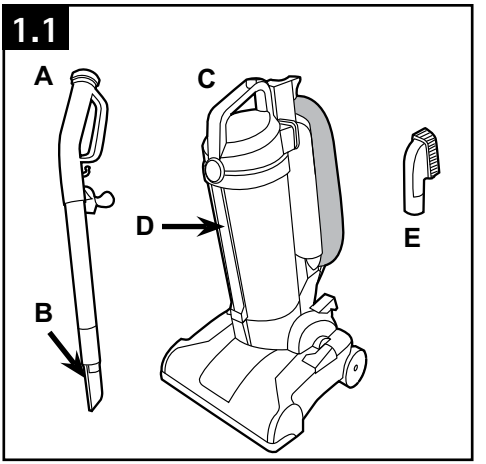

ATTACH HANDLE

1.2 Insert handle into body of cleaner. Push down until handle locks into place.

1.3 Position hose over hose holder (A) and into hose tube (B).

1.4 To remove handle, remove hose and Press handle release button (C) to remove.

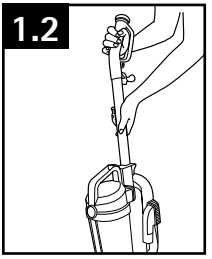

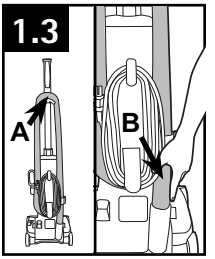

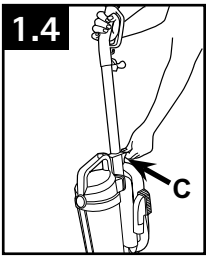

• IMPORTANT •

Hose must be connected as shown for all operations.

ATTACH DIRT CUP

1.5 Place bottom of dirt cup into vacuum body first.

Pivot cup into vacuum. Dirt cup is secure when you hear a click.

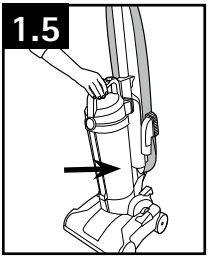

STORE TOOLS

1.6 Snap dusting brush (D) into storage area on side of cleaner.

1.7 Crevice tool is permanently attached to end of handle/wand and inserted into cleaner body for storage.

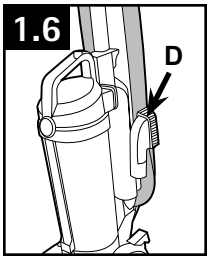

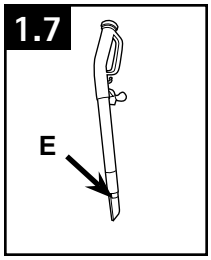

2. HOW TO USE

CLEANER DESCRIPTION

1. Handle Grip
2. Stretch Hose
3. Dusting Brush
4. Dirt Cup Release Button
5. Umbrella Tube (inside Dirt Cup)
6. Dirt Cup
7. Filters
8. Nozzle
9. Bumper
10. Performance Indicator
11. Crevice Tool (Attached to handle and stored in cleaner)
12. Hose Holder
13. Quick Release Cord Hook
14. Power Cord
15. Wheels
16. On/Off Pedal
17. Suction Control Pedal

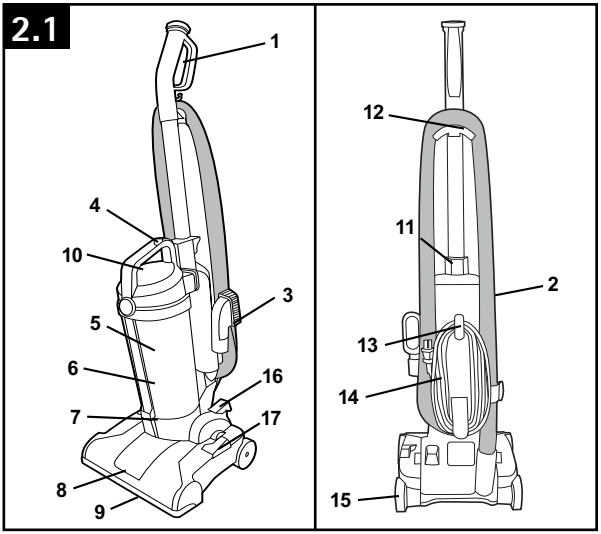

*Accessories not included with your model may be purchased separately by visiting www.hoover.com, or your local HOOVER® service center.

CORD RELEASE/ STORAGE

2.2 Turn the Quick Cord Release for easy cord removal. Store cord in cord guide to keep out of the way while vacuuming.

Wrap cord around cord hooks for convienient storage. Attach the plug end to the cord.

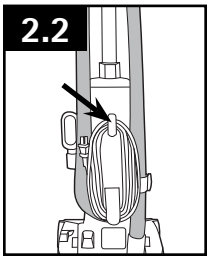

ON/OFF PEDAL

2.3 Plug cord into electrical outlet. Turn cleaner on by depressing foot pedal located on the back left side of the cleaner.

Turn cleaner off by depressing foot pedal again.

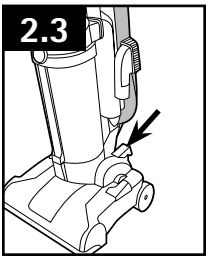

HANDLE RELEASE

2.4 Pull back handle to tilt back. Press on the front of nozzle if needed.

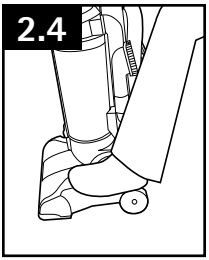

FLOOR/CARPET CLEANING

2.5 Move the handle and adjust it to the desired position for operating the cleaner, and lowering handle to clean under furniture.

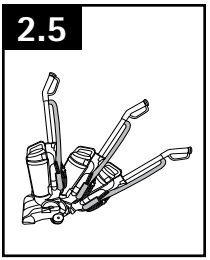

SUCTION ONLY MODE

2.6 For optimal cleaning performance on bare floors, brushroll should be turned off.

The vacuum is shipped with the brushroll in the ON position. To turn brushroll OFF for Suction Only Mode, step on pedal (A).

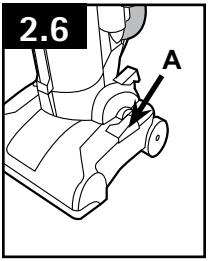

CARRY HANDLE

2.7 Use the carry handle to move the cleaner from room to room.

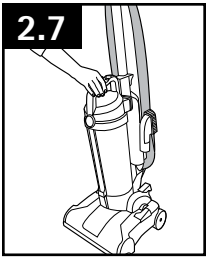

⚠ CAUTION ⚠

Not to be used for grooming a pet

• IMPORTANT •

Pedal (A) is inactive when the cleaner is in upright position.

CLEANING TOOLS

2.8 When using cleaning tools, cleaner handle should be in the upright position to activate the automatic “brushroll OFF” and for convenience in moving the cleaner from one area to another.

Turn cleaner OFF before disconnecting and connecting hose to hose tube (A).

To use hose, lift hose end as shown.

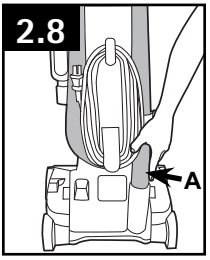

SELECT PROPER TOOL

(Tools may vary per model)

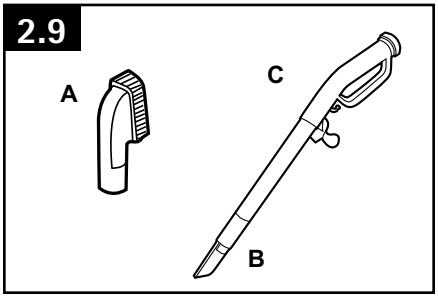

A. Dusting brush may be used for carved furniture, table tops, books, lamps, lighting fixtures, venetian blinds, baseboards, shutters, and registers.

B. Crevice tool (located on bottom of handle/wand) may be used in tight spaces, corners and along edges in such places as dresser drawers, upholstered furniture, stairs and baseboards.

C. Handle/Wand is used to give extra length to your hose. Can also be used with dusting brush.

ATTACH WAND AND TOOLS

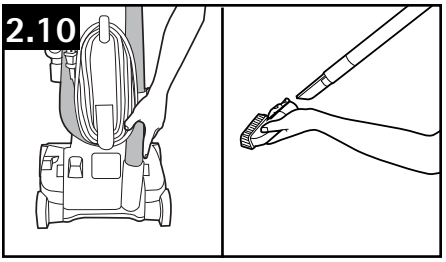

2.10 Remove the hose from hose caddy.

Connect tools to end of hose or use hose alone.

To use handle wand, first remove hose from hose holder then remove handle from cleaner body by pressing the handle release button (see Fig. 1.4). Attach hose to top of handle.

Use crevice tool attached or place Upholstery tool over crevice tool to clean.

STAIR CLEANING

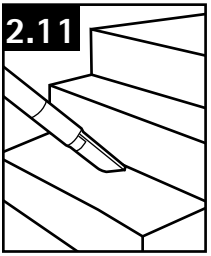

2.11 Use the hose or crevice tool for stair cleaning.

With handle in upright position, clean from bottom to top.

⚠ CAUTION ⚠

Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs or on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage. When using tools, always ensure handle is in upright position.

3. MAINTENANCE

Familiarize yourself with these home maintenance tasks as proper use and care of your cleaner will ensure continued cleaning effectiveness.

The System Check Indicator located at (A), alerts you to possible system performance issues. Please refer to the Troubleshooting section on page 12 for possible causes and solutions.

Any other servicing should be done by an authorized service representative.

3.1

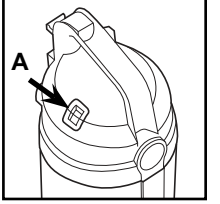

⚠ NOTICE ⚠

A thermal protector has been designed into your cleaner to protect it from overheating. When the thermal protector activates the cleaner witll stop running.
If this happens proceed as follows:

1. Turn cleaner OFF and unplug it from the electrical outlet.
2. Empty dirt cup.
3. Inspect the nozzle/brushroll, filters, umbrella tube and hose for any obstructions. Clear obstructions if present.
4. When cleaner is unplugged and motor cools for 30 minutes, the thermal protector will deactivate and cleaning may continue.

If the thermal protector continues to activate after following the above steps, your cleaner needs servicing.

DIRT CUP

⚠ WARNING ⚠

To reduce the risk of personal injury - Unplug before cleaning or servicing.

Do not operate cleaner without either the dirt cup or filters in place.

Very fine materials, such as face powder or cornstarch, may seal the filter and cause a reduction in performance. When using the vacuum for this type of dust, empty the cup and clean the filters often.

How to Empty

3.2 Push dirt cup release button on top of dirt cup to remove dirt cup.

3.3 Hold dirt cup over garbage can and press clean release dirt cup button to empty. Make sure cup bottom center opening is clear of debris. Snap dirt cup bottom back into place after emptying.

3.2

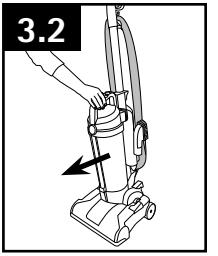

3.3

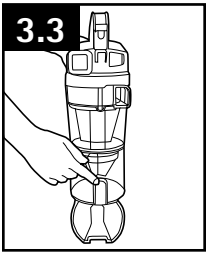

FILTERS

Primary HEPA and Foam Filter: How to Clean

⚠ WARNING ⚠

To reduce the risk of personal injury - Unplug before cleaning or servicing.

Do not operate cleaner without either the dirt cup or filters in place.

Remove dirt cup as described in Figure 3.2.

3.4 Twist dirt cup lid counter clockwise and lift up to remove.

3.5 Remove filter cartridge from dirt cup.

3.6 Separate foam filter from filter cartridge (A). Hold foam filter under running water to wash. Wring excess water out of filter (B). ***Allow filter to dry for at least 24 hours before replacing in filter cartridge.***

3.7 Hold filter cartridge over trash can and tap off dirt and debris. Hepa filter can also be cleaned by running under water to wash (Fig. 3.6, B).

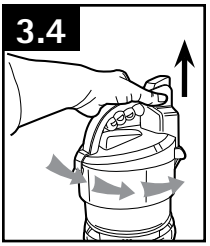

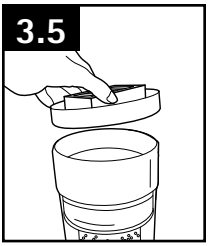

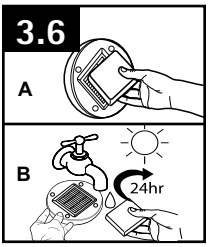

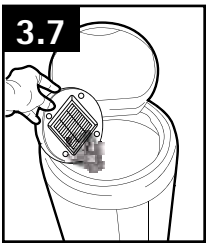

Secondary Foam Filter: How to Clean

⚠ WARNING ⚠

To reduce the risk of personal injury - Unplug before cleaning or servicing.

Do not operate cleaner without either the dirt cup or filters in place.

3.8 Click the button on the base of the cleaner toward the outside edges to unlock the filter cartridge.

3.9 Remove the foam filter.

3.10 Hold foam filter under running water to wash. Wring excess water out of filter. ***Allow filter to dry for at least 24 hours before replacing.***

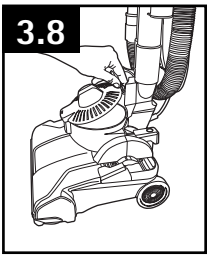

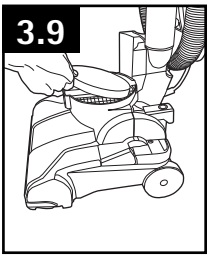

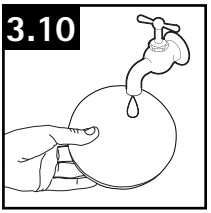

Umbrella Tube: How to clean

Remove dirt cup as described in Fig. 3.2.

3.11 Hold dirt cup by carry handle and press release button (A) to empty dirt cup.

3.12 Twist umbrella tube counter clockwise and pull out of dirt cup. Hold over trash can and shake free of dirt and debris.

To replace umbrella tube, insert back into dirt cup, align slots and twist clockwise until tube locks in place.

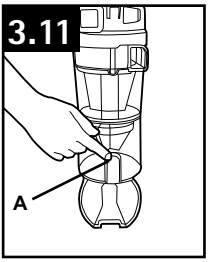

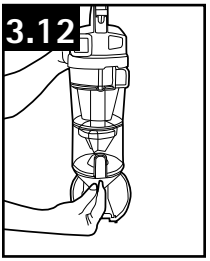

⚠ WARNING ⚠ To reduce the risk of personal injury - Unplug before cleaning or servicing. Do not operate cleaner without either the dirt cup or filters in place.

BELT AND BRUSHROLL
How to Replace

⚠ CAUTION ⚠

To reduce the risk of injury from moving parts - Unplug vacuum before servicing.

3.13 Lay the cleaner flat and flip it to expose the nozzle base. The base should lay flat and face up. Remove the five (5) screws.

3.14 Pull and lift the nozzle guard off.

3.15 Lift and remove the brushroll. Dispose of the old belt.

3.16 Slide belt onto motorshaft.

3.17 Place new belt in area of brushroll without bristles.

3.18 With new belt in place, pull and slide brushroll into nozzle making sure that the brushroll end caps are in the correct orientation. Rotate brushroll manually to make sure belt is properly aligned.

3.19 Reattach nozzle guard.

3.20 Secure by aligning the three tabs in the base slots.

3.21 Replace all five screws to secure nozzle guard.

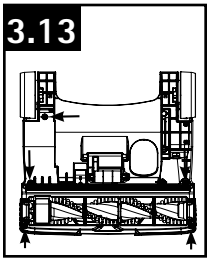

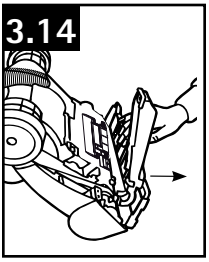

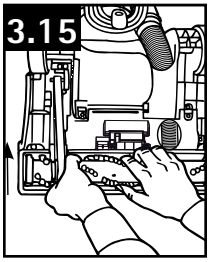

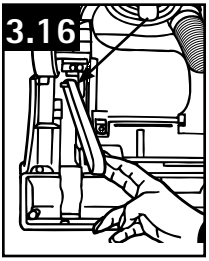

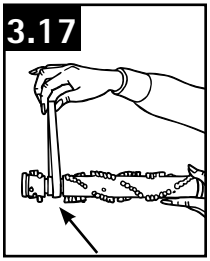

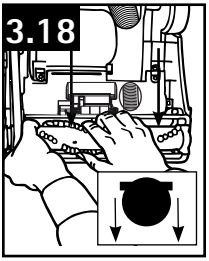

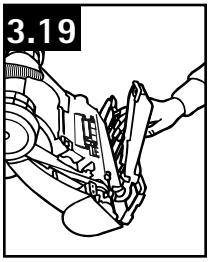

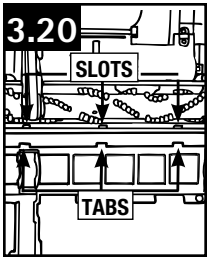

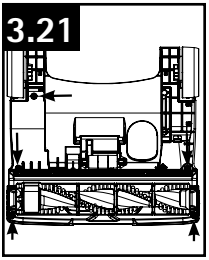

LUBRICATION

The motor and brushroll are equipped with bearings that contain sufficient lubrication for their lifetime.

The addition of lubricant could cause damage. Therefore, do not add lubricant to motor bearings and brushroll.

4. TROUBLESHOOTING

If a minor problem occurs, it usually can be solved quite easily when the cause is found by using the checklist below.

Any other servicing should be done by an authorized service representative.

⚠ WARNING ⚠

To reduce the risk of personal injury – Unplug before cleaning or servicing.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Cleaner won't run	Power cord not firmly plugged into outlet.	Plug unit in firmly.
	Blown fuse or tripped breaker.	Check fuse or breaker in home. Replace fuse/ reset breaker in home.
	Needs service.	Take to service center. To find nearest location, visit our website at www.hoover.com or call 1-800-944-9200.
	Thermal protector activated.	Allow cleaner to cool for 30 minutes (this will reset the thermal protector).
The Performance Indicator is red or the cleaner won't pick up or low suction	Dirt cup not installed correctly.	Review dirt cup removal & replacement.
	Dirt cup full.	Empty dirt cup.
	Brushroll worn.	Replace brushroll.
	Broken or worn belt.	Replace belt.
	Clogged filter.	Remove filter and clean
	Nozzle/brushroll clogged.	Check nozzle/brushroll; remove obstruction/clog.
	Hose clogged.	Remove hose; remove clog.
Dust escaping from cleaner	Dirt cup full.	Empty dirt cup.
	Dirt cup not installed correctly.	Review dirt cup removal & replacement.
	Hose not installed correctly.	Review hose installation.
	Filter not installed completely.	Review filter removal and replacement.

5. SERVICE

To obtain approved Hoover® service and genuine Hoover® parts, locate the nearest Authorized Hoover® Warranty Service Dealer (Depot) by:

- Checking the Yellow Pages under “Vacuum Cleaners” or “Household”.
- Visit our website at hoover.com (U.S. Customers) or hoover.ca (Canadian customers). Follow the service center link to find the service outlet nearest you.
- For an automated referral of authorized service outlet locations call 1-800-944-9200.

Do not send your vacuum to Hoover®, Inc., Company in Glenwillow for service. This will only result in delay.

If you need further assistance:
To speak with a customer service representative call 1-800-944-9200; Mon-Fri 8am-7pm EST. In Canada, contact Hoover® Canada, Toronto: 755 Progress Ave., Scarborough, ON M1H 2W7 OR Hoover® Canada, Edmonton: 18129-111 Ave., Edmonton, AB T5W 2P2, Phone: 1-800-944-9200, Mon-Fri 8am-7pm EST. Always identify your vacuum by the complete model number when requesting information or ordering parts. (The model number appears on the bottom of the vacuum.)

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

6. WARRANTY

LIMITED ONE YEAR WARRANTY

(Domestic Use)

WHAT THIS WARRANTY COVERS

When used and maintained in normal household use and in accordance with the Owner's Manual, your HOOVER® product is warranted against original defects in material and workmanship for a full one year from date of purchase (the "Warranty Period"). During the Warranty Period, Hoover® will provide labor and parts, at no cost to you, to correct any such defect in products purchased in the United States, U.S. Military Exchanges and Canada.

HOW TO MAKE A WARRANTY CLAIM

If this product is not as warranted, take or send the product to either a Hoover® Sales and Service Center or Hoover® Authorized Warranty Service Dealer along with proof of purchase. For an automated referral to authorized service outlets in the U.S.A., phone: 1-800-944-9200 OR visit Hoover® online at www.hoover.com. For additional assistance or information concerning this Warranty or the availability of warranty service outlets, phone the Hoover® Consumer Response Center, Phone 1-800-944-9200, Mon-Fri 8am-7pm EST. In Canada, contact Hoover® Canada, Carson Building, 100 Carson St., Etobicoke, Ontario M8W 3R9, Phone: 1-800-944-9200, Mon-Fri 8am-7pm EST.

WHAT THIS WARRANTY DOES NOT COVER

This Warranty does not cover: use of the product in a commercial operation (such as maid, janitorial and equipment rental services), improper maintenance of the product, damage due to misuse, acts of God, nature, vandalism or other acts beyond the control of Hoover®, owner's acts or omissions, use outside the country in which the product was initially purchased and resales of the product by the original owner. This warranty does not cover pick up, delivery, transportation or house calls. However, if you mail your product to a Hoover® Sales and Service Center for warranty service, cost of shipping will be paid one way.

This warranty does not apply to products purchased outside the United States, including its territories and possessions, outside a U.S. Military Exchange and outside of Canada. This warranty does not cover products purchased from a party that is not an authorized retailer, dealer, or distributor of Hoover® products.

OTHER IMPORTANT TERMS

This Warranty is not transferable and may not be assigned. This Warranty shall be governed and construed under the laws of the state of Ohio. The Warranty Period will not be extended by any replacement or repair performed under this Warranty.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY AND REMEDY PROVIDED BY HOOVER®. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE, ARE DISCLAIMED. IN NO EVENT WILL HOOVER® BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND OR NATURE TO OWNER OR ANY PARTY CLAIMING THROUGH OWNER, WHETHER BASED IN CONTRACT, NEGLIGENCE, TORT OR STRICT PRODUCTS LIABILITY OR ARISING FROM ANY CAUSE WHATSOEVER. Some states do not allow the exclusion of consequential damages, so the above exclusion may not apply to you. This warranty gives you specific rights; you may also have others that vary from state to state.

MANUAL DEL PROPIETARIO

Instrucciones de Funcionamiento y Servicio

www.hoover.com

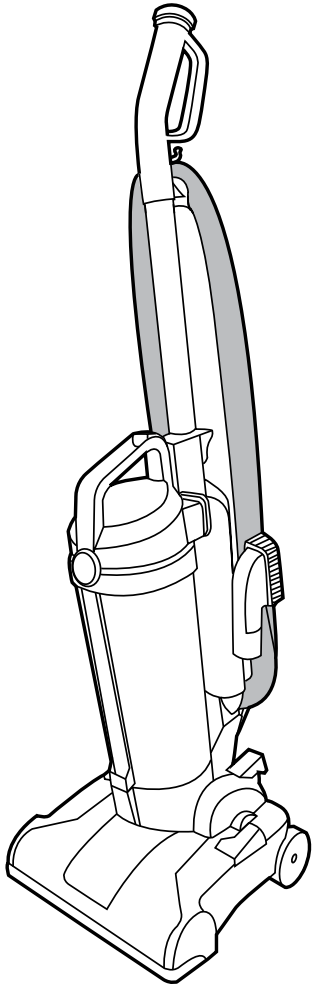

IMPORTANTE: LEA ATENTAMENTE ANTES DE ENSAMBLAR Y USAR.

¿Tiene alguna pregunta o inquietud? Para obtener asistencia, llame al Servicio de atención al cliente al 1-800 944 9200, de lunes a viernes, de 8 a.m. a 7 p.m., hora del ESTE.

POR FAVOR, NO DEVUELVA ESTE PRODUCTO A LA TIENDA.

ESTA ASPIRADORA PARA ALFOMBRAS ESTÁ DISEÑADA PARA USO DOMÉSTICO. EL USO COMERCIAL DE ESTE PRODUCTO ANULA LA GARANTÍA.

©2011 Techtronic Floor Care Technology Limited. Todos los derechos reservados. #960009657 ID101237-R1

Gracias por haber elegido un producto HOOVER®.

Anote los números completos de Código de fabricación en los espacios provistos.

MODELO _____

CÓDIGO DE FABRICACIÓN _____

Consejo: Adjunte su recibo de compra a este Manual del propietario. Para obtener el servicio de garantía de su producto HOOVER® puede requerirse la verificación de la fecha de compra.

Inscriba su producto en línea en Hoover.com, o llame al 1-800-944-9200 si prefiere hacerlo por teléfono.

CÓDIGO DE FABRICACIÓN

(Etiqueta ubicada debajo de la limpiadora)

ÍNDICE

Salvaguardias importantes..... E3
Ensamblado de la aspiradora E5
Contenido de la caja E5
Funcionamiento..... E6
Descripción de la aspiradora..... E6
Desenganche/ almacenaje del cable E6
Pedal de encendido/ apa gado E6
Pedal para soltar el mango E7
Limpieza de pisos/ alfombras..... E7
Modo suction only E7
Mango de transporte E7
Accesorios..... E8
Mantenimiento E9
Depósito para polvo E9
Filtres E10
Tubo paraguas E10
Banda y cepilo..... E11
Solución de problemas..... E12
Servicio E13
Warranty..... E14

Si necesita ayuda:

Visite nuestro sitio web en www.hoover.com. Haga clic en el enlace que permite localizar los vendedores autorizados hoover para encontrar el vendedor más cercano, o marque el 1-800-944-9200 para escuchar un mensaje indicando la dirección de los vendedores autorizados Hoover® (sólo en ee. Uu.) O para hablar con un representante de atención al cliente (de 8 am a 7 pm, hora estándar del este, de lunes a viernes).

POR FAVOR, NO DEVUELVA ESTE PRODUCTO A LA TIENDA.

¡SALVAGUARDIAS IMPORTANTES! ¡GUARDE ESTAS INSTRUCCIONES!

Al usar un aparato eléctrico, observe siempre las precauciones básicas, incluyendo las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR ESTE APARATO

ADVERTENCIA: PARA REDUCIR EL RIESGO DE INCENDIOS, CHOQUES ELÉCTRICOS O LESIONES:

- Ensamble completamente el producto antes de hacerlo funcionar.
- Haga funcionar la aspiradora sólo al voltaje especificado en la placa de etiqueta ubicada debajo de la limpiadora.
- No deje el aparato sin supervisión cuando esté enchufado. Desenchúfelo de la toma de corriente cuando no lo esté usando y antes de limpiarlo o darle mantenimiento.
- No la use en superficies húmedas. No la exponga a la lluvia. Guarde en interiores.
- No permita que esta máquina se use como un juguete. No está diseñada para que lo utilicen niños de 12 años y menos. Se debe prestar especial atención cuando este producto es usado cerca de los niños. Para evitar lesiones o daños, mantenga a los niños lejos del producto y no permita que los niños coloquen los dedos u otros objetos en ninguna abertura.
- Use el producto sólo como se describe en este manual. Use sólo los accesorios y productos recomendados por el fabricante.
- No use este aparato con un cordón o enchufe dañado. Si el aparato no está funcionando adecuadamente, se dejó caer, se dañó, se dejó a la intemperie, o se dejó caer dentro del agua, llévelo a un centro de servicio.
- No tire del cordón ni traslade el aparato jalando del cordón, ni tampoco lo use como manija; no cierre la puerta cuando el cordón está atravesado ni tire de este alrededor de bordes o esquinas filosos.
- No lo desenchufe tirando del cordón. Para desenchufarlo, sujete el enchufe, no el cordón.
- Nunca manipule el enchufe ni el aparato con las manos húmedas.
- No coloque ningún objeto en las aberturas. No use este aparato con ninguna abertura obstruida; manténgalo libre de suciedad, pelusa, cabello o cualquier objeto que pueda reducir el flujo de aire.
- Apague todos los controles antes de desenchufar el aparato.
- Tenga especial cuidado al limpiar escaleras. Para evitar lesiones personales o daños, y evitar que la aspiradora se caiga, siempre colóquela al pie de la escalera, en el suelo. No coloque la aspiradora sobre escaleras ni muebles, ya que puede ocasionar lesiones o daños.
- No use este aparato para aspirar líquidos inflamables o combustibles, como gasolina, ni lo use en áreas donde dichos líquidos puedan estar presentes.
- No aspire ningún objeto que se esté quemando o que libere humo, como cigarrillos, fósforos o cenizas calientes.
- No use sin filtro y/o depósito para polvo en su lugar
- **Advertencia:** este producto contiene sustancias químicas reconocidas por el estado de california como causantes de cáncer, defectos congénitos o daño reproductivo. ***Lávese las manos después de usar el producto.***

ADVERTENCIA:
PARA REDUCIR EL RIESGO DE DAÑOS:

- Evite aspirar objetos duros y filosos con este producto, ya que pueden causar daños.
- Guarde el aparato de forma adecuada en el interior, en un lugar seco. No exponga el aparato a temperaturas de congelamiento.
- No use objetos filosos para limpiar la manguera, ya que pueden causar daños.
- Cuando el rodillo de cepillos esté encendido, no deje que el aparato permanezca inmóvil durando mucho tiempo, ya que podría dañar el suelo.

ADVERTENCIA:

- Para disminuir el riesgo de choque eléctrico, este aparato tiene un enchufe polarizado (una patilla es más ancha que la otra). Este enchufe puede usarse en una toma de corriente polarizada, de una sola manera. Si el enchufe no encaja completamente en la toma de corriente, colóquelo al revés. Si aun así no encaja, comuníquese con un electricista calificado para que instale la toma de corriente apropiada. No haga ningún tipo de modificación al enchufe.

1. ENSAMBLAJE DE LA ASPIRADORA

CONTENIDO DE LA CAJA

1.1 Retire todas las piezas de la caja e identifique cada artículo que se muestra. Asegúrese de contar con todas las piezas antes de desechar el embalaje.

A. Mango/La Varilla
B. Accesorio para Hendiduras de polvo (CONECTADOS A LA VARILLA)
C. Cuerpo de la aspiradora
D. Depósito para polvo
E. Accesorio para polvo

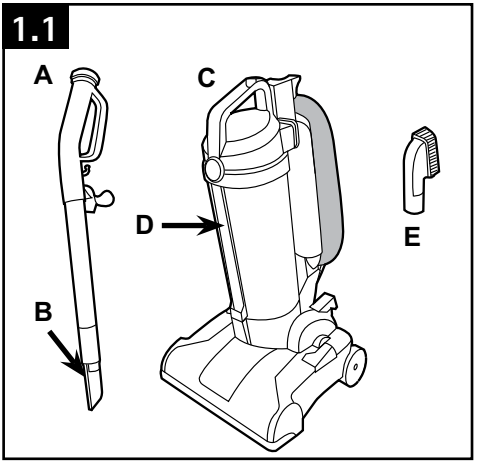

COLOCACIÓN DEL MANGO

1.2 Inserte el mango en el cuerpo de la aspiradora. Empuje hacia abajo hasta que el mango se trabe en su lugar.

1.3 Coloque la manguera sobre el sujetador para manguera (A) y dentro del tubo de la manguera (B).

1.4 Para quitar el mango, extraiga la manguera y oprima el botón de desenganche del mango (C).

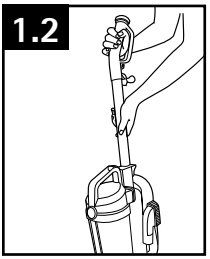

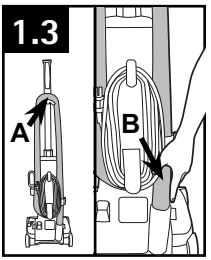

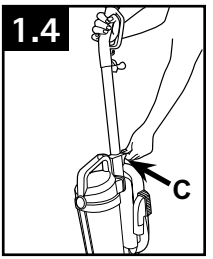

• IMPORTANTE •

La manguera debe estar conectada como se muestra para todas las operaciones.

FIJE EL DEPÓSITO DE POLVO

1.6 En primer lugar, coloque la parte inferior del contenedor para polvo dentro del cuerpo de la aspiradora. Gire el contenedor dentro de la aspiradora.

El contenedor para polvo está asegurado cuando escucha un clic.

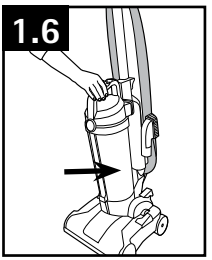

El modelo real puede no coincidir con las imágenes que se muestran

ALMACENAMIENTO DE LOS ACCESORIOS

1.6 Inserte el cepillo para desempolvar (D) dentro del área de almacenaje en el costado de la aspiradora.

1.7 El accesorio para hendiduras (E) está conectado en forma permanente al extremo del mango/varilla y se inserta dentro del cuerpo de la aspiradora para su almacenaje.

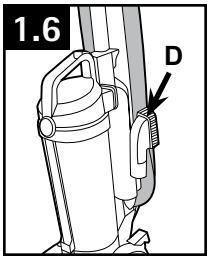

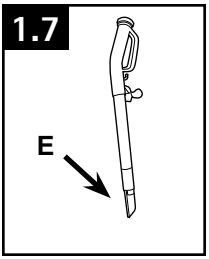

2. FUNCIONAMIENTO

DESCRIPCIÓN DE LA ASPIRADORA

1. Empuñadura del asa
2. Manguera
3. Cepillo para Polvo
4. Botón de liberación de la cubeta colectora
5. Umbrella Tube (dentro del depósito de polvo)
6. Depósito para polvo
7. Filtros
8. Boquilla
9. Tope
10. Indicadores de rendimiento
11. Accesorio para Hendiduras de polvo (Conectado al mango y guardado dentro de la aspiradora)
12. Sujetador para manguera
13. Enganche del cable de liberación rápida
14. Cable de alimentación
15. Ruedas
16. Pedal encendido/apagado
17. Suction Control Pedal

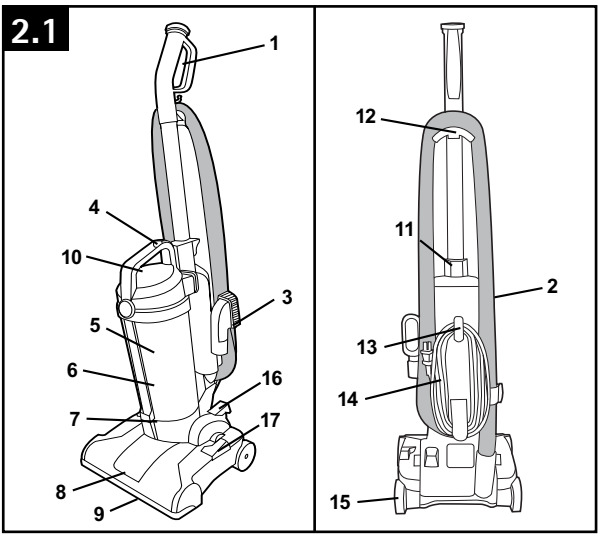

*Los accesorios no incluidos con su modelo pueden comprarse por separado, visitando www.hoover.com.

DESENGANCHE/ ALMACENAJE DEL CABLE

2.2 Gire el gancho de liberación rápida del cordón eléctrico para retirarlo más fácilmente. Guarde el cordón en la guía para mantenerlo fuera del paso mientras aspira.

Para un guardado cómodo, enrolle el cable alrededor de los ganchos para cable. Conecte el extremo del enchufe al cable.

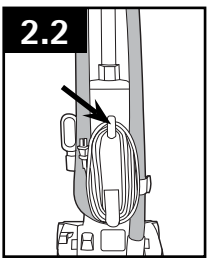

PEDAL DE ENCENDIDO/ APAGADO

2.3 Conecte el cordón eléctrico en la toma de corriente. Encienda la aspiradora pisando el pedal localizado en la parte posterior izquierda de la aspiradora.

Para apagar el aparato, presione de nuevo sobre el pedal.

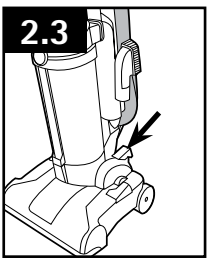

PEDAL PARA SOLTAR EL MANGO

2.4 Pise el pedal para bajar el asa a la posición de funcionamiento. El asa no queda trabada en una posición sola, sino que oscila para permitir un funcionamiento adecuado.

LIMPIEZA DE PISOS/ ALFOMBRAS

2.5 Mueva el asa y ajústela en la posición deseada para operar la aspiradora y bajar el asa para limpiar debajo de los muebles.

2.5

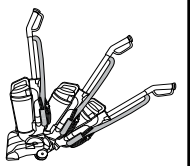

2.7 Es posible mover la aspiradora utilizando el mango de transporte.

El modelo real puede no coincidir con las imágenes que se muestran

4. DÉPANNAGE

Si un problème mineur survient, il est habituellement possible de le résoudre facilement si la cause est déterminée à l'aide de la liste ci dessous.

Toute autre tâche d'entretien doit être confiée à un représentant de service autorisé.

⚠ AVERTISSEMENT ⚠

Pour réduire les risques de blessures causées par des pièces en mouvement, débrancher l'appareil avant d'en effectuer l'entretien.

PROBLÈME	CAUSE POSSIBLE	SOLUTION POSSIBLE
L'appareil ne fonctionne pas	La fiche du cordon d'alimentation n'est pas bien insérée dans la prise de courant.	Branchez fermement le cordon d'alimentation.
	Un fusible est grillé ou le disjoncteurest déclenché.	Vérifiez le fusible ou le disjoncteur. Remplacez le fusible ou réenclenchez le disjoncteur.
	L'appareil doit être entretenu.	Rapportez l'appareil au centre de réparation. Pour trouver l'adresse du centre le plus proche, visitez notre site Web, www.hoover.com ou appelez le 1-800-944-9200.
	Protecteur thermique activé.	Débranchez l'aspirateur - Laissez l'aspirateur refroidir.
L'indicateur de performance est rouge ou le décapant n'aspirera pas ou faible aspiration	Le vide-poussière n'est pas installé correctement.	Consultez la section sur le retrait et le remplacement du vide-poussière.
	Le vide-poussière plein.	Vider le vide-poussière.
	Le rouleau-brosse est usé.	Remplacez le rouleau brosse.
	La courroie est cassée ou usée.	Remplacez la courroie.
	Le filtre est obstrué.	Retirez le filtre et nettoyez-le.
	Le suceur/rouleau-brosse est obstrué.	Vérifiez le suceur/rouleau-brosse -Dégagez toute obstruction.
	Le tuyau est obstrué.	Enlevez le tuyau et dégagez l'obstruction.
De la poussière s'échappe de l'aspirateur	Le vide-poussière plein.	Vider le vide-poussière.
	Le vide-poussière n'est pas installé correctement.	Consultez la section sur le retrait et le remplacement du vide-poussière.
	Le tuyau n'est pas installé correctement.	Consultez à nouveau la section sur l'installation du tuyau.
	Le filtre n'est pas installé complètement.	Consultez la section sur le retrait et le remplacement du filtre.

5. SERVICE

Pour obtenir du service autorisé Hoover[MD] et des pièces Hoover[MD] d'origine, trouver l'atelier de service garanti autorisé (dépôt) le plus près de chez vous. Pour ce faire :

- Consulter les Pages jaunes à la rubrique « Aspirateurs domestiques ». OU
- Visiter notre site Web www.hoover.com (aux États-Unis) ou www.hoover.ca (au Canada). Cliquer sur le lien « Service à la clientèle » pour connaître l'adresse du Centre de service le plus près de chez vous.
- Composer le 1-800-944-9200 pour écouter un message indiquant les adresses des Centres de service autorisés. Prière de ne pas envoyer votre aspirateur à Hoover[MD], Inc. à Glenwillow, en Ohio, pour qu'il soit réparé. Cela n'entraînera que des délais supplémentaires.

Si vous avez besoin d'autres renseignements :
Pour parler avec un représentant du service à la clientèle, composer le 1-800-944-9200 du lun. au ven. de 8 h à 17 h (HNE). Au Canada, communiquer avec Hoover[MD] Canada, à Toronto : 755, Progress Ave, Scarborough (ON) M1H 2W7; OU à Edmonton : 18129-111 Ave, Edmonton (AB) T5W 2P2. Téléphone : 1-800-944-9200, du lun. au ven. de 8 h à 17 h (HNE). Toujours identifier l'aspirateur par le numéro du modèle et le code de fabrication lorsque vous demandez des informations ou que vous commandez des pièces de rechange. (Le numéro de modèle figure au bas de l'appareil.)

VEUILLEZ NE PAS RETOURNER CE PRODUIT AU MAGASIN.

6. GARANTIE

GARANTIE LIMITÉE DE UN AN

(Usage domestique)

ÉLÉMENTS COUVERTS PAR LA PRÉSENTE GARANTIE

Votre produit HOOVER[MD] est garanti pour des conditions normales d'utilisation et d'entretien domestiques, comme il est stipulé dans le Guide de l'utilisateur, contre les défauts de matériaux et de fabrication pour une période complète de un an à compter de la date d'achat (la « Période de garantie »). Pendant la Période de garantie, Hoover[MD] fournira, sans frais supplémentaires, les pièces et la main-d'œuvre nécessaires à la remise en bon état de fonctionnement de tout produit acheté aux États-Unis, au Canada ou par l'intermédiaire du Programme d'échanges militaires américain.

COMMENT PRÉSENTER UNE RÉCLAMATION AU TITRE DE LA GARANTIE

Si ce produit ne fonctionne pas comme annoncé, l'apporter à un atelier de service garanti autorisé Hoover, accompagné de la preuve d'achat. Pour accéder à un service d'aide automatique donnant la liste des centres de service autorisés, composer le 1 800 944-9200 OU visiter Hoover[MD] sur Internet à hoover.com (clients aux États-Unis) ou à hoover.ca (clients au Canada). Pour de plus amples renseignements ou pour toute question sur la présente garantie ou sur l'emplacement des différents centres de service garanti, téléphoner au 1 800 263-6376, du lun. au ven. de 8 h à 19 h (HNE). Au Canada, communiquer avec Hoover Canada à Toronto : 755 Progress Ave Scarborough, ON M1H 2W7 OU avec Hoover Canada à Edmonton : 18129-111 Ave Edmonton, AB T5W 2P2; téléphone : 1 800 263-6376, du lun. au ven. de 8 h à 19 h (HNE).

ÉLÉMENTS NON COUVERTS PAR LA PRÉSENTE GARANTIE

La présente garantie ne couvre pas : toute utilisation commerciale du produit (p. ex., utilisation dans le cadre de services ménagers, de conciergerie ou de location de matériel), l'entretien inadéquat du produit; les dommages liés à une utilisation inadéquate, à des cas fortuits ou catastrophes naturelles, au vandalisme, à tout autre acte hors du contrôle de Hoover[MD] ou à tout acte ou négligence de la part du propriétaire du produit; toute utilisation dans un pays autre que celui où le produit a été acheté initialement, et tout produit revendu par son propriétaire original. La présente garantie ne couvre pas le ramassage, la livraison, le transport ou la réparation à domicile du produit. Cette garantie ne s'applique pas aux produits achetés : hors des États-Unis (ce qui comprend ses territoires et possessions); hors du Programme d'échanges militaires américain; hors du Canada. Cette garantie ne couvre pas les produits achetés chez un tiers autre qu'un détaillant, marchand ou distributeur autorisé de produits Hoover[MD].

AUTRES CONDITIONS IMPORTANTES

La présente garantie n'est pas transférable et ne peut pas être cédée. La présente garantie sera régie et interprétée selon les lois de l'État de l'Ohio. La Période de garantie ne peut pas être prolongée par quelque réparation ou remplacement que ce soit exécuté en vertu de la présente garantie.

LA PRÉSENTE GARANTIE EST L'UNIQUE GARANTIE ET RECOURS FOURNIS PAR HOOVER[MD]. HOOVER[MD] DÉCLINE TOUTE RESPONSABILITÉ QUANT À TOUTES LES AUTRES GARANTIES EXPRESSES OU TACITES, Y COMPRIS LES GARANTIES LIÉES À LA QUALITÉ MARCHANDE OU À LA COMPATIBILITÉ DU PRODUIT POUR UN USAGE PARTICULIER. HOOVERMD NE POURRA EN AUCUN CAS ÊTRE TENUE RESPONSABLE DE TOUS DOMMAGES-INTÉRÊTS SPÉCIAUX OU DOMMAGES INDIRECTS, ACCESSOIRES OU CONSÉCUTIFS DE QUELQUE NATURE QUE CE SOIT SUBIS PAR LE PROPRIÉTAIRE DU PRODUIT OU PAR TOUTE PARTIE RÉCLAMANT PAR L'INTERMÉDIAIRE DU PROPRIÉTAIRE, QU'ILS RELÈVENT DU DROIT DES CONTRATS, DE LA NÉGLIGENCE, DE LA RESPONSABILITÉ CIVILE DÉLICTUELLE OU DE LA RESPONSABILITÉ STRICTE DU FAIT DES PRODUITS, OU QU'ILS DÉCOULENT DE QUELQUE CAUSE QUE CE SOIT. Certains États ne permettent pas l'exclusion des dommages consécutifs; par conséquent, l'exclusion précédente pourrait ne pas être applicable dans votre cas. La présente garantie vous donne des droits spécifiques; vous pouvez également avoir d'autres droits, qui varient d'un État à l'autre.