www.hoover.com

©2010 Techtronic Floor Care Technology Limited. All rights reserved. #59881161 ID100382-R2

REMANUFACTURED

CYCLONIC BAGLESS UPRIGHT

OWNER'S MANUAL

OPERATING AND SERVICING INSTRUCTIONS

IMPORTANT: READ CAREFULLY BEFORE ASSEMBLY AND USE.

Questions or concerns? For assistance, please call Customer Service at 1-800-944-9200 Mon-Fri 8am-7pm EST before returning this product to the store.

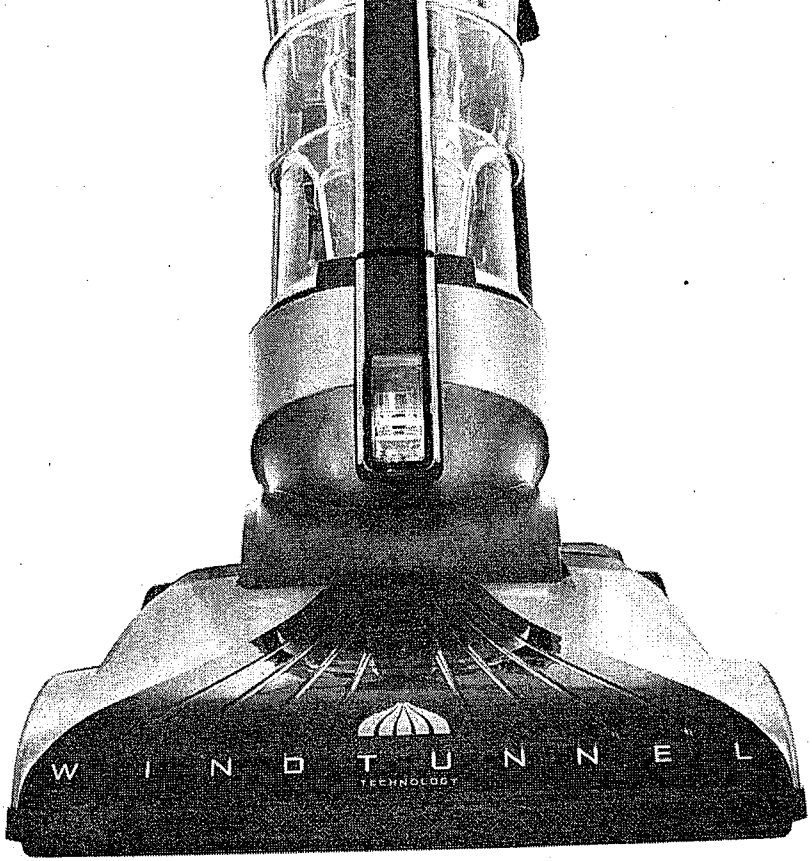

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. IF USED COMMERCIALLY WARRANTY IS VOID.

TABLE OF CONTENTS

Safety Instructions 3
1. FEATURES 5
2. CARTON CONTENTS 6
3. VACUUM CONTROLS 7
4. HOW TO ASSEMBLE 8
- Attach Handle 8
- Tool Storage 8

5. HOW TO OPERATE 9
- Carry Handle 9
- Handle Release Pedal 9
- Handle Positions 9
- Select Proper Tools 10
- Attach Tools 10
- Stair Cleaning 11
- Embedded DirtFINDER™ 11

6. GENERAL MAINTENANCE 12
- Dirt Cup 12
- Cleaning Filters 13
  - Primary Filter 13
  - Umbrella Filter 14
  - HEPA Filter 15
- Brushroll 16

7. TROUBLESHOOTING GUIDE 17
8. SERVICE 18

OWNER'S INSTRUCTIONS
English *pp. 1-18*
Español *pág. E1-E12*

Be sure to register your product online at Hoover.com or call 1-800-944-9200 to register by phone.

WARNING: Product assembly may include small parts. Small parts can present a choking hazard.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Fully assemble before operating.
- Operate vacuum only at voltage specified on data label on the underside of cleaner foot.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Not intended for use by children age 12 and under. Close supervision is necessary when used near children. To avoid injury or damage, keep children away from product, and do not allow children to place fingers or other objects into any openings.
- Use only as described in this manual. Use only manufacturer's recommended attachments and products.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center prior to continuing use.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not place product on cord. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or fine wood sandings, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dirt cup and/or filters in place.
- **WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm. *WASH HANDS AFTER HANDLING.*

CAUTION - TO REDUCE THE RISK OF DAMAGE:

- Avoid picking up hard, sharp objects with this product, as they may cause damage.
- Store in a dry place. Do not expose machine to freezing temperatures.
- Do not use sharp objects to clean out hose as they can cause damage.

WARNING:

- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrican to install the proper outlet. Do not change the plug in any way.

1. FEATURES

1 Handle Grip
2 Power Button
3 Floor Selector Button
4 Floor Selector Indicator Light
5 Dirt Cup Release Button
6 Stretch Hose
7 Wand Handle
8 Primary Filter Access Button
(Filter located above dirt cup)
9 Carrying Handle
10 Dusting/Upholstery Tool
11 Dirt Cup
12 Crevice Tool
13 Handle Release Pedal
14 Headlight
15 Embedded DirtFINDER™
(Available on select models only)
16 Furniture Guard
17 Access to filter made with HEPA media
(Filter located under dirt cup)

1.1

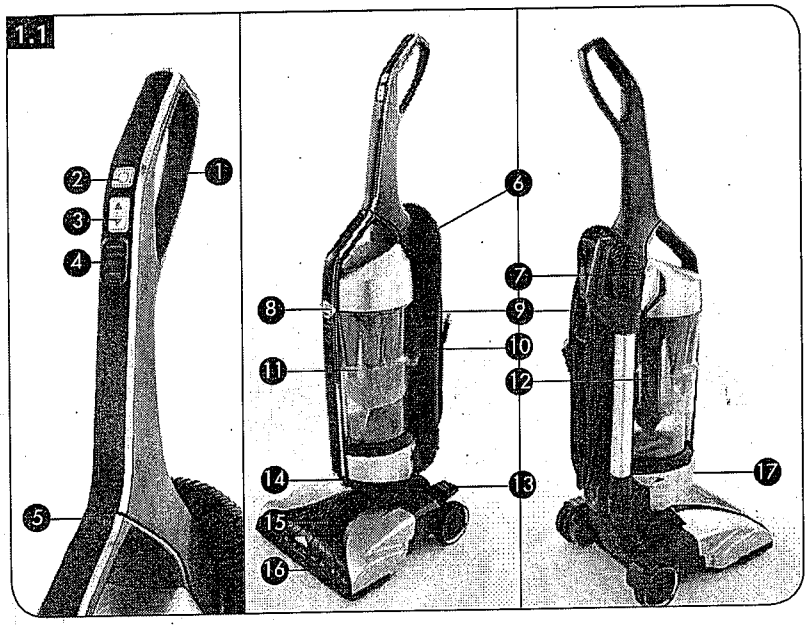

2. CARTON CONTENTS

Remove all parts from carton and identify each item shown. Make sure all parts are located before disposing of packing.

A Upper Handle
B Cleaner Body
C Bagged Screws (2)
D Dusting/Upholstery Tool
E Crevice Tool

2.1

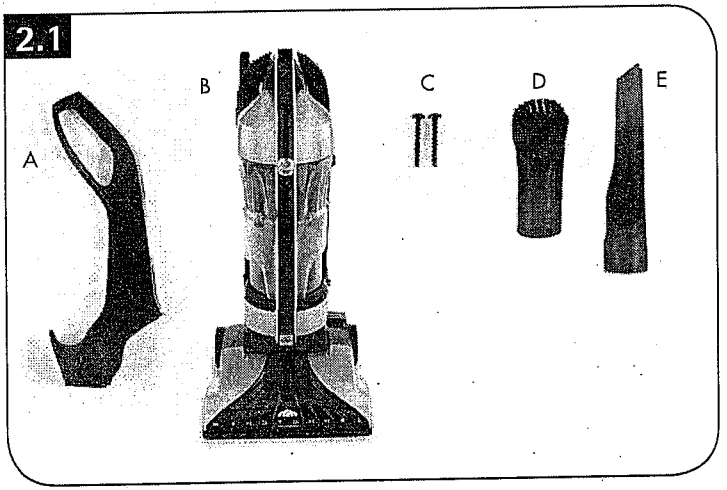

3. VACUUM CONTROLS

1 Power Button

Push to turn cleaner on and off.

2 Floor Selector

Push the floor selector button to raise and lower the nozzle to clean bare floors and various carpet pile heights.

For maximum cleaning performance, the following carpet height settings are recommended:

- Low setting: for all types of carpet.
- Higher settings: for very deep pile carpet where easier pushing effort is desired, while maintaining good cleaning performance.

Note: If the cleaner is difficult to push, change floor selector push button to the next highest setting.

3 Floor Selector Indicator Light

Indicates the carpet height selected by the Floor Selector Button.

3.1

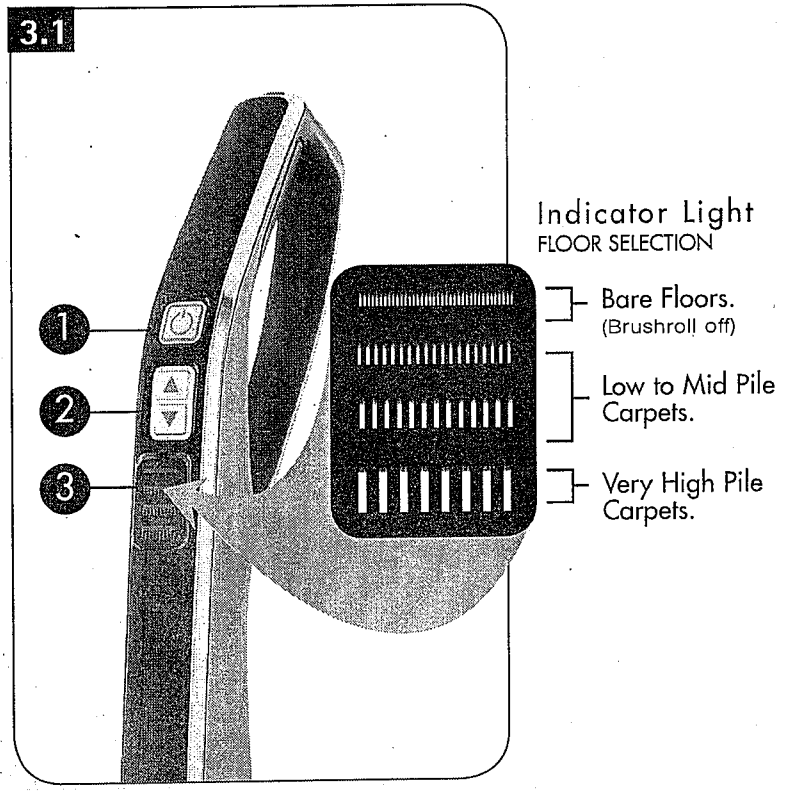

4 HOW TO ASSEMBLE

Attach Handle

4.1 Slide upper handle down into cleaner body.

4.2 Insert the (2) screws provided into the handle where indicated in the figure.

4.3 Tighten with screwdriver.

Tool Storage

4.4 A. Dusting/Upholstery Tool storage.
B. Crevice Tool storage.

Cord Storage

4.5 Wrap the cord in a clockwise direction around the two cord hooks (C). Attach the plug end to the cord (D).

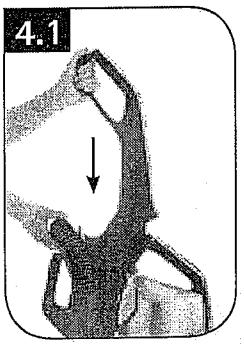

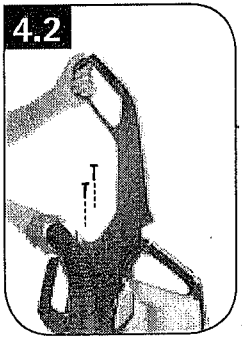

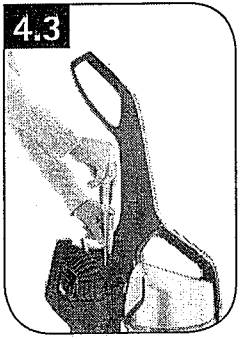

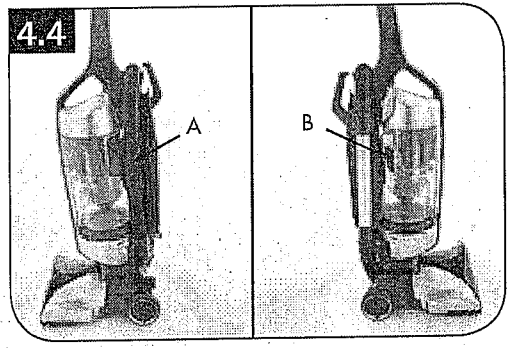

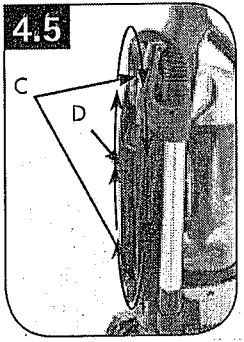

Carry Handle

The cleaner can be moved by using the carry handle.

Handle Release Pedal

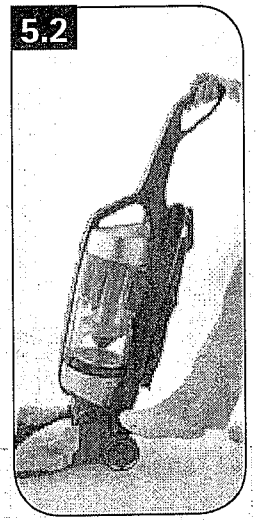

Step on handle release pedal to lower handle.

Handle Positions

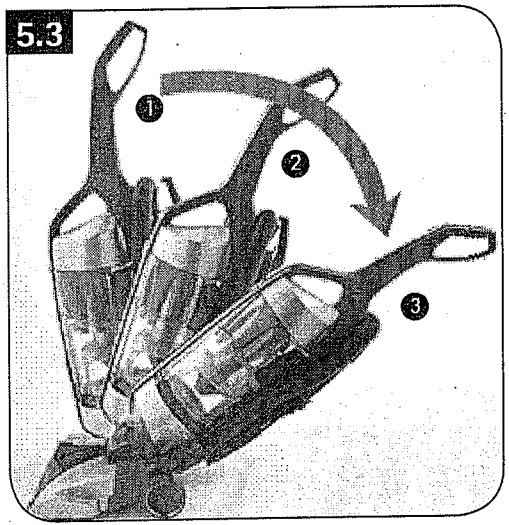

The handle of your cleaner has three positions;

1. Storage
2. Floor Transitions
3. Low Reach

Step on handle release pedal to lower handle to each position.

5. HOW TO OPERATE

Select Proper Tools

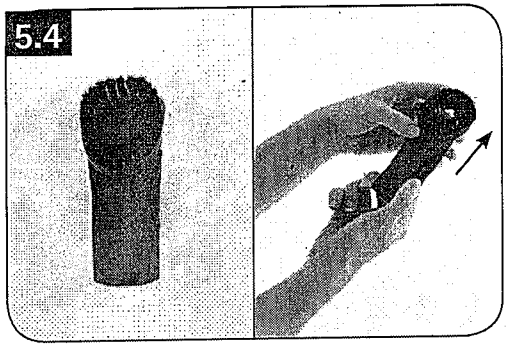

Dusting/Upholstery Tool may be used on table tops, books, lighting fixtures, and blinds.

Remove brush to clean upholstered furniture, draperies, mattresses, and carpeted stairs.

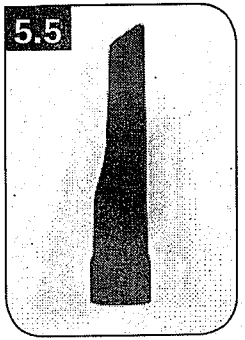

Crevice Tool may be used in tight spaces, corners and along edges.

Attach Tools

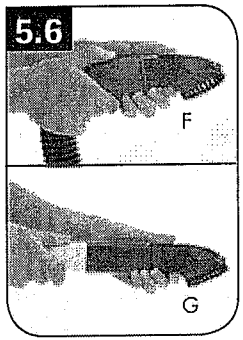

Disconnect cleaner from electrical outlet.

Attach tool to the hose (F) or to wand (G) by pushing it firmly into the hose or wand end.

Stair Cleaning

Use the wand and the Dusting/Upholstery Tool for stair cleaning. Clean from bottom to top.

CAUTION: Use extra care when cleaning on stairs. To avoid personal injury or damage, and to prevent the cleaner from falling, always place cleaner at bottom of stairs or on floor. Do not place cleaner on stairs or furniture, as it may result in injury or damage.

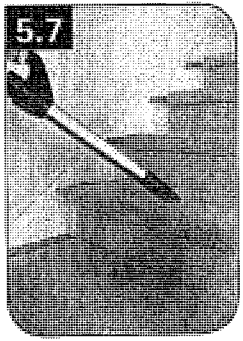

Embedded DirtFINDER™

(Available on select models only)

With red and green lights, the Embedded DirtFINDER™ system alerts the user to areas of carpet that may need more cleaning attention. It is able to sense when embedded dirt is being removed. The clean light (green) will remain on throughout cleaning except when the detector senses that a larger amount of dirt is being picked up; then the dirty light (red) will come on. When the dirty light is on, you should take additional cleaning strokes in the area until it changes to clean (green).

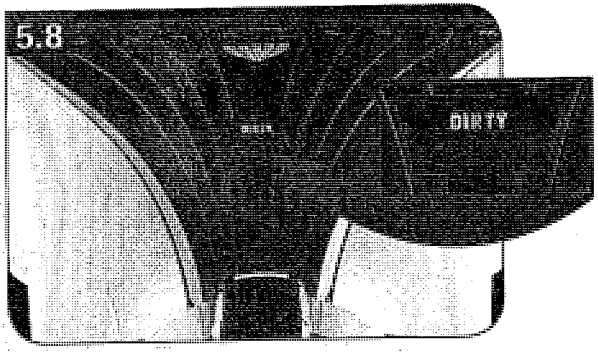

6. GENERAL MAINTENANCE

Familiarize yourself with these home maintenance tasks as proper use and care of your cleaner will ensure continued cleaning effectiveness.

Any other servicing should be done by an authorized service representative.

⚠ NOTICE ⚠

An internal thermal protector has been designed into your cleaner to protect it from overheating. When the thermal protector activates, the cleaner will stop running. If this happens, proceed as follows:

1. Turn the cleaner OFF and disconnect it from the electrical outlet.
2. Empty dirt cup.
3. Inspect the hose, nozzle and dirt cup openings, primary filter, filter made with HEPA media and umbrella tube for any obstructions. Clear obstructions if present.
4. When cleaner is unplugged and the motor cools for 30 minutes, the thermal protector automatically resets and cleaning may continue.

If the thermal protector continues to activate after following the above steps, your cleaner needs servicing (see "Service" section).

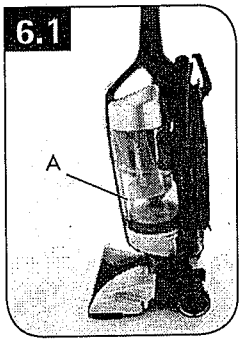

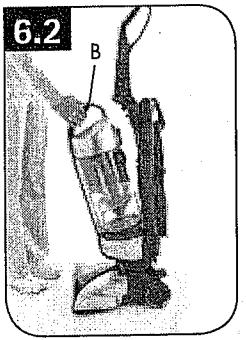

DIRT CUP

When to Empty

6.1 Empty the dirt cup before the dirt reaches the fill line (A). Place the cleaner in the upright position before removing the dirt cup.

How to Empty

CAUTION - To reduce the risk of personal injury - Unplug before cleaning or servicing. Do not use cleaner without dirt cup or filters in place.

6.2 Press dirt cup release button (B) and pivot cup out away from vacuum.

6.3 Holding dirt cup over trash receptacle, press dirt cup door release button (C) to open dirt cup door (D) and empty dirt cup. Close door.

6.4 Place bottom of dirt cup into cleaner body first. Pivot cup into cleaner body until dirt cup locks into place.

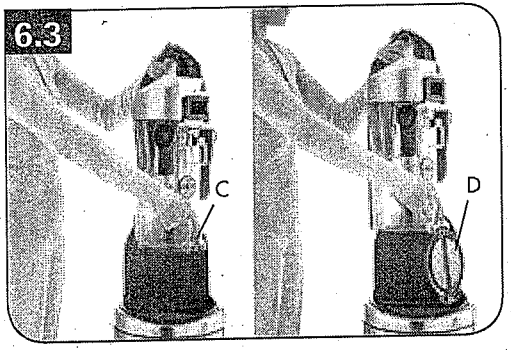

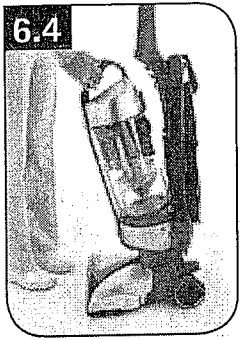

CAUTION: Very fine materials, such as face powder or cornstarch, may clog the filter and cause a reduction in performance. When using the cleaner for this type of dust, empty the cup and clean the filters often.

ESPAÑOL

Cómo vaciarlo

PRECAUCIÓN: Para reducir el riesgo de lesiones personales, desenchufe la aspiradora antes de realizar el servicio. No use la aspiradora sin el depósito para polvo ni los filtros colocados en su lugar.

6.2

Presione el botón de liberación del contene dor para polvo (B) y gire el depósito hacia afuera.

6.3

Sujetando el contenedor para polvo sobre el recipiente de basura, presione el botón de liberación de la puerta del contenedor para polvo (C) para abrir la puerta del contenedor para polvo (D). Cierre la puerta.

6.4

Primero, coloque la parte inferior del contene dor para polvo dentro del cuerpo de la aspi radora. Gire el depósito en el cuerpo de la aspiradora hasta que el contenedor para polvo quede fijo en su lugar.

PRECAUCIÓN: Los materiales muy finos, como talco facial o maicena, pueden obstruir el filtro y reducir el rendimiento. Cuando use la aspiradora para este tipo de suciedad, vacíe el depósito y limpie los filtros con frecuencia.

LIMPIEZA DE FILTROS

Filtro primario

Cuándo limpiarlo

6.5 **6.6**

El recordatorio para limpiar el filtro se encuentra en la parte posterior del contenedor para polvo. Gire el anillo exterior en sentido antihorario para indicar el mes actual en la ventana del filtro limpiado. La ventana del filtro limpiado indicará, entonces, cuándo será su próxima limpieza.

Cómo limpiarlo

PRECAUCIÓN: Para reducir el riesgo de lesiones personales, desenchufe la aspiradora antes de realizar el servicio. No use la aspiradora sin el depósito para polvo ni los filtros colocados en su lugar.

Retire el contenedor para polvo, como se describe en la Fig. 6.2.

6.8

Tire de la traba del contenedor para polvo a fin de abrir la tapa.

6.7

Tire de la lengüeta que se encuentra en la parte inferior del filtro y retírela del contenedor para polvo. Si la lengüeta del filtro no está presente o no se encuentra accesible, retire el filtro con la mano.

6.9

Mantenga el filtro debajo del agua coriente para retirar la suciedad y los residuos. Oprima el filtro para retirar el exceso de agua. NOTA: Deje que el filtro se seque completamente antes de volver a colocarlo. Puede demorar hasta 24 horas.

Vuelva a colocar el filtro, con el lado de la lengüeta hacia afuera. Vuelva a colocar el contenedor para polvo, como se describe en la Fig. 6.4

Qué comprar

Si compra un nuevo cartucho de Filtro primario, solicite la pieza n°43615096 de HOOVER.

Tubo sombrilla

Cuándo limpiarlo

Verifique mensualmente el filtro del tubo y límpielo cuando esté cubierto de residuos.

Cómo limpiarlo

Desconecte la aspiradora de la toma de corriente eléctrica. No use la aspiradora sin el contenedor para polvo ni los filtros colocados en su lugar.

Retire el contenedor para polvo, como se describe en la Fig. 6.2.

6.10

Presione el botón de liberación de la puerta del contenedor para polvo (C) para abrirla.

6.11

Gire el filtro sombrilla hacia la izquierda y retíre lo de la parte inferior del contenedor para polvo.

6.12

Sujete el filtro sobre el recipiente de basura y golpéelo suavemente para retirar la suciedad y los residuos.

Vuelva a colocar el filtro sombrilla en la parte inferior del contenedor para polvo y gírelo hacia la derecha.

Filtro HEPA

Cómo limpiarlo

El filtro fabricado con material HEPA está pensado para ser un filtro de por vida. Inspeccione el filtro cada 2 meses al mismo tiempo que se limpia el filtro principal.

Cómo vaciarlo

PRECAUCIÓN: Para reducir el riesgo de lesiones personales, desenchufe la aspiradora antes de realizar el servicio. No use la aspiradora sin el depósito para polvo ni los filtros colocados en su lugar.

Vuelva a colocar el contenedor para polvo, como se describe en la Fig. 5.2

6.13

Gire la perilla de la parte superior de la tapa para desengancharla.

6.14

Retire la tapa.

6.15

Retire el filtro fabricado con material HEPA.

Sujete el filtro sobre el recipiente de basura y golpéelo suavemente para retirar la suciedad y los residuos. NO ENJUAGUE NI LAVE el filtro fabricado con cartucho de material HEPA.

Vuelva a colocar el filtro y la tapa. Gire la perilla de la parte superior de la tapa para que encaje firmemente.

Vuelva a colocar el contenedor para polvo, como se describe en la Fig. 5.4

Qué comprar

Si compra un nuevo cartucho de filtro HEPA, solicite la pieza nº **38765035** de HOOVER.

DE CEPILLOS

Cuándo reemplazarlo

6.16

ADVERTENCIA - Riesgo de lesiones personales - Es posible que el rodillo de cepillos se vuelva a encender en forma repentina - Desenchufe el aparato antes de limpiarlo o realizarle el mantenimiento.

Cuando los cepillos del rodillo de cepillos están desgastados, debe reemplazarse el rodillo de cepillos.

Para verificar el estado de los cepillos, pase el extremo de una tarjeta por la placa inferior mientras gira el rodillo de cepillos (Fig. 6.16). Para mantener una limpieza eficaz, reemplace el rodillo de cepillos si los cepillos no tocan la tarjeta.

Cómo retirar el rodillo de cepillos

Encienda la limpiadora y seleccione el modo para piso sin alfombra (Bare Floor).

Una vez cambiado el modo, apague la limpiadora.

PRECAUCIÓN: Para reducir el riesgo de lesiones provocadas por las partes móviles: Desenchufe antes de efectuar un servicio. No se debe utilizar para acicalar mascotas.

6.17

Voltee la aspiradora y retire los 5 tornillos que se indican con las flechas.

6.18

Retire la placa inferior.

6.19

Retire el rodillo de cepillos.

Cómo volver a colocar el rodillo de cepillos

6.20

Alinee el rodillo de cepillos nuevo y la correa.

6.21

Vuelva a colocar el rodillo de cepillos.

6.22

Vuelva a colocar la placa inferior y los tornillos.

Qué comprar

Para asegurar una limpieza eficaz, utilice únicamente cepillo de rodillos de Hoover, núm. de pieza 48414156.

Es importante que utilice únicamente piezas de Hoover® genuinas para asegurar que su aspiradora funcione al máximo de su rendimiento. Para hacer sus pedidos de bolsas, visite www.hoover.com. Los productos de HOOVER® pueden identificarse por la marca comercial.

7. GUÍA DE SOLUCIÓN DE PROBLEMAS

SI SE PRODUCE UN PROBLEMA MENOR, POR LO GENERAL, PUEDE RESOLVERSE CON BASTANTE FACILIDAD CUANDO SE IDENTIFICA LA CAUSA A PARTIR DE LA LISTA DE VERIFICACIÓN QUE APARECE A CONTINUACIÓN.

PROBLEMA	POSIBLES CAUSAS	SOLUCIONES POSIBLES
La aspiradora no funciona	No está bien enchufada.	Enchúfela bien.
	No hay voltaje en la toma de corriente.	Reemplace el fusible o reajuste el circuito.
El rodillo de cepillos del agitador no está girando.	El rodillo de cepillos está apagado.	Seleccione una configuración adecuada del modo moqueta.
	El rodillo de cepillos del agitador está obstruido.	Desconecte la aspiradora de la toma de corriente eléctrica. Voltee la aspiradora y retire todos los residuos que se han acumulado en el rodillo de cepillos del agitador.
La aspiradora no aspira.	Contenedor para polvo lleno.	Vacíe el contenedor para polvo.
	Filtro primario sucio.	Limpie la rejilla del prefiltro con el cepillo para polvo.
	Posición incorrecta de la altura para moquetas.	Seleccione otra posición de la altura para moquetas.
	Obstrucción en el sistema.	Elimine la obstrucción (vea la sección "Eliminación de obstrucciones").
Es difícil empujar la aspiradora.	Posición incorrecta de la altura para moquetas.	Seleccione una altura para moquetas más alta.
Los accesorios de limpieza no aspiran.	Contenedor para polvo lleno.	Vacíe el contenedor para polvo.
	Filtro primario sucio.	Limpie la rejilla del prefiltro con el cepillo para polvo.
	Obstrucción en el sistema.	Elimine la obstrucción (vea la sección "Eliminación de obstrucciones").
El rodillo de cepillos del agitador del accesorio de limpieza potente para pelos de mascotas no gira.	Se está aplicando demasiada presión al accesorio.	Continúe usando el accesorio aplicando una presión leve.
	Correa rota o desgastada.	Reemplace la correa.
	Baja succión de la aspiradora.	Consulte el punto correspondiente en la sección "La aspiradora no aspira".
Botón de encendido parpadeando.	Obstrucción en el sistema.	Apague la aspiradora y desconéctela de la toma de corriente eléctrica. Voltee la aspiradora y elimine la obstrucción del rodillo de escobillas.
	Protector térmico activado.	Apague la aspiradora y desconéctela de la toma de corriente eléctrica. Luego, deje que se enfríe durante 30 minutos. Limpie los filtros (vea las páginas 13 y 15), y averigüe si hay obstrucciones en la manguera. Si el problema persiste, vea la solución de mantenimiento que sigue.
	Necesita mantenimiento.	Lleve la aspiradora a un centro de servicio. Para encontrar el centro más cercano, visite nuestro sitio Web en www.hoover.com o llame al 1-877-697-5866. De lunes a viernes de 8 a.m. a 5 p.m., hora del Este.

ESPAÑOL

8. SERVICIO

Mantenimiento

Para obtener el servicio aprobado HOOVER® y piezas genuinas HOOVER®, localice el Centro de ventas y servicio de Hoover o el Concesionario autorizado de servicio de garantía de Hoover (depósito) más cercano:

- Consultando la sección "Service" (Servicio) de Hoover® en línea en www.hoover.com O
- Consultando las páginas amarillas de la guía de teléfonos, bajo "Vacuum Cleaners-Household" ("Aspiradoras - Artículos del hogar") O
- Llamando al 1.800.944.9200 para obtener una referencia automatizada de las ubicaciones de los centros de servicio autorizados (solamente en EE.UU.)

No envíe su limpiadora a Hoover® en Glenwillow, Ohio para obtener servicio; esto sólo resultará en demoras.

Si necesita asistencia adicional, comuníquese con Hoover® Consumer Response Center, llame la línea exclusiva de servicios a los miembros de la gama Platinum Collection® de Hoover® 1.877.MYPLTNM (1.877.697.5866), de lunes a viernes, de 8 a.m. a 5 p.m., hora del Este.

Para que le atiendan en francés o en español, par favor llame al 1-800-944-9200 lunes a viernes, 8am-7pm, hora del Este.

Al solicitar información u ordenar piezas, identifique siempre su limpiadora por el número completo de modelo.